

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS**

FOR

RADIO SETS

AN/GRC-87(12V) (NSN 5820-00-889-4277)

AN/GRC-87(24V) (NSN 5820-00-543-1997)

AND

AN/VRC-34 (NSN 5820-00-543-1996)

TECHNICAL MANUAL

No. 11-5820-453-20P



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 28 November 1977

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
FOR
RADIO SETS
AN/GRC-87(12V) (NSN 5820-00-889-4277)
AN/GRC-87(24V) (NSN 5820 00-543-1997)
AND
AN /VRC-34 (NSN 5820-00-543 1996)
*Current as of 1 June 1977***

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

*This manual supersedes TM-5820-453-20P, 29 May 1969.

Table of Contents

			Page	Illus Figure
SECTION	I.	Introduction	1	
		Repair parts list	5	
GROUP	00	Radio Set AN/GRC-87, AN/VRC-34	5	1
	01	Antenna Assemblies AT-101/GRC-9, AT-102/GRC-9 (used on AN/GRC-87 only) (No parts authorized)		
	02	Dynamotor-Power Supplies DY-88/GRC-9, DY-105/GRC-9X, DY-105A/GRC-9X, DY-105B/GRC-9X	7	2,3
	03	Direct Current Generator G-43/G. (used on AN/GRC-87 only) (See TM 11-6115-218-20P for parts)		
	04	Receiver-Transmitter RT-77/GRC-9, RT-77A/GRC-9	15	4,5
	05	Headset H-16/U (See TM 11-5965-267-15P for parts)		
	06	Loudspeaker LS-203/U and LS-7A (See TM 11-5965-213-14P for parts)		
	07	Microphone M-52/U (No parts authorized)		
	08	Mount MT-350/GRC-9 (No parts authorized)		
	09	Cable Assembly CX-2031/U (No parts authorized)		
	10	Meter, Field Strength ME-61/GRC (See TM 11 -6625-682-15 for parts)		
SECTION	III.	Special tools list (Not applicable)		
	IV.	National stock number and part number index	20	

SECTION I
INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/GRC-87 and AN/VRC-34. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
C	Crew or operator maintenance performed within organizational maintenance.