
TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
RADIO SETS

AN/GRC-50(V)1 (NSN 5820-00-892-3851)
AN/GRC-50(V)2 (NSN 5820-00-892-3852)
AN/GRC-50(V)3 (NSN 5820-00-892-3853)
AN/GRC-50tV)4 (NSN 5820-00-892-3854)
AN/GRC-50(V)5 (NSN 5820-00-892-3855)
AN/GRC-50A(V)1 (NSN 5820-00-933-6193)
AN/GRC-50A(V)2 (NSN 5820-00-933-6192)
AN/GRC-50A(V)3 (NSN 5820-00-933-6191)
AN/GRC-50A(V)4 (NSN 5820-00-933-6190)
AN/GRC-50A(V)5 (NSN 5820-00-933-6189)
AN/GRC-50A(V)6 (NSN 5820-00-936-5480)
AN/GRC-50A(V)7 (NSN 5820-00-936-5481)
AN/GRC-50A(V)8 (NSN 5820-00-935-0089)
AN/GRC-50A(V)9 (NSN 5820-00-878-8635)
AN/GRC-50A(V)10 (NSN 5820-00-878-8634)
AND
AN/GRC-50(V)11 (NSN 5820-00-136-4966)

TECHNICAL MANUAL

NO. 11-5820-461-34P



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 8 February 1980

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS FOR

RADIO SETS

AN/GRC-50(V)1 (NSN 5820-892-3851)
AN/GRC-50(V)2 (NSN 5820-00-892-3852)
AN/GRC-50(V)3 (NSN 5820-00-892-3853)
AN/GRC-50(V)4 (NSN 5820-00-892-3854)
AN/GRC-50(V)5 (NSN 5820-00-892-3855)
AN/GRC-50A(V)1 (NSN 5820-00-933-6193)
AN/GRC-50A(V)2 (NSN 5820-00-933-6192)
AN/GRC-50A(V)3 (NSN 5820-00-933-6191)
AN/GRC-50A(V)4 (NSN 5820-00-933-6190)
AN/GRC-50A(V)5 (NSN 5820-00-933-6189)
AN/GRC-50A(V)6 (NSN 5820-00-936-5480)
AN/GRC-50A(V)7 (NSN 5820-00-936-5481)
AN/GRC-50A(V)8 (NSN 5820-00-935-0089)
AN/GRC-50A(V)9 (NSN 5820-00-878-8635)
AN/GRC-50A(V)10 (NSN 5820-00-878-8634)
AND
AN/GRC-50A(V)11 (NSN 5820-00-136-4966)

Current as of 13 September 1979

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus. Figure
SECTION	I. Introduction.....	1	
	II. Repair parts list.....	5	
GROUP	00 Radio Sets AN/GRC- 50(V)1 thru 5, and AN/GRC-50A(V)1 thru 11	5	1
	01 Receiver, Radio R- 1148(P)/GRC and R- 1331(*) (P)/GRC (3).....	9	2-8
	0101 Amplifier-Converter AM- 1955(*)/GRC (3A1).....	23	9,10
	010101 1st IF subassembly (3A1A1)	27	11
	0102 Amplifier-Converter AM/1956(*)/GRC (3A2)	29	12,13
	010201 1st IF subassembly (3A2A1)		
	(Same as group 010101)		
	0103 Receiver base band assembly (3A3).....	33	14
	0104 Receiver AFC assembly (3A4).....	35	15
	0105 Receiver 2nd IF assembly (3A5).....	37	16
	0106 Receiver-signal unit (3A6).....	39	17
	02 Transmitter, Radio T-893(P)/GRC (2)	41	18-22
	0201 Transmitter base band assembly (2A3)	51	23
	0202 Transmitter AFC assembly (2A4) (Same as group 0104)		
	0203 Transmitter modulator assembly (2A5).....	53	24
	0204 Transmitter regulator assembly (2A6) (No parts authorized)		
	0205 Amplifier-Oscillators AM-1957/GRC(2A1) or AM-1958/GRC or AM-1958A/GRC(2A2)	55	25-29
	03 Dummy Load, Electrical DA-189/G (No parts authorized)		
	04 Power Supply PP-2054(*)/GRC	65	30-33
	05 Regulator, Voltage CN-514/GRC (10)(11).....	73	34-35
	06 Switch Box SA-640/U	77	36
	07 Holder, Hand Set MT-2161/U.....	79	37
	08 Accessory Bag BG-102A (5MP2) (No parts authorized)		
	09 Antenna AT-903/G (1) (See TM 11-5820-517-14P for parts)		
	10 Mast AB-577/GRC (9) (See TM 11-5820-538-12 for parts)		
	11 Hand Set H-156/U (5HS1) (No parts authorized)		
	12 Case, Standardized Component CY-2582 (7) (No parts authorized)		
	13 Case, Standardized Component CY-2583 (8) (No parts authorized)		
	14 Cable assemblies (No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index.....	80	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/GRC-50(V)1 through 5 and AN/GRC-50A(V)1 through 11. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
------	------------

PA	Item procured and stocked for anticipated or known usage.
----	---

PD—Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.

XD—A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O	Support item is removed, replaced, used at the organizational level.
---	--

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
------	-------------------------

H	The lowest maintenance level capable of complete repair of the support item is the general support level.
---	---

D	The lowest maintenance level capable of complete repair of the support item is the depot level.
---	---

Z	Nonreparable. No repair is authorized.
---	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR