
TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS FOR**

**RECEIVER-TRANSMITTER, RADIO RT-505/PRC-25
(NSN 5820-00-857-0934)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

MARCH 1979

TECHNICAL MANUAL }
No. 11-5820-497-20P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 30 March 1979

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
RECEIVER-TRANSMITTER, RADIO RT-505/PRC-25
(NSN 5820-00-857-0934)

Current as of 28 November 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Material Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page		Illus
		Figure		
S ECTION	I.	Introduction	1	
	II.	Repair parts list	5	
Group	06	Receiver-Transmitter RT-505/PRC-25	5	1
		0601 DC to DC converter module (A1) (no parts authorized)		
		0602 Power amplifier tank module (A2) (no parts authorized)		
		0603 First RF amplifier module (A3) (no parts authorized)		
		0604 Second RF amplifier module (A4) (no parts authorized)		
		0605 Receiver mixer module (A5) (no parts authorized)		
		0606 Transmitter intermediate power amplifier module (A6) (no parts authorized)		
		0607 Transmitter second RF amplifier module (A7) (no parts authorized)		
		0608 Transmitter first RF amplifier module (A8) (no parts authorized)		
		0609 Variable frequency oscillator module (A9) (no parts authorized)		
		0610 Interval oscillator module (A10) (no parts authorized)		
		0611 Frequency synthesizer system discriminator driver module (A11) (no parts authorized)		
		0612 Frequency synthesizer system second mixer module (A12) (no parts authorized)		
		0613 53-MC filter (A13) (no parts authorized)		
		0614 Frequency synthesizer system first mixer module (A14) (no parts authorized)		
		0615 1-MC spectrum generator module (A15) (no parts authorized)		
		0616 Voltage regulator module (A16) (no parts authorized)		
		0617 Phase comparator module (A17) (no parts authorized)		
		0618 Frequency synthesizer system IF amplifier module (A18) (no parts authorized)		
		0619 Quarter wave network module (A19) (no parts authorized)		
		0620 Sidestep oscillator module (A20) (no parts authorized)		
		0621 Receiver IF amplifier module (A21) (no parts authorized)		
		0622 Speech amplifier limiter module (A22) (no parts authorized)		
		0623 Tone generator module (A23) (no parts authorized)		
		0624 Tone squelch module (A24) (no parts authorized)		
		0625 Receiver audio amplifier module (A25) (no parts authorized)		

*This manual together with TM 11-5820-398-20P, 15 July 1977, supersedes so much of TM 11-5820-398-12, 17 November 1965, as pertains to repair parts and special tools list.

	P a g e	I l l u s Figure
Group		
0626 Audio and control chassis assembly (A27) (no parts authorized)		
0627 Decoupling, network assembly (A34) (no parts authorized)		
0628 Synthesizer mother board assembly (A26) (no parts authorized)		
0629 Power amplifier assembly (A29) (no parts authorized)		
0630 R/T chassis assembly (A32) (no parts authorized)		
0631 R/T wiring harness board (A33) (no parts authorized)		
0632 Panel assembly (A30)	7	2,3
063201 Antenna loading network module (A30A28) (no parts authorized)		
SECTION III. Special tools list (not applicable)		
IV. National stock number and part number index.. . . .	10	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the RT-505/PRC-25. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA-Item	procured and stocked for anticipated or known usage.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are

assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O-Support	item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
D-The lowest	maintenance level capable of complete repair of the support item is the depot level.
Z-Nonreparable.	No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z-Nonreparable item.	When unserviceable, condemn and dispose at the level indicated in position 3.
D-Reparable item.	When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if