

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)

FOR
RECEIVER-TRANSMITTER, RADIO

RT-505/PRC-25

(NSN 5820-00-857-0934)

TECHNICAL MANUAL }
NO. 11-5820-497-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 20 April 1979

**DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR
RECEIVER-TRANSMITTER, RADIO RT-505/PRC-25
(NSN 5820-00-857-0934)
Current as of 6 November 1978**

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I.	Introduction	1
	II.	Repair parts list	5
Group	06	Receiver-Transmitter RT-505/PRC-25.	5 1-5
		0601 DC to DC converter module (A1)	15 6
		0602 Power amplifier tank module (A2)	17 7
		0603 First RF amplifier module (A3)	19 8
		0604 Second RF amplifier module (A4)	23 9
		0605 Receiver mixer module (A5)	27 10
		0606 Transmitter intermediate power amplifier module (A6)	29 11
		0607 Transmitter second RF amplifier module (A7)	31 12
		0608 Transmitter first RF amplifier module (A8)	35 13
		0609 Variable frequency oscillator module (A9)	37 14
		0610 Interval oscillator module (A10)	41 15

*This manual supersedes TM 11-5820-497-35P, 30 August 1971.

	Page	Illus Figure
0611 Frequency synthesizer system discriminator drive module (A11)	45	16
0612 Frequency synthesizer system second mixer module (A12)	47	17
0613 53-MC filter (A13)	49	18
0614 Frequency synthesizer system first mixer module (A14)	51	19
0615 1-MC spectrum generator module (A15)	53	20
0616 Voltage regulator module (A16)	55	21
0617 Phase comparator module (A17)	57	22
0618 Frequency synthesizer system IF amplifier module (A18)	59	23
0619 Quarter wave network module (A19)	61	24
0620 Sidestep oscillator module (A20)	63	25
0621 Receiver IF amplifier module (A21)	65	26
0622 Speech amplifier limiter module (A22)	69	27
0623 Tone generator module (A23)	71	28
0624 Tone squelch module (A24)	75	29
0625 Receiver audio amplifier module (A25)	79	30
0626 Audio and control chassis assembly (A27)	81	31
0627 Decoupling, network assembly (A34)	83	32
0628 Synthesizer mother board assembly (A26)	85	33
0629 Power amplifier assembly (A29)	87	34
0630 R/T chassis assembly (A32)	89	35, 36
0631 R/T wiring harness board (A33)	95	37
0632 Panel assembly (A30)	97	38-41
063201 Antenna loading network module (A30A28)	109	42
SECTION III. Special tools list (not applicable)		
IV. National stock number and part number index	111	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the RT-505/PRC-25. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code

Definition

PA - Item procured and stocked for anticipated or known usage.

XD - A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O -	Support item is removed, replaced, used at the organizational level.
-----	--

F -	Support item is removed, replaced, used at the direct support level.
-----	--

H -	Support item is removed, replaced, used at the general support level.
-----	---

D -	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.
-----	--

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
------	-------------------------

H -	The lowest maintenance level capable of complete repair of the support item is the general support level.
-----	---

D -	The lowest maintenance level capable of complete repair of the support item is the depot level.
-----	---

Z -	Nonreparable. No repair is authorized.
-----	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows: