

**TECHNICAL MANUAL**

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS  
AND SPECIAL TOOLS LIST**

**FOR**

**RADIO SETS**

**AN/VRC-53 (NSN 5820-00-223-7467),  
AN/VRC-64 (NSN 5820-00-223-7475),  
AN/GRC-125 (NSN 5820-00-223-7411),**

**AND**

**AN/GRC-160 (NSN 5820-00-223-7473)**

**AND**

**AMPLIFIER, POWER SUPPLY GROUPS**

**0A-3633/GRC AND 0A-3633A/GRC**

**(PARTS LIST FOR 0A-3633/GRC AND  
0A-3633A/GRC (NSN 5820-00-973-3383) ONLY))**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**4 DECEMBER 1981**

TECHNICAL MANUAL }  
No. 11-5820-498-20P }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, DC, 4 December 1981

# ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR RADIO SETS

**AN/VRC-53 (NSN 5820-00-223-7467),  
AN/VRC-64 (NSN 5820-00-223-7475),  
AN/GRC-125 (NSN 5820-00-223-7411),  
AND  
AN/GRC-160 (NSN 5820-00-223-7473)  
AND  
AMPLIFIER, POWER SUPPLY GROUPS  
OA-3633/GRC AND OA-3633A/GRC  
(PARTS LIST FOR OA-3633/GRC AND  
OA-3633A/GRC (NSN 5820-00-973-3383) ONLY))**

Current as of 7 August 1981

## REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) direct to: Commander, US Army Communications-Electronics Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. A replay will be furnished direct to you.

## Table of Contents

| SECTION |                                                                                                                                                  | Page | Illus<br>Figure |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------|------|-----------------|
|         | I. Introduction.....                                                                                                                             | 1    |                 |
|         | II. Repair Parts List .....                                                                                                                      | 5    |                 |
| Group   | 00 Radio Sets AN/VRC-53, AN/VRC-64, AN/GRC-125 and AN/GRC-160 (No parts authorized)                                                              |      |                 |
|         | 01 Receiver-Transmitter RT-505/PRC-25 (See TM 11-5820-398-12 for parts) and Receiver-Transmitter RT-841/PRC-77 (See TM 11-5820-667-12 for parts) |      |                 |
|         | 02 Amplifier-Power Supply Groups OA-3633/GRC and OA-3633A/GRC .....                                                                              | 5    | 1               |
|         | 0201 Amplifier-Power Supplies AM-2060/GRC and AM-2060A/GRC .....                                                                                 | 7    | 2               |
|         | 020101 Connector Assembly (A1A1) (No parts authorized)                                                                                           |      |                 |
|         | 020102 Cover Assembly (A1A2) (No parts authorized)                                                                                               |      |                 |
|         | 020103 Housing Assembly (A1A3) (No parts authorized)                                                                                             |      |                 |
|         | 020104 Module Assembly (A1A4) (No parts authorized)                                                                                              |      |                 |
|         | 02010401 Terminal Board Assembly (A1A4A1) (No parts authorized)                                                                                  |      |                 |
|         | 03 Antenna AS-1729/VRC (See TM 11-5985-262-20P for parts)                                                                                        |      |                 |
| SECTION | III. Special Tools List (Not applicable)                                                                                                         |      |                 |
|         | IV. National Stock Number and Part Number Index .....                                                                                            | 8    |                 |

\*This manual supersedes TM 11-5820-498-20P, 22 March 1977.

# SECTION I

## INTRODUCTION

### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the OA-3633/GRC and OA-3633A/GRC. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

| Code | Definition                                                |
|------|-----------------------------------------------------------|
| PA—  | item procured and stocked for anticipated or known usage. |

|     |                                                                                                          |
|-----|----------------------------------------------------------------------------------------------------------|
| XD— | A support item that is not stocked. When required, item will be procured through normal supply channels. |
|-----|----------------------------------------------------------------------------------------------------------|

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 70(-)42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

| Code | Application/Explanation                                              |
|------|----------------------------------------------------------------------|
| O—   | Support item is removed, replaced, used at the organizational level. |

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

| Code | Application/Explanation                                                                         |
|------|-------------------------------------------------------------------------------------------------|
| D—   | The lowest maintenance level capable of complete repair of the support item is the depot level. |

Z— Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

| Recoverability codes | Definition                                                                                                                              |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Z—                   | Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.                                        |
| D—                   | Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level. |

c. *National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. *Federal Supply Code for Manufacturer (FSCM).* The FSCM is a 5-digit numeric code listed in SB 708-41/42 which is used to identify the manufacturer, distributor, or Government agency, etc.

e. *Part Number.* Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.