

TM 11-5820-510-35P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT AND GENERAL SUPPORT
AND DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOL LISTS

RADIO SET AN/PRC-41



HEADQUARTERS, DEPARTMENT OF THE ARMY
21 AUGUST 1964

Technical Manual
No. 11-5820-510-35P

}

TM 11-5820-510-35P
HEADQUARTERS,
DEPARTMENT OF THE ARMY
WASHINGTON 25, D.C., 21 August 1964

RADIO SET AN/PRC-41

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope.....	1	2
Parts for maintenance.	2	3
Electron tubes	3	3
Requisitioning information	4	3
References	5	3
Reporting of equipment manual improvements	6	3
II. FUNCTIONAL PARTS LIST.....		5

SECTION I

INTRODUCTION

1. Scope

a. This manual lists the quantities of repair parts for direct support, general support, and depot maintenance and is a basis for requisitioning authorized parts. It is also a guide for depot maintenance in establishing initial levels of spare parts.

b. Columns are as follows:

(1) *Source, maintenance, and recoverability code.* Source, maintenance, and recoverability codes indicate the technical service responsible for supply, the maintenance category at which an item is stocked, categories at which an item is installed or repaired, and whether an item is repairable or salvageable. The source code column is divided into four parts.

(a) *Column A.* This column indicates the materiel code end designates the area of responsibility for supply. AR 310-1 defines the basic numbers used to identify the materiel code. If the part is Signal materiel responsibility, the column is left blank.

(b) *Column B.* This column indicates the point within the maintenance system where the part is available. "P" indicates that the repair part is a high mortality part, procured by technical services, stocked in and supplied from the technical service depot system, and authorized for use at indicated maintenance categories. "P1" indicates that the repair part is a low mortality part; procured by technical services, stocked only in end supplied from technical service key depots, and authorized for installation at indicated maintenance categories.

(c) *Column C.* This column indicates the lowest maintenance category authorized to install the part.

"O" - Organizational mainte-

nance (operator and organizational).
"F"-Direct support maintenance.

(d) *Column D.* Not used.

(2) *Federal stock number.* This column lists the 11-digit Federal stock number.

(3) *Designation by model.* Not used.

(4) *Description.* Nomenclature or the standard item name and brief identifying data for each item are listed in this column. When requisitioning, enter the nomenclature and description.

(5) *Unit of issue.* The unit of issue is each unless otherwise indicated and is the supply term by which the individual item is counted for procurement, storage, requisitioning, allowances, and issue purposes.

(6) *Expendability.* Nonexpendable items are indicated by NX. Expendable items are not annotated.

(7) *Quantity incorporated in unit.* This column lists the quantity of each part found in a given assembly, component, or equipment.

(8) *Field (third echelon or direct support).* This column indicates quantities of repair parts authorized for initial stockage for use in direct support maintenance and in supply support to organization. The quantities are based on 100 equipments to be maintained for a 15-day period.

(9) *Field (fourth echelon or general support).* The numbers in this column indicate quantities of repair parts authorized for initial stockage for use in general support maintenance. The quantities are based on 100 equipments to be maintained for a 15-day period.

(10) *Depot.* The numbers in this column indicate quantities of repair