

TM 11-5820-520-20P-1

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS

AND SPECIAL TOOLS LIST

FOR

RADIO SET AN/GRC-106

(NSN 5820-00-402-2263)

HEADQUARTERS, DEPARTMENT OF THE ARMY

FEBRUARY 1978

TECHNICAL MANUAL

No. 11-5820-520-20P-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 21 February 1978

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
FOR

RADIO SET AN/GRC-106
(NSN 5820-00-402-2263)

Current as of 10 August 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

			Page	Illus Figure
S ECTION	I.	Introduction	1	
	II.	Repair parts list	5	
Group	00	Radio Set AN/GRC-106	5	1,2
	01	Receiver-Transmitter RT-662/GRC (No parts authorized)		
		0101 Chassis Assembly (1A1)	9	3
		010101 Front end protection assembly (1A1A1A10) (No parts authorized)		
		010102 Internal ALC assembly (1A1A2A5) (No parts authorized)		
		0102 100 kHz synthesizer module (1A2) (No parts authorized)		
		0103 Frequency standard module (1A3) (No parts authorized)		
		0104 10 and 1 kHz synthesizer module (1A4) (No parts authorized)		
		0105 Transmitter intermediate frequency and audio module (1A5) (No parts authorized)		
		0106 Frequency divider module (1A6) (No parts authorized)		
		0107 Receiver intermediate frequency module (1A7) (No parts authorized)		
		0108 Translator module (1A8) (No parts authorized)		
		0109 MHz synthesizer module (1A9) (No parts authorized)		
		0110 Receiver audio module (1A10) (No parts authorized)		
		0111 DC to DC converter and regulator module (1A11) (No parts authorized)		
		0112 Radio frequency amplifier module (1A12) (No parts authorized)		
		0113 Case assembly (1A13) (No parts authorized)		
Group	02	Amplifier, Radio Frequency AM-3349/GRC (No parts authorized)		
		0201 Chassis, panel assembly (2A1) (No parts authorized)		
		020101 Chassis, amplifier (2A1A1) (No parts authorized)		
		020102 Panel, power amplifier (2A1A5)	11	4
		02010201 Filter assembly (2A1A5A1) (No parts authorized)		
		02010202 DC to DC converter (2A1A5A2) (No parts authorized)		
		0201020201 Screen rectifier assembly (2A1A5A2A4) (No parts authorized)		
		0201020202 Start circuit assembly (2A1A5A2A6) (No parts authorized)		
		02010203 Plate assembly (2A1A5A3) (No parts authorized)		
		02010204 Terminal board assembly (2A1A5A5) (No parts authorized)		
		02010205 Protection circuit (2A1A5A7) (No parts authorized)		
		0202 Turret assembly (2A2) (No parts authorized)		

*This manual supersedes so much of TM 11-5820-520-12, 25 February 1971, including all changes as pertains to repair parts and special tools list for the AN/GRC-106.

Table of Contents-Continued

		Page	Illus Figure
	0203 Antenna coupler (2A3) (No parts authorized)		
	0204 Discriminator assembly (2A4) (No parts authorized)		
	0205 Case assembly (2A6) (No parts authorized)		
	020501 Inverter assembly (2A6A1) (No parts authorized)		
	0206 Relay assembly (2A7) (No parts authorized)		
	0207 Drive assembly (2A8) (No parts authorized)		
	0208 P.A. stator assembly (2A9) (No parts authorized)		
Group	03 Mounting Assembly MT-3140/GRC-106 (No parts authorized)		
	04 Interconnecting cables	13	5
	05 Antenna Group AN/GRA-50 (See TM 11-5820-467-24P for parts)		
	06 Loudspeaker LS-166/U (See TM 11-5965-222-14P for parts)		
	07 (Not Used)		
	08 Mast Base AB-652/GR (No parts authorized)		
	09 Mast Sections MS-116-A, MS-117-A, MS-118-A	15	6
	10 Telegraph Key KY-116/U (No parts authorized)		
	11 Headset H-227/U (No parts authorized)		
	12 Handset H-33()/PT (No parts authorized)		
	13 Microphone M-29B/U (No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	16	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/GRC-106. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability Codes	Definition
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
H	Reparable item. When uneconomically repairable, condemn and dispose at the general support level.
D	Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and