

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR**

**RADIO SET AN/GRC - 106
(NSN 5820-00-402-2263)**

This copy is a reprint which includes current
pages from Change 1.

TECHNICAL MANUAL

N0.11-5820-520-34P-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 April 1978

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR**

**RADIO SET AN/GRC- 106
(NSN 5820-00-402-2263)**

Current as of 10 August 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA -Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

	Page	Illus Figure
SECTION I. Introduction	1	
II. Repair parts list	5	
GROUP 00 Radio Set AN/GRC-106	5	1-3
01 Receiver-Transmitter RT-662/GRC	11	4
0101 Chassis assembly (1A1)	17	5-7
010101 Front end protection assembly (1A1A1A10)	35	8
010102 Internal ALC assembly (1A1A2A5)	37	9
0102 100 kHz synthesizer module (1A2)	39	10-14
0103 Frequency standard module (1A3)	55	15-18
0104 100 and 1 kHz synthesizer module (1A4)	67	19-22
0105 Transmitter intermediate frequency and audio module (1A5)	81	23-26
0106 Frequency divider module (1A6)	93	27-30
0107 Receiver intermediate frequency module (1A7)	105	31-35
0108 Translator module (1A8)	108	36-39
0109 MHz synthesizer module (1A9)	127	40-43
0110 Receiver audio module (1A10)	139	44,45
0111 DC to DC converter and regulator module (1A11)	147	46,47
0112 Radio frequency amplifier module (1A12)	155	48,49
0113 Case assembly (1A13)	163	50
02 Amplifier, Radio Frequency AM-3349/GRC	165	51
0201 Chassis, panel assembly (2A1)	169	52
020101 Chassis, amplifier (2A1A1)	175	53-57
020102 Panel, power amplifier (2A1A5)	193	58,59
02010201 Filter assembly (2A1A5A1)	203	60
02010202 DC to DC converter (2A1A5A2)	207	61
0201020201 Screen rectifier assembly (2A1A5A2A4)	211	62
0201020202 Start circuit assembly (2A1A5A2A6)	213	63
02010203 Plate assembly (2A1A5A3)	215	64

*This manual supersedes TM 11-5820-520-34P-1, 15 November 1974, and so much of TM 11-5820-520-34P-3, 15 November 1974, as pertained to the AN/GRC-106.

Table of Contents — Continued

		Page	Illus Figure
	02010204 Terminal board assembly (2A1A5A5)	217	65
	02010205 Protection circuit (2A1A5A7)	219	66
	0202 Turret assembly (2A2)	221	67-70
	0203 Antenna coupler (2A3)	237	71
	0204 Discriminator assembly (2A4)	243	72-75
	0205 Case assembly (2A6)	253	76
	020501 Inverter assembly (2A6A1)	257	77
	0206 Relay assembly (2A7)	261	78
	0207 Drive assembly (2A8)	265	79,80
	0208 P. A. stator assembly (2A9)	269	81
G ROUP	03 Mounting Assembly MT-3140/GRC-106	271	82
	04 Interconnecting cables	273	83
	05 Antenna Group AN/GRA-50 (See TM 11-5820-467-25P for parts)		
	06 Loudspeaker LS-166/U (See TM 11-5965-222-14P for parts)		
	07 (Not used)		
	08 Mast Base AB-652/GR (No parts authorized)		
	09 Mast Sections MS-116-A, MS-117-A, MS-118-A	275	84
	10 Telegraph Key KY- 116/U (No parts authorized)		
	11 Headset H-227/U (No parts authorized)		
	12 Handset H-33()/PT (No parts authorized)		
	13 Microphone M-29B/U (No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	276	

SECTION I
INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support, and general support maintenance of the AN/GRC-106. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.
F	Support item is removed, replaced, used at the direct support level.
H	Support item is removed, replaced, used at the general support level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired