

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
FOR
REPEATER SET, RADIO AN/TRC 110(V)
(NSN 5820 00 868-8208)**

This copy is a reprint which includes current
pages from Change 1

HEADQUARTERS, DEPARTMENT OF THE ARMY

OCTOBER 1979

TECHNICAL MANUAL }
No. 11-5820-535-24P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 12 October 1979

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
REPEATER SET, RADIO AN/TRC-110(V)
(NSN 5820-00-868-8208)**

Current as of 18 April 1979

REPORTING OF ERRORS

You can improve this manual by recommending Improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION			Page	Illus Figure
	I.	Introduction.....	1	
	II.	Repair parts list.....	5	
GROUP	00	Repeater Set, Radio AN/TRC-110(V).....	5	1
	01	Shelter, Electrical Equipment S-298A/TRC-110(V).....	9	2-13
	0101	Cable, power, electrical SCC547021.....	41	14
	0102	Box control overvoltage protector assembly.....	45	15,16
	0103	Cable assembly, power and reel.....	51	17
	010301	Reel, Cable RC-435/U.....	53	18
	010302	Cable Assembly, Power, Electrical CX-7453A/U (100 Ft. 0 In.).....	53	18
	0104	Cable Assembly, Radio Frequency CG-1040B/U (5 Ft. 0 In.).....	55	19
	0105	Cable Assembly, Special Purpose, Electrical CX-7875/TCC (7 Ft. 0 In.).....	55	19
	0106	Cable Assembly, Special Purpose, Electrical CX-7872/TCC (5 Ft. 0 In.).....	55	19
	0107	Cable assembly, power, electrical SCC547174 Gp. I.....	57	20
	0108	Cable assembly, power, electrical SCC547175.....	57	20
	0109	Cable Assembly, Radio Frequency CG-409H/U (5 Ft. 0 In.).....	57	20
	0110	Cable Assembly, Power CX-7705A/U (15 Ft. 0 In.).....	59	21
	0111	Cable Assembly, Power, Electrical CX-4558/U (3 Ft. 6 In.).....	59	21
	0112	Cable Assembly, Power, Electrical CX-11173B/U (4 Ft. 0 In.).....	59	21
	0113	Heater, space, electrical.....	63	22
	0114	Cable Assembly, Radio Frequency CG-718B/U (6 Ft. 0 In.).....	67	23
	0115	Cable Assembly, Radio Frequency CG-1859/U (80 Ft. 0 In.).....	67	23
	0116	Utilities installation, electrical.....	75	24,28
	011601	Cable assembly SCC547218.....	89	29
	011602	Cable assembly SCC547219.....	89	29
	011603	Cable assembly SCC547221 Gp. 1.....	91	30
	011604	Cable assembly SCC547221 Gp. 15.....	91	30
	011605	Cable assembly SCC547221 Gp. 3.....	91	30
	011606	Cable, Spiral-4 SCC547226 Gp. 1.....	93	31
	011607	Cable, Spiral-4 SCC547226 Gp. 2.....	93	31
	011608	Cable, Spiral-4 SCC547226 Gp. 3.....	93	31
	011609	Cable assembly SCC547233 Gp. 1.....	95	32
	011610	Cable assembly SCC547233 Gp. 15.....	95	32

*This manual supersedes TM 11-5820-535-25P, 4 September 1968.

TM 11-5820-535-24P

			Page	Illus Figure
GROUP	011611	Cable assembly SCC547233 Gp. 3.....	95	32
	011612	Cable assembly, antenna Gp. 1.....	97	33
	011613	Cable assembly, antenna Gp. 2.....	97	33
	011614	Cable assembly, antenna Gp. 3.....	97	33
	011615	Cable assembly, antenna Gp. 9.....	97	33
	011616	Video and antenna entrance.....	101	34
	011617	Power and signal entrance.....	105	35
	011618	Utilities installation, raceway.....	113	36
	01161801	Power distribution box assembly.....	117	37,38
	01161802	Bracket installation.....	127	39-56
	0116180201	Shelter modified (No parts authorized)		
	01161802011	Shelter, Electrical Equipment S-280B/G (See TM 11-5410-213-14P for parts)		
	0116180202	Blower assembly, roadside.....	175	57
	0116180203	Blower assembly, curbside.....	177	58
02		Multiplexer TD-202/U (See TM 11-5805-367-25P/I-I for parts)		
03		Multiplexer TD-204/U (See TM 11-5805-367-25P/2 for parts)		
04		Radio Set AN/GRC-50A(V)7 (Triple Stack-Hi and Lo Band) (No parts authorized)		
05		Telephone Set TA-312/PT (See TM 11-5805-201-20P and TM 11-5805-201-34P for parts)		
06		Voltage Regulator CN-514/GRC (No parts authorized)		
07		Intercommunication Station LS-147C/FI (See TM 11-5830-221-24P for parts)		
SECTION	III.	Special tools list (Not applicable)		
	IV.	National stock number and part number index.....	178	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/TRC-110(V). It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source; Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	-Item procured and stocked for anticipated or known usage.
PD	-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XD	-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	-Support item is removed, replaced, used at the organizational level.
F	-Support item is removed, replaced, used at the direct support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
O	-The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	-The lowest maintenance level capable of complete repair of the support item is the direct support level.
D	-The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	-Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z	-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3
O	-Reparable item. When uneconomically repairable, condemn and dispose at organizational level.
F	-Reparable item. When uneconomically repairable, condemn and dispose at the direct support level.
H	-Reparable item. When uneconomically repairable, condemn and dispose at the general support level.