

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

POWER SUPPLIES

PP-3990/FRC-93 (NSN 5820-00-034-4234),

PP-4151/FRC-93 (NSN 5820-00-034-4239),

PP-4765/GRC-159(V) (NSN 6130-00-926-7805),

AND

MP-1 (NSN 5820-00-034-4233),

HEADQUARTERS, DEPARTMENT OF THE ARMY

March 1981



ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

POWER SUPPLIES

PP-3990/FRC-93 (NSN 5820-00-034-4234),

PP-4151/FRC-93 (NSN 5820-00-034-4239),

PP-4765/GRC-159(V) (NSN 6130-00-926-7805),

AND

MP-1 (NSN 5820-00-034-4233),

Current as of 4 September 1980

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or If you know of a way to Improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander US Army Communications and Electronics Materiel Readiness Command ATTN:

DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

TABLE of CONTENTS

		Page	Illus Figure
SECTION	I. Introduction.....	1	
	II. Repair Parts List	5	
GROUP	00 Power Supply PP-3990/FRC-93	5	1
	Power Supply PP-3990/FRC-93, Front and Rear Views	9	2
	Power Supply PP-3990/FRC-93, Chassis Assembly	13	3
	Power Supply PP-3990/FRC-93, Installation Kit	17	4
	00 Power Supply PP-4151/PRC-93.....	19	5
	Power Supply PP-4151/FRC-93,Chassis Assembly	23	6
	00 Power Supply PP-4765/GRC-159(V).....	27	7
	Power Supply PP-4765/GRC-159(V),, Cover Removed	31	8
	00 Power Supply MP-1	33	9
	Power Supply MP-1, Left and Right Views.....	37	10
	Power Supply MP-1, Rear View	39	11
	Power Supply MP-1, Top View	41	12
	Power Supply MP-1, Accessory Kit	43	13
SECTION	III. Special Tools List (Not applicable)		
	IV. National stock number and part number index	44	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the PP-3990/FRC-93, PP -4151/FRC-93, PP 4765/GRC-159(V) and MP-1. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA-	Item procured and stocked for anticipated or known usage.
XD-	A support item that is not stocked. When re-

quired, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700 42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance code are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O-	Support item is removed, replaced, used at the organizational level
F-	Support item is removed, replaced, used at the direct support level

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
O-	The lowest maintenance level capable of complete repair of the support item is the organizational level
F-	The lowest maintenance level capable of complete repair of the support item is the direct support level.
Z-	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z-	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
O-	Reparable item. When uneconomically repairable,