

TECHNICAL MANUAL
ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND
SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADIO TERMINAL
SET AN/TRC-112
(NSN 5820-00-868-8154)

This copy is a reprint which includes current
pages from Changes 1

HEADQUARTERS, DEPARTMENT OF THE ARMY

OCTOBER 1977

TECHNICAL MANUAL }
No. 11-5820-556-24P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 24 October 1977

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
FOR
RADIO TERMINAL SET AN/TRC-112
(NSN 5820-00-868-8154)**

**Basic manual current as of 14 June 1977
Change 1 current as of 8 August 1983**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MP, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

*This manual supersedes so much of TM 11-5820-556-15, 29 July 1971 as pertains to repair parts and special tools list.

Table of Contents

		Page	Illus Figure
SECTION	I. Introduction	1	
	II. Repair parts list	5	
GROUP	00 Radio Terminal Set AN/TRC-112	5	1
	01 Antenna Group AN/TRA-37 (See TM 11 -5985-324-15 for parts)		
	02 Converter, Telegraph-Telephone CV-425/U (See TM 11-5805-356-12 and TM 11-5805-356-34P-2 for parts)		
	03 Power Supply PP-4763A/GRC (See TM 11 -5820-765-35 for parts)		
	04 Radio Set AN/GRC-106 (See TM 11-5820-520-25P for parts)		
	05 Radio Set AN/GRC-143 (See TM 11-5820-520-12, TM 11-5820-595-35P-1 and TM 11-5820-595-35P-2 for parts)		
	06 Telephone Set TA-312/PT (See TM 11 -5805-201-20P and TM 11-5805-201-34P for parts)		
	07 Shelter. Electrical Equipment S-336/TRC-112	7	2-11
	0701 Blower exhaust	29	12
	0702 Box assembly control indicator	29	12
	0703 Cable assemblies	33	13
	0704 Indicator box assembly	35	14
	0705 Patch panel assembly	37	15
	0706 Power distribution box assembly	39	16
	0707 Power selector switch	41	17
	0708 Reel, Cable RC-405()/TR (No parts authorized)		
	0709 Waveguide installation assembly	45	18
	0710 Generator switch assembly	49	19
	08 Generator Set, Gasoline Engine. Trailer Mounted PU-332/G (See TM 5- 6115-365-15 for parts)		
	09 Transit Frame, Antenna MT-3894/TRC (No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	50	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/TRC-12. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

- a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.
- b. *Section III. Special Tools List.* Not applicable.
- c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

- (1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.
 - (2) *Item number.* The number used to identify item called out in the illustration.
- b. *Source Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered

in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
MD	Item to be manufactured or fabricated at the depot maintenance level.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750-1.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
C	Crew or operator maintenance performed within organizational maintenance.
O	Support item is removed, replaced, used at the organizational level.
F	Support item is removed, replaced, used at the direct support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level