

TECHNICAL MANUAL
ORGANIZATIONAL MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LIST
FOR
RADIO SET
AN/GRC-143
(NSN 5820-00-926-7355)

HEADQUARTERS, DEPARTMENT OF THE ARMY

JUNE 1978

TECHNICAL MANUAL

No. 11-5820-595-20P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 5 June 1978

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

RADIO SET AN/GRC-143

(NSN 5820-00-926-7355)

Current as of 25 November 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I. Introduction.....	1	
	II. Repair parts list.....	5	
Group	00 Radio Set AN/GRC-143.....	5	1
	01 Transmitter, Radio T-961/GRC- 143.....	7	2
	0101 Power supply (1A1).....	9	3
	010101 Regulator, vantage 5/6 VDC (1A1AA1) (No parts authorized)		
	010102 Regulator, voltage 5/6 VDC (1A1A2) (same as group 010101)		
	010103 Regulator, voltage 5/6 VDC (1A1A3) (same as group 010101)		
	010104 Regulator, voltage 5/6 VDC (1A1A4) (same as group 010101)		
	010105 Regulator, voltage 12 VDC (1A1A6) (No parts authorized)		
	010106 Regulator, voltage 12 VDC (1A1A7) (same as group 010105)		
	010107 Regulator, voltage 12 VDC (1A1A8) (same as group 010105)		
	010108 Regulator, voltage 12 VDC (1A1A9) (same as group 010105)		
	010109 Regulator, voltage 15/28 VDC (1A1A10) (No parts authorized)		
	010110 Regulator, Voltage 15/28 VDC (1A1A11) (same as group 010109)		
	010111 Regulator, voltage 15/28 VDC (1A1A12) (same as group 010109)		
	010112 Power supply chassis (1A1A13).....	11	4
	0102 Oscillator, radio frequency 100 MHz (1A2).....	13	5
	0103 Attenuator assembly 12 channel (PCM (1A3) (No parts authorized)		
	0104 Amplifier, audio frequency-radio frequency (1A4, 2A19)	15	6
	0105 Alarm monitor (1A5) (No parts authorized)		
	0106 Filters, low pass 1.3 MHz (1A6)	17	7
	0107 Control, electronic frequency (1A7) (No parts authorized)		

*This manual supersedes so much of TM 11-5820-595-12, 3 February 1971, including Change 1, 16 April 1973, as pertains to repair parts and special tools list.

	Page	Illus Figure
Group		
0108 Modulator, radio transmitter (1A8) (No parts authorized)		
0109 Mixer stage, frequency transmitter (1A9)	19	8
010901 Mixer stage crystal (1A9A1) (No parts authorized)		
0110 Frequency multiplier group transmitter (1A10)	21	9
011001 Frequency multiplier, transmitter, (2nd stage) (1A10A1) (No parts authorized)		
011002 Frequency multiplier, transmitter, (3rd stage) (1A10A2) (No parts authorized)		
0111 Amplifier frequency multiplier transmitter (1A11) (No parts authorized)		
0112 Modem, digital data (1A12)	23	10
011201 Regenerator, digital cable (1A12A2)	27	11
011202 Control, comparator cable (1A12A3)	31	12
011203 Processor, digital cable (1A12A4)	33	13
011204 Amplifier, radio frequency (1A12A5) (No parts authorized)		
011205 Alarm monitor (1A12A6)	37	14
011206 Amplifier detector radio (1A12A7) (No parts authorized)		
011207 Regenerator, digital radio (1A12A8)	39	15
011208 Control comparator, radio (1A12A9)	41	16
011209 Control processor (1A12A10)	43	17
011210 Decoder, pulse (1A12A11) (No parts authorized)		
011211 Control processor (1A12A12) (same as group 011209)		
011212 Processor digital radio (1A12A13)	45	18
011213 Chassis, modem digital data (1A12A15)	47	19
0113 Order wire (1A13)	49	20
011301 Daughter board No. 1 (1A13A1)	53	21
011302 Daughter board No. 2 (1A13A2) (No parts authorized)		
011303 Daughter board No. 3 (1A13A3) (No parts authorized)		
011304 Daughter board No. 4 (1A13A4) (No parts authorized)		
011305 Daughter board No. 5 (1A13A5) (No parts authorized)		
011306 Order wire, chassis (1A13A7) (No parts authorized)		
0114 Synthesizer, electrical frequency (1A14)	55	22
011401 Oscillator, radio frequency (1A14A1)	57	23
011402 Converter, frequency electronic (1A14A2)	59	24
011403 Detector, audio frequency, phase error (1A14A3)	61	25
011404 Frequency divider, variable No. 1 (1A14A4)	63	26
011405 Frequency divider, variable No. 2 (1A14A5)	65	27
011406 Frequency divider, fixed (1A14A6)	67	28
011407 Frequency synthesizer chassis (1A14A10) (includes 1A14A9) (No parts authorized)		
011408 Frequency synthesizer chassis (same as group 011407)		
0115 Plate assembly (1A15) (No parts authorized)		
011501 Radio test set P/O (1A15) (No parts authorized)		
0116 Cabinet, electrical equipment (1A16)	71	29
0117 Attenuator assembly, 24 channel PCM (1A18) (No parts authorized)		
02 Radio Receiver R-1287/GRC-143	73	30
0201 Power supply (2A3)	75	31
020101 Regulator, voltage (15/28 VDC) (2A3A1, 2A3A2, 2A3A4) (same as group 010109)		

	Page	Illus Figure
Group		
020102 Regulator, voltage (15/28 VDC) (2A3A1, 2A3A2, 2A3A4) (same as group 010109)		
020103 Regulator, voltage (15/28 VDC) (2A3A1, 2A3A2, 2A3A4) (same as group 010109)		
020104 Regulator, voltage (12 VDC) (2A3A3) (same as group 010105)		
020105 Power supply chassis (2A3A5).....	77	32
0202 Amplifier, mixer (2A5, 2A11) (No parts authorized)		
0203 Filter, band pass, 70 MHz (2A5, 2A10) (No parts authorized)		
0204 Mixer stage, frequency receiver (2A6).....	79	33
0205 Frequency multiplier group, receiver (2A7).....	81	34
020501 Frequency multiplier, receiver (2nd stage) (2A7A1) (No parts authorized)		
020502 Frequency multiplier, receiver (3rd stage) (2A7A2) (No parts authorized)		
0206 Amplifier-frequency multiplier receiver (2A8) (No parts authorized)		
0207 Mixer stage, frequency receiver (2A9) (same as group 0204)		
0208 Filter, band pass, 70 MHz (2A5, 2A10) (same as group 0203)		
0209 Amplifier, mixer (2A4, 2A11)(same as group 0202)		
0210 Amplifier, intermediate frequency, (70 MHz) (2A12, 2A15)	83	35
0211 Frequency multiplier oscillator (200 MHz) (2A13, 2A14) (No parts authorized)		
021101 Amplifier frequency multiplier (P/O VCO 220 MHz) (2A13A1) (No parts authorized)		
0212 Frequency multiplier oscillator (200 MHz) (same as group 0211)		
021201 Amplifier frequency multiplier (P/O VCO 220 MHz) (2A14A1) (same as group 021101)		
0213 Amplifier, intermediate frequency, (70 MHz) (2A12, 2A15) (same as group 0210)		
0214 Unit control, amplifier combiner (dual) (2A16) No parts authorized)		
0215 Demodulator (2A18) (No parts authorized)		
0216 Filter, low pass (260 kHz) (2A18) (No parts authorized)		
0217 Amplifier, audio frequency-radio frequency (same as group 0104)		
0218 Alarm monitor (2A20) (same as group 0105)		
0219 Synthesizer, electrical frequency (same as group 0114)		
021901 Oscillator, radio frequency (2A21A1) (same as group 011401)		
021902 Converter, frequency electronic (2A21A2) (same as group 011402)		
021903 Detector, audio frequency phase error (2A21A3) (same as group 011403)		
021904 Frequency divider, variable No. 1 (2A21A4) same as group 011404)		
021905 Frequency divider, variable No. 2 (2A21A5) (same as group 011405)		
021906 Frequency divider fixed No. 3 (2A21A6) (same as group 011406)		
021907 Frequency synthesizer chassis (2A21A10) (includes 2A21A9) (same as group 011407)		
021908 Frequency synthesizer chassis (2A21A10) (includes 2A21A9) (same as group 011407)		
0220 Cabinet, electrical equipment (2A22)	89	36, 37
0221 Plate assembly (2A24) (No parts authorized)		

		Page	Illus Figure
Group	0222 Filter band pass (70 MHz, BW = 1.5 MHz) (2A25, 2A26) (No parts authorized)		
	0223 Filter band pass (70 MHz, BW = 1.5 MHz) (same as group 0222)		
	0224 Filter low pass (680 kHz) (2A27) (same as group 0216)		
03	Amplifier, radio frequency AM-6090/GRC-143	93	38
	0301 Control regulator-inverter (3A1)	95	39
	0302 Control indicator (3A2, 3A3) (No parts authorized)		
	0303 Control indicator (same as group 0302)		
	0304 Control, alarm, low radio frequency-mismatch (3A4)	97	40
	0305 Control, time delay (3A5) (No parts authorized)		
	0306 Control, beam gate - DC overload (3A6) (No parts authorized)		
	0307 Power supply control (93A7) (No parts authorized)		
	0308 Inverter (3A8) (No parts authorized)		
	0309 Cabinet, electrical equipment (3A9)	103	41-48
	030901 Power supply assembly (3A9A1) (No parts authorized)		
	030902 Amplifier subassembly (3A9A33) (No parts authorized)		
04	Antenna alignment indicator (4A7) (No parts authorized)		
05	Handset H-156/U (4A4) No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	118	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/GRC-143. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all parts numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA-Item procured and stocked for anticipated or known usage.	
--	--

PD-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.	
---	--

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.	
---	--

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-Support item is removed, replaced, used at the organizational level.	

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
F-The lowest maintenance level capable of complete repair of the support item is the direct support level.	

D-The lowest maintenance level capable of complete repair of the support item is the depot level.	
---	--

Z-Nonreparable No repair is authorized.	
---	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows: