

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS)**

FOR

**RADIO SET AN/GRC-143
(NSN 5820-00-926-7355)**

TECHNICAL MANUAL }
 NO. 11-5820-595-34P }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 Washington, DC, 5 July 1978

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
 REPAIR PARTS AND SPECIAL TOOLS LISTS
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
 FOR**

**RADIO SET AN/GRC-143
 (NSN 5820-00-926-7355)**

Current as of 6 December 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, we the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. INTRODUCTION	1	
	II. Repair parts list.....	5	
GROUP	00 Radio Set AN/GRC-143	5	1
	01 Transmitter, Radio T-961/GRC-143	9	2
	0101 Power supply (1A1)	13	3
	010101 Regulator, voltage 5/6 VDC (1A1A1)	15	4
	010102 Regulator, voltage 5/6 VDC(1A1A2)(same as group 010101)		
	010103 Regulator, voltage 5/6 VDC (1A1A3)(same as group 010101)		
	010104 Regulator, voltage 5/6 VDC (1A1A4)(same as group 010101)		
	010105 Regulator, voltage 12 VDC (1A1A6)	19	5
	010106 Regulator, voltage 12 VDC (1A1A7)(same as group 010105)		
	010107 Regulator, voltage 12 VDC (1A1A8)(same as group 010105)		
	010108 Regulator, voltage 12 VDC (1A1A9)(same as group 010105)		
	010109 Regulator, voltage 15/28 VDC(1A1A10)	23	6
	010110 Regulator, voltage 15/28 VDC (1A1A11)(same as group 010109)		
	010111 Regulator, voltage 15/28 VDC (1A1A12)(same as group 010109)		
	010112 Power supply chassis (1A1A13)	27	7,8
	0102 Oscillator, radio frequency 100 MHz (1A2)	35	9
	0103 Attenuator assembly, 12 channel PCM (1A3)	39	10
	0104 Amplifier, audio frequency-radio frequency (1A4, 2A19)	43	11
	0105 Alarm monitor (1A5)	47	12,14
	0106 Filters, low pass 1.3 MHz (1A6)	55	15
	0107 Control, electronic frequency (1A7)	57	16,17
	0108 Modulator, radio transmitter (1A8)	69	18
	01091 Mixer stage, frequency transmitter (1A9)	75	19
	010901 Mixer stage crystal (1A9A1)	77	20
	0110 Frequency multiplier group transmitter (1A10)	81	21

☆This manual supersedes TM 11-5820-595-35P-1, 28 February 1972, and TM 11-5820-595-35P-2, 28 February 1972.

Table of Contents-Continued

	Page	Illus Figure
011001 Frequency multiplier, transmitter, (2nd stage) (1A10A1)	83	22
011002 Frequency multiplier, transmitter, (3rd stage) (1A10A2)	85	23
0111 Amplifier frequency multiplier transmitter (1A11)	89	24
0112 Modem, digital data (1A12)	95	25
011201 Regenerator, digital cable (1A12A2)	99	26
011202 Control, comparator cable (1A12A3)	103	27
011203 Processor, digital cable (1A12A4)	107	28
011204 Amplifier, radio frequency (1A12A5)	109	29
011205 Alarm monitor (1A12A6)	113	30
011206 Amplifier detector radio (1A12A7)	117	31
011207 Regenerator, digital radio (1A12A8)	121	32
011208 Control comparator, radio (1A12A9)	125	33
011209 Control processor (1A12A10)	129	34
011210 Decoder, pulse (1A12A11)	133	35
011211 Control processor (1A12A12)(same as group 011209)		
011212 Processor digital radio (1A12A13)	135	36
011213 Chassis, modem digital data (1A12A15)	139	37,41
0113 Order wire 1A13	155	42
011301 Daughter board No. 1(1A13A1)	159	43
011302 Daughter board No. 2(1A13A1)	163	44
011303 Daughter board No. 3 (1A13A3)	167	45
011304 Daughter board No. 4 (1A13A4)	171	46
011305 Daughter board No. 5 (1A13A5)	175	47
011306 Order wire, chassis (1A13A7)	179	48,49
0114 Synthesizer, electrical frequency (1A14)	185	50
011401 Oscillator, radio frequency(1A14A1)	189	51,54
011402 Converter, frequency electronic (1A14A2)	197	55,57
011403 Detector, audio frequency, phase error (1A14A3)	207	58,59
011404 Frequency divider, variable No. 1 (1A14A4)	215	60,62
011405 Frequency divider, variable No. 2 (1A14A5)	221	63,64
011406 Frequency divider, fixed (1A14A6)	225	65,67
011407 Frequency synthesizer chassis (1A14A10) (includes 1A13A9)	231	68
011408 Frequency synthesizer chassis (same as group 011407)		
0115 Plate assembly 1A15	235	69
011501 Radio test set P/O 1A15	239	70
0116 Cabinet, electrical equipment 1A16	247	71
0117 Attenuator assembly, 24 channel PCM 1A18	253	72,73
GROUP 02 Radio Receiver R-1287/GRC-143	259	74,75
0201 Power supply (2A3)	267	76
020101 Regulator, voltage (15/28 VDC) (2A3A1 2A3A2, 2A3A4)(same as group 010109)		
020102 Regulator, voltage (15/28 VDC) (2A3A1, 2A3A2, 2A3A4)(same as group 010109)		
020103 Regulator, voltage (15/28 VDC) (2A3A1, 2A3A2 2A3A4) (same as group 010109)		
020104 Regulator, voltage (12 VDC) (2A3A3) (same as group 010105)		
020105 Power supply chassis (2A3A5)	269	77,78
0202 Amplifier, mixer (2A4, 2A11)	275	79,80
0203 Filter, band pass, 70 MHz (2A5, 2A10)	281	81
0204 Mixer stage, frequency receiver (2A6)	283	82
0205 Frequency multiplier group, receiver (2A7)	287	83
020501 Frequency multiplier, receiver, (2nd stage) (2A7A1)	289	84
020502 Frequency multiplier, receiver, (3rd stage) (2A7A2)	291	85
0206 Amplifier-frequency multiplier receiver (2A8)	295	86
0207 Mixer stage, frequency receiver (2A9) (same as group 0204)		
0208 Filter, band pass, 70 MHz (2A5,2A10) (same as group 0203)		
0209 Amplifier, mixer (2A4, 2A11) (came as group 0202)		
0210 Amplifier, intermediate frequency, (70 MHz) (2A12, 2A15)	299	87,88
0211 Frequency multiplier oscillator (200 MHz) (2A13, 2A14)	307	89
021101 Amplifier frequency multiplier (P/O VCO 220 MHz) (2A13A1)	311	90,91
0212 Frequency multiplier oscillator (200 MHz) (same as group 0211)		
021201 Amplifier frequency multiplier (P/O VCO 220 MHz) (2A14A1) (same as group 021101)		
0213 Amplifier, intermediate frequency, (70 MHz) (2A12, 2A15) (same as group 0210)		
0214 Unit control, amplifier combiner (dual) (2A16)	317	92,93
0215 Demodulator (2A17)	325	94,95
0216 Filter, low pass (260 kHz) (2A18)	333	96

Table of Contents-Continued

		Illus Page	Figure
	0217 Amplifier, audio frequency-radio frequency (same as group 01041)		
	0218 Alarm monitor (2A20) (same as group 0105)		
	0219 Synthesizer, electrical frequency (same as group 0114)		
	021901 Oscillator, radio frequency (2A21A1) (same as group 011402)		
	021902 Converter, frequency electronic (2A21A2) (same as group 011402)		
	021903 Detector, audio frequency phase error (2A21A3) (same as group 011403)		
	021904 Frequency divider, variable No. 1 (2A21A4) (same as group 011404)		
	021905 Frequency divider, variable No. 2 (2A21A5) (same as group 011405)		
	021906 Frequency divider fixer No. 3 (2A21A6) (same as group 011406)		
	021907 Frequency synthesizer chassis (2A21A10) (includes 2A21A9) (same as group 011407)		
	021908 Frequency synthesizer chassis (2A21A10) (includes 2A21A9) (same as group 011407)		
	0220 Cabinet, electrical equipment (2A22)	339	97,98
	0221 Plate assembly (2A24)	347	99
	0222 Filter band pass (70 MHz, BW = 1.5MHz) (2A25, 2A26)	351	100
	0223 Filter band pass (70 MHz, BW= 1.5MHz) (same as group 0222)		
	0224 Filter low pass (680 kHz) 2A27) (same as group 0216)		
Group	03 Amplifier, Radio Frequency AM-6090/GRC- 143	353	101
	0301 Control regulator-inverter (3A1).....	355	102,103
	0302 Control indicator (3A2, 3A3)	361	104
	0304 Control, alarm, low radio frequency-mismatch (3A4)	365	105
	0305 Control, time delay (3A5).....	369	106
	0306 Control, beam gate-DC overload (3A6)	371	107
	0307 Power supply, control (3A7)	373	108
	0308 Inverter (3A8)	375	109
	0309 Cabinet, electrical equipment (3A9)	383	110,121
	030901 Power supply assembly (3A9A1).....	421	122
	030902 Amplifier subassembly (3A9A33)	425	123,124
	04 Antenna alignment indicator (4A7).....	429	125
	05 Handset H- 156/U (4A4).....	433	126
SECTION	III. SPECIAL TOOLS LIST (Not applicable)		
	IV. National stock number and part number index.....	434	

SECTION I

INTRODUCTION

1. Scope.

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the AN/GRC-143. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List Not applicable.*

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA-Item procured and stocked for anticipated or known usage.
--

PD-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

O-Support item is removed, replaced, used at the organizational level.
--

F-Support item is removed, replaced, used at the direct support level.
--