

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS
FOR
RECEIVING SET, RADIO
AN/F RR-79
(NSN 5820-00-937-2887)**

ORGANIZATIONAL MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS
FOR
RECEIVING SET, RADIOAN/FRR-79
(NSN 5820-00-937-2887)

Current as of 30 September 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction.....	1	
	II. Repair parts list	5	
Group	00. Receiving Set, Radio AN/FRR-79 (No parts authorized).		
	01. Receiver Group OR-31/FRR-79 (1) (No parts authorized)		
	0101 Cabinet, Electrical Equipment CY-6450/FRR-79 (1A1) (No parts authorized)		
	010101 Panel, power distribution (1A1A1)	5	1
	010102 Panel, data distribution (1A1A2) (No parts authorized)		
	01010201 Antenna protector (1A1A2A1, 1A1A2A2) (No parts authorized)		
	010103 Panel, radio frequency distribution (1A1A4) (No parts authorized)		
	01010301 Amplifier, hybrid (1A1A4A4) (No parts authorized)		
	0101030101 Electronic component assembly (1A1A4A4A1, 1A1A4A4A2) (No parts authorized)		
	0101030102 Electronic component assembly (1A1A4A4A3) (No parts authorized)		
	01010302 Amplifier, hybrid (1A1A4A5) (No parts authorized)		
	0101030201 Electronic component assembly (1A1A4A5A1, 1A1A4A5A2) (No parts authorized)		

*This manual supersedes so much of TM 11-5820-601-12, 27 December 1968, as pertains to repair parts and special tools list.

Table of Contents-Continued

Group		Page	Ilus Figure
0101030202	Electronic component assembly (1A1A4A5A3) (No parts authorized)		
0102	Receiver, Radio R- 1543/FRR-79 (1A3, 1A4) (No parts authorized)		
010201	Network, hybrid circuit (1A3A3, 1A4A3) (No parts authorized)		
01020101	Circuit card assembly (1A3A3A1, 1A4A3A1) (No parts authorized)		
010202	Selector, automatic gain control (1A3A8, 1 A4A8) (No parts authorized)		
01020201	Circuit card assembly (1A3A8A1, 1A4A8A1) (No parts authorized)		
010203	Amplifier, intermediate frequency (1A3A9 thru 1A3A12), (1A4A9 thru 1A 4A12) (No parts authorized)		
01020301	Circuit card assembly (1A3A9A1 thru 1A3A12A1), 1A4A9A1 thru 1A4A12A1) (No parts authorized)		
0102030101	Photoelectric cell (1A3A9A1A1 thru 1A3A12A1A1), 1A4A9A1A1 thru 1A4A12A1A1) (No parts authorized)		
0102030102	Photoelectric cell housing assembly (1A3A9A1A2 thru 1A3A12A1A2), (1A4A9A1A2 thru 1A4A12A1A2)(No parts authorized)		
010204	Power supply (1A3A15, 1A4A15) (No parts authorized)		
01020401	Circuit card assembly (1A3A15A1, 1A4A15A1) (No parts authorized)		
01020402	Circuit card assembly (1A3A15A2, 1A4A15A2) (No parts authorized)		
01020403	Electronic component assembly (1A3A15A4, 1A4A15A4) (No parts authorized)		
010205	Mixer stage, VHF (1A3A16, 1A4A16) (No parts authorized)		
01020501	Circuit card assembly (1A3A16A1, 1A4A16A1) (No parts authorized)		
010206	Mixer stage, high frequency (1A3A20, 1A4A20) (No parts authorized)		
01020601	Circuit card assembly (1A3A20A1, 1A4A20A1) (No parts authorized)		
01020602	Circuit card assembly (1A3A20AR1, 1A4A20AR1) (No parts authorized)		
01020603	Circuit card assembly (1A3A20AR2, 1A4A20AR2) (No parts authorized)		
010207	Equalizer, high frequency (1A3A21, 1A4A21) (No parts authorized)		
01020701	Circuit card assembly (1A3A21A1, 1A4A21A1) (No parts authorized)		
0102070101	Light coupler, amplifier (1A3A21A1A1, 1A4A21A1A1) (No parts authorized)		
0102070102	Photoelectric cell (1A3A21A1A2, 1A4A21A1A2) (No parts authorized)		
010208	Alarm, monitor (1A3A29, 1A4A29) (No parts authorized)		
01020801	Circuit card assembly (1A3A29A1, 1A4A29A1) (No parts authorized)		
010209	Radio receiver, subassembly (1A3A35, 1A4A35)	7	2
01020901	Circuit card assembly (1A3A35A1, 1A4A35A1) (No parts authorized)		
01020902	Radio receiver, subassembly (1A3A35A2, 1A4A35A2)	9	3
0102090201	Switch, rotary (1A3A5A2A1, 1A4A35A2A1) (No parts authorized)		
01020903	Filter assembly (1A3A35A32, 1A4A35A32) (No parts authorized)		
01020904	Circuit card assembly (1A3A35A39, 1A4A35A39) (No parts authorized)		
01020905	Filter assembly (1A3A35A46, 1A4A35A46) (No parts authorized)		
0102090501	Filter assembly (1A3A35A46A1, 1A4A35A46A1) (No parts authorized)		
010210	Preselector, radio frequency (1A3A37, 1A4A37) (No parts authorized)		
01021001	Preselector subassembly (1A3A37A1, 1A4A37A1) (No parts authorized)		
0102100101	Circuit card assembly (1A3A37A1A1, 1A4A37A1A1)		
0102100102	Circuit card assembly (1A3A37A1A2, 1A4A37A1A2) (No parts authorized)		
0102100103	Circuit card assembly (1A3A37A1A3, 1A4A37A1A3) (No parts authorized)		
0102100104	Preselector subassembly (1A3A37A1A4, 1A4A37A1A4) (No parts authorized)		
0102100105	Circuit card assembly (1A3A37A1Z1, 1A4A37A1Z1) (No parts authorized)		
010211	Filter assembly, electrical bandpass (1A3FL18, 1A4FL18) I(No parts authorized)		
01021101	Electronic component assembly (1A3FL18A1, 1A4FL18A1) (No parts authorized)		
0103	Control, electronic frequency (1A5) (No parts authorized)		
010301	Electronic frequency subchassis (1A5A1)(No parts authorized)		
01030101	Electronic frequency subchassis (1A5AA1)	11	4
0103010101	Switch, push main diversity (1A5A1A1A1)	13	5
0103010102	Light indicator fault (1A5A1A1A2)	15	6
0103010103	Switch, push afcon carr fail (1A5A1A1A3)	17	7
0103010104	Switch, push finetune (1A5A1A1A4)	19	8
0103010105	Switch, rotary, circuit tester (1A5A1A1A5) (No parts authorized)		
01030102	Filter assembly (1A5A1FL2) (No parts authorized)		
010302	Calibrator, frequency (1A5A2) (No parts authorized)		
01030201	Circuit card assembly (1A5A2A1) (No parts authorized)		
010303	Monitor, radio frequency (1A5A4) (No parts authorized)		
01030301	Circuit card assembly (1A5A4A1) (No parts authorized)		
010304	Control, electrical frequency (1A5A5) (No parts authorized)		
01030401	Circuit card assembly (1A5A5A1) (No parts authorized)		

Table of Contents-Continued

	Page	Ilus Figure
010305 Amplifier, intermediate frequency (A5 A 13)(No parts authorized)		
01030501 Circuit card assembly (1A5A13A1) (No parts authorized)		
010306 Alarm monitor (1A5A29) (No parts authorized)		
01030601 Circuit card assembly (1A5A29A1) (No parts authorized)		
010307 Oscillator, radio frequency (1A5A31) (No parts authorized)		
01030701 Circuit card assembly (1A5A31A1) (No parts authorized)		
01030702 Electronic component assembly (1A5A31A2) (No parts authorized)		
01030703 Circuit card assembly (1A5A31A3)(No parts authorized)		
010308 Detector, radio frequency (1A5A38) (No parts authorized)		
01030801 Circuit card assembly (1A5A38A1) (No parts authorized)		
010309 Detector, radio frequency (1A5A39) (No parts authorized)		
01030901 Circuit card assembly (1A5A39A1) (No parts authorized)		
010310 Power Supply (1A5PS1) (No parts authorized)		
01031001 Circuit card assembly (1A5PS1A1)(No parts authorized)		
01031002 Circuit card assembly (1A5PS1A2) (No parts authorized)		
01031003 Electronic component assembly (1A5PS1A3) (No parts authorized)		
0104 Monitor, radio frequency ID-1562/FRR-79 (1A6) (No parts authorized)		
010401 Power supply (1A6A10) (No parts authorized)		
01040101 Circuit card assembly (1A6A10A1) (No parts authorized)		
01040102 Circuit card assembly (1A6A10A2) (No parts authorized)		
01040103 Electronic component assembly (1A6A10A4) (No parts authorized)		
010402 Amplifier, monitor (1A6A11) (No parts authorized)		
01040201 Circuit card assembly (1A6A11A1) (No parts authorized)		
010403 Audio frequency subassembly (1A6A20) (No parts authorized)		
01040301 Audio frequency subassembly (1A6A20A10)	21	9
0104030101 Switch, rotary (1A6A20A10A1) (No parts authorized)		
0104030102 Switch, rotary (1A6A20A10A2) (No parts authorized)		
0104030103 Switch, push operate standby (1A6A20A10A3)	23	10
01040302 Attenuator, variable (1A6A20AT1 thru 1A6A20AT8) (No parts authorized)		
01040303 Circuit card assembly (1A6A20A40) (No parts authorized)		
0105 Control, Converter C-7666/FRR-79 (1A7) (No parts authorized)		
010501 Circuit card assembly (1A7A1) (No parts authorized)		
010502 Circuit card assembly (1A7A2) (No parts authorized)		
010503 Circuit card assembly (1A7A3) (No parts authorized)		
010504 Circuit card assembly (1A7A4) (No parts authorized)		
010505 Circuit card assembly (1A7A6) (No parts authorized)		
010506 Circuit card assembly (1A7A7) (No parts authorized)		
010507 Circuit card assembly (1A7A8) (No parts authorized)		
010508 Circuit card assembly (1A7A9) (No parts authorized)		
010509 Circuit card assembly (1A7A12) (No parts authorized)		
010510 Circuit card assembly (1A7A13) (No parts authorized)		
010511 Circuit card assembly (1A7A15) (No parts authorized)		
010512 Circuit card assembly (1A7A16) (No parts authorized)		
010513 Circuit card assembly (1A7A17) (No parts authorized)		
010514 Circuit card assembly (1A7A18) (No parts authorized)		
010515 Circuit card assembly (1A7A21) (No parts assembly)		
010516 Circuit card assembly (1A7A24) (No parts authorized)		
010517 Circuit card assembly (1A7A25) (No parts authorized)		
010518 Circuit card assembly (1A7A26) (No parts authorized)		
010519 Converter subassembly (1A7A27) (No parts authorized)		
01051901 Converter subassembly (1A7A27A1)	25	11
01051902 Panel, fuse (1A7A27A2)	27	12
0106 Synthesizer Electrical 0-1488/FR (See TM 11-5820-598-34P and TM 11-5820-599-34P for parts)		
02 Control, Receiver C-7667/FRR-79 (2)	29	13
0201 Remote control subassembly (2A25)	31	14
020101 Remote control subassembly (2A25A1)	35	15
0202 Circuit card assembly (2A10) (No parts authorized)		
0203 Circuit card assembly (2A4) (No parts authorized)		
0204 Circuit card assembly (2A21) (No parts authorized)		
0205 Circuit card assembly (2A9) (No parts authorized)		
0206 Circuit card assembly (2A7) (No parts authorized)		
0207 Circuit card assembly (2A11) (No parts authorized)		

Table of Contents-Continued

		Page	Ilus Figure
0208	Circuit card assembly (2A6) (No parts authorized)		
0209	Circuit card assembly (2A23) (No parts authorized)		
0210	Circuit card assembly (2A8) (No parts authorized)		
0211	Circuit card assembly (2A2) (No parts authorized)		
0212	Circuit card assembly (2A20) (No parts authorized)		
0213	Circuit card assembly (2A3) (No parts authorized)		
0214	Circuit card assembly (2A15, 2A16) (No parts authorized)		
0215	Circuit card assembly (2A24) (No parts authorized)		
0216	Circuit card assembly (2A5) (No parts authorized)		
0217	Circuit card assembly (2A12) (No parts authorized)		
0218	Circuit card assembly (2A19) (No parts authorized)		
0219	Circuit card assembly (2A14) (No parts authorized)		
0220	Circuit card assembly (2A22) (No parts authorized)		
0221	Circuit card assembly (2A17, 2A18) (No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	36	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/FRR-79. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
------	------------

PA-	Item procured and stocked for anticipated or known usage.
-----	---

Code	Definition
------	------------

XD-	A support item that is not stocked. When required, item will be procured through normal supply channels.
-----	--

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O-	Support item is removed, replaced, used at the organizational level.
----	--

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
------	-------------------------

F-	The lowest maintenance level capable of complete repair of the support item is the direct support level.
----	--

Z-	Nonreparable. No repair is authorized.
----	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
----------------------	------------

Z-	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
----	--