

**TECHNICAL MANUAL**

**ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE**

**REPAIR PARTS AND SPECIAL TOOLS LIST**

**(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

**FOR**

**RECEIVING SET, RADIO AN/URR- 69**

**(NSN 5895 - 00 - 307 - 9376)**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**5 MARCH 1985**

**\*TM11-5820-771-23P**

Technical Manual

No. 11- 5820-771-23P

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
Washington, DC, 5 March 1985

**ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST  
( INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)  
FOR  
RECEIVING SET, RADIO AN/URR-69  
(NSN 5895 - 00 - 307 - 9376)  
Current as of 14 November 1984**

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL -ME - MP, Fort Monmouth, NJ 07703-5007. In either case, a reply will be furnished direct to you.

\*This manual supersedes TM 11 - 5820 - 771 - 23P, 9 November 1978.

## Table of Contents

|              |                                                                      | Page     | Illus<br>Figure |
|--------------|----------------------------------------------------------------------|----------|-----------------|
| Section I.   | Introduction . . . . .                                               | 1        |                 |
| II.          | Repair Parts List . . . . .                                          | 1 - 1    |                 |
| Group 00     | Receiving Set, Radio AN/URR-69 . . . . .                             | 1 - 1    | 1               |
| 01           | Receiver Radio R-1444/UR . . . . .                                   | 2 - 1    | 2               |
|              | 0101 Receiver Assembly, Front End (1 A1, 1 A2, 1 A3) . . . . .       | 3 - 1    | 3               |
|              | 010101 Control, Receiver (1 A1) . . . . .                            | 4 - 1    | 4               |
|              | 01010101 Switch Subassembly (1 A1 A1) (See Group 010101 for parts)   |          |                 |
|              | 01010102 Receiver Subassembly (1 A1 A2)(Gear Box Assembly) . . . . . | 5 - 1    | 5               |
|              | 010102 Receiver Subassembly (1 A2) . . . . .                         | 6 - 1    | 6               |
|              | 01010201 Oscillator, Radio Frequency (1 A2 A1) . . . . .             | 7 - 1    | 7               |
|              | 01010202 Converter, Frequency Electrical (1 A2 A2) . . . . .         | 8 - 1    | 8               |
|              | 01010203 Mixer Stage, Frequency (1 A2 A3) . . . . .                  | 9 - 1    | 9               |
|              | 01010204 Filter, Bandpass (1 A2 A4) . . . . .                        | 10 - 1   | 10              |
|              | 01010205 Oscillator, Radio Frequency (1 A2 A5) . . . . .             | 11 - 1   | 11              |
|              | 01010206 Filter, Bandpass (1 A2 A6) . . . . .                        | 12 - 1   | 12              |
|              | 01010207 Mixer Stage, Frequency (1 A2 A7) . . . . .                  | 13 - 1   | 13              |
|              | 01010208 Amplifier-Mixer (1 A2 A8) . . . . .                         | 14 - 1   | 14              |
|              | 01010209 Coil Assembly, Radio Frequency (1 A2 A9) . . . . .          | 15 - 1   | 15              |
|              | 01010210 Switch Subassembly (No parts authorized)                    |          |                 |
|              | 010103 Coil Assembly, Radio Frequency (1 A3) . . . . .               | 16 - 1   | 16              |
|              | 0102 High Frequency Divider (1 A4) . . . . .                         | 17 - 1   |                 |
|              | 0103 Low Frequency Divider (1 A5) . . . . .                          | 18 - 1   | 18              |
|              |                                                                      | 18 A - 1 | 18A             |
|              | 0104 Oscillator, Radio Frequency (1 A6) . . . . .                    | 19 - 1   | 19              |
|              | 0105 Amplifier-Converter (1 A7) . . . . .                            | 20 - 1   | 20              |
|              |                                                                      | 20 A - 1 | 20A             |
|              | 0106 Amplifier, Intermediate Frequency (1 A8) . . . . .              | 21 - 1   | 21              |
|              | 0107 Power Supply (1 A9) . . . . .                                   | 22 - 1   | 22              |
|              |                                                                      | 23 - 1   | 23              |
|              |                                                                      | 23 A - 1 | 23A             |
|              | 0108 Housing Assembly, Receiver (1 MP1) . . . . .                    | 24 - 1   | 24              |
|              |                                                                      | 24 A - 1 | 24A             |
| 02           | Accessory Kit, Radio . . . . .                                       | 25 - 1   | 25              |
|              | 0201 Mounting Base, Electrical Equipment MT-4542/URR-69 . . . . .    | 26 - 1   | 26              |
|              | 0202 Cable Assembly, Special Purpose Electrical (2 W1) . . . . .     | 27 - 1   | 27              |
|              | 0203 Cable Assembly, Special Purpose Electrical (2 W2) . . . . .     | 28 - 1   | 28              |
|              | 0204 Cable Assembly, Special Purpose Electrical (2 W3) . . . . .     | 29 - 1   | 29              |
| Section III. | Special Tools List . . . . .                                         | 30 - 1   | 30              |
| Group 00     | Special Tools . . . . .                                              |          |                 |
| Section IV.  | National Stock Number and Part Number . . . . .                      |          |                 |
|              | Index . . . . .                                                      | I - I    |                 |

SECTION I  
INTRODUCTION

1. Scope

This manual lists and authorizes spares and repair parts; special tools, special test, measurement and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational and direct support maintenance of the AN/URR – 69. It authorizes the requisitioning issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.

b. *Section III. Special Tools List.* A list of special tools special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in (column (5)) for the performance of maintenance,

c *Section IV. National Stock Number and Part Number Index.* A list in National item identification number (NIIN) sequence, (of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross - referenced to each illustration figure and item number appearance.

3. Explanation of Columns (Section II and III)

a *Item No. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR Code (Column (2)).* The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information maintenance category authorization criteria, and disposition instruction, as shown in the following breakout

