

TECHNICAL MANUAL
ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADIO SETS
AN/FRC-80(V)1 (NSN 5820-00-554-4239)
AN/FRC-80-(V)2 (NSN 5820-00-351-2980)
AND
AN/FRC-80(V)3 (NSN 5820-00-145-6829)

TECHNICAL MANUAL

No. 11-5820-785-24P



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 27 March 1979

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADIO SETS
AN/FRC-80(V)1 (NSN 5820-00-554-4239)
AN/FRC-80(V)2 (NSN 5820-00-351-2980)
AND
AN/FRC-80(V)3 (NSN 5820-00-145-6829)**

Current as of 11 August 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

			Page	Illus Figure
SECTION	I.	Introduction	1	
	II.	Repair parts list	5	
Group	00	Radio Sets AN/FRC-80(V)1, AN/FRC-80(V)2, AN/FRC-80(V)3(1).....	5	1, 2
	01	Receiver-Transmitter Radio RT-986(P)/FRC (1A1).....	13	3-5
	0101	Limiters, Electrical Noise CN-1317/FRC or CN-1345/FRC (1A1A1)	25	6, 7
	0102	Control, Receiver C-8434/FRC (1A1A2)	33	8
	0103	Control, Klystron C-8435/FRC (1A1A3)	37	9
	0104	Amplifier, Modulator AM-6262/FRC (1A1A4)	41	10
	0105	Amplifier, Demodulator AM-6261/FRC (1A1A5) (No parts authorized)		
	0106	Equalizer, Time Delay CN-1320/FRC (1A1A6) (No parts authorized)		
	0107	Mixer-local oscillator-preamplifier (1A1A7)	45	11
	010701	Local oscillator (1A1A7A1)	49	12
	010702	Amplifier, IF (1A1A7A2)	53	13
	010703	Waveguide assembly, mixer (1A1A7A3) (No parts authorized)		
	0108	Condenser, steam surface (1A1A8) (No parts authorized)		
	0109	Waveguide assembly (1A1A9)	57	14
	010901	Detector, frequency monitor (1A1A9A1).....	59	15
	010902	Isolator, radio frequency, reflection (1A1A9AT1) (No parts authorized)		
	010903	Coupler, frequency monitor (1A1A9DC1) (No parts authorized)		
	010904	Cavity, tuned, reference (1A1A9Z1) (No parts authorized)		
	010905	Cavity, tuned, linearized (1A1A9Z2) (No parts authorized)		
	010906	Boiler assembly (1A1A9W1) (No parts authorized)		
	0110	Oven assembly (1A1MP20)	61	16

*This manual supersedes TM 11-5820-785-24P, 25 September 1971.

		Page	Illus Figure
Group	02	Power supply set (1A2).....	63 17
	0201	Power Supply PP-6414/FRC (1A2A1)	67 18
	020101	Comparator, Control C-8437/FRC (1A2A1A1).....	73 19
	0202	Power Supplies PP-6413/FRC or PP-6735/FRC (1A2A2).....	77 20-22
	03	Sensing and control shelf (1A3).....	87 23-26
	0301	Control, Transmitter C-8427/FRC (1A3A1).....	97 27
	0302	Monitor, Transmitter-Receiver ID-1696/FRC (1A3A2)	101 28
	0303	Monitor, Transmitter-Receiver ID-1696/FRC (1A3A3) (Same as group 0302)	
	0304	Amplifier, Audio Frequency, Radio AM-6242/FRC or Switching Unit, Baseband SA-1742/FRC (1A3A4).....	105 29, 30
	030401	Amplifier board (1A3A4A1)	113 31
	0305	Amplifier, Audio Frequency, Radio AM-6242/FRC or Switching Unit, Baseband SA-1742/FRC (1A3A5) (Same as group 0304)	
	0306	Monitor, Transmitter-Receiver ID-1696/FRC (1A3A6) (Same as group 0302)	
	0307	Monitor, Transmitter-Receiver ID-1696/FRC (1A3A7) (Same as group 0302)	
	0308	Control, Transmitter C-8427/FRC (1A3A8) (Same as group 0301)	
	0309	Control, Transmitter, Transfer C-8436/FRC (1A3A9)	117 32
	0310	Relay Assembly RE-1050/FRC (1A3A10).....	121 33
	0311	Test Module, Baseband-Monitoring TS-2996/FRC (1A3A11)	123 34
	0312	Control, Alarm C-8553/FRC (1A3A12).....	127 35
	0313	Limiter, Electrical Noise CN-1346/FRC (1A3A13)	131 36
	0314	Control, Alarm C-8553/FRC (1A3A14) (Same as group 0312)	
	0315	Panel assembly, alarm relay (1A3A15).....	133 37-39
	04	Receiver-Transmitter Radio RT-986(P)/FRC (1A4) (Same as group 01)	
	0401	Limiters, Electrical Noise CN-1317/FRC or CN-1345/FRC (1A4A1) (Same as group 0101)	
	0402	Control, Receiver C-8434/FRC (1A4A2) (Same as group 0102)	
	0403	Control, Klystron C-8435/FRC (1A4A3) (Same as group 0103)	
	0404	Amplifier, Modulator AM-6262/FRC (1A4A4) (Same as group 0104)	
	0405	Amplifier, Demodulator AM-6261/FRC (1A4A5) (Same as group 0105)	
	0406	Equalizer, Time Delay CN-1320/FRC (1A4A6) (Same as group 0106)	
	0407	Mixer-local oscillator-preamplifier (1A4A7) (Same as group 0107)	
	040701	Local oscillator (1A4A7A1) (Same as group 010701)	
	040702	Amplifier, IF (1A4A7A1) (Same as group 010702)	
	040703	Waveguide assembly, mixer (1A4A7A3) (Same as group 010703)	
	0408	Condenser, steam surface (1A4A8) (Same as group 0108)	
	0409	Waveguide assembly (1A4A9) (Same as group 0109)	
	040901	Detector, frequency monitor (1A4A9A1) (Same as group 010901)	
	040902	Isolator, radio frequency, reflection (1A4A9AT1) (Same as group 010902)	
	040903	Coupler, frequency monitor (1A4A9DC1) (Same as group 010903)	
	040904	Cavity, tuned, reference (1A4A9Z1) (Same as group 010904)	
	040905	Cavity, tuned, linearized (1A4A9Z2) (Same as group 010905)	
	040906	Boiler assembly (1A4A9W1) (Same as group 010906)	
	0410	Oven assembly (1A4MP20) (Same as group 0110)	
	05	Power supply set (1A5) (Same as group 02)	
	0501	Power Supply PP-6414/FRC (1A5A1) (Same as group 0201)	
	050101	Comparator, Control C-8437/FRC (1A5A1A1) (Same as group 020101)	
	0502	Power Supplies PP-6413/FRC or PP-6735/FRC (1A5A2) (Same as group 0202)	
	06	Receiver/Transmitter, Orderwire RT-987(V) 1/FRC (1A6).....	141 40, 41
	0601	Receiver, Orderwire R-1661/FRC (1A6A1).....	149 42
	0602	Transmitter, Orderwire T-1162/FRC (1A6A2)	155 43
	0603	Oscillator, Audio Frequency Signal TA-842/FRC (1A6A3).....	161 44
	0604	Coupler, Order Wire-Telephone Circuits CU-1912/FRC (1A6A4)	165 45
	060401	Relay assembly (1A6A4A1).....	167 46
	0605	Indicator-Direct Current Combiner ID-1701/FRC (1A6A5).....	169 47
	0606	Handset H-303/U (1A6A6)	171 48
	07	Panel, Combiner Bypass and Alarm SB-3428/FRC (1A7).....	175 49, 50
	0701	Monitor, Transmitter-Receiver ID-1696/FRC (1A7A1) (Same as group 0302)	
	0702	Monitor, Transmitter-Receiver ID-1696/FRC (1A7A2) (Same as group 0302)	
	0703	Monitor, Transmitter-Receiver ID-1696/FRC (1A7A3) (Same as group 0302)	
	08	Diversity Combiner CV-2692/FRC (1A8) (See TM 11-5805-570-15 for parts)	
	09	Waveguide assembly, transmitter (1A9)	183 51
	0901	Resistor assembly (1A9TB1)	185 52
	0902	Waveguide transmitter switch (1A9Z1)	187 53
	0903	Waveguide transmitter switch (1A9Z2)	189 54
	10	Pre-emphasis and de-emphasis assembly (1A10).....	193 55

		Page	Illus Figure
Group	1001 Amplifier, Pre-Emphasis AM-6480/FRC (1A10A1).....	197	56-58
	1002 Amplifier, Pre-Emphasis AM-6480/FRC (1A10A2) (Same as group 1001)		
	1003 Amplifier, De-Emphasis AM-6490/FRC (1A10A3)	205	59-61
	1004 Amplifier, De-Emphasis AM-6490/FRC (1A10A4) (Same as group 1003)		
11	Rack Assembly, Electrical Equipment MT-4247/FRC or Cabinet, Electrical Equipment CY-7200/FRC (1A11).....	211	62-68
12	Cable assemblies, special purpose (1W2 thru 1W12).....	229	69, 70
13	Isolator, radio frequency (1AT1, 1AT2, 1AT4, 1AT5) (No parts authorized)		
14	Waveguide and tuning assembly (1AT3, 1AT6)	233	71
15	Termination, resistive (1AT7, 1AT8)	235	72
16	Seven section filter assembly (1FL1, 1FL3) (No parts authorized)		
17	Filter assembly (1FL2, 1FL4) (No parts authorized)		
18	Waveguide circulator (1HY1) (No parts authorized)		
19	Waveguide, spacer, H-band (1W1, 1W13) (No parts authorized)		
SECTION III.	Special tools list (Not applicable)		
IV.	National stock number and part number index	236	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/FRC-80(V)1, AN/FRC-80(V)2, and AN/FRC-80(V)3. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	--Item procured and stocked for anticipated or known usage.
PD	--Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XD	--A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	--Support item is removed, replaced, used at the organizational level.
F	--Support item is removed, replaced, used at the direct support level.
H	--Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
F	--The lowest maintenance level capable of complete repair of the support item is the direct support level.
H	--The lowest maintenance level capable of complete repair of the support item is the general support level.
D	--The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	--Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z	--Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
F	--Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.
H	--Reparable item. When uneconomically reparable, condemn and dispose at the general support level.