

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADIO SETS

AN/FRC-154(V)1 (NSN 5820-00-461-0733)
AN/FRC-154(V)2 (NSN 5820-00-461-0736)
AN/FRC-154(V)3 (NSN 5820-00-461-0738)
AN/FRC-154(V)4 (NSN 5820-00-461-0739)
AN/FRC-154(V)5 (NSN 5820-00-461-0740)
AN/FRC-154(V)6 (NSN 5820-00-461-0741)
AN/FRC-154(V)7 (NSN 5820-00-461-0742)
AN/FRC-154(V)8 (NSN 5820-00-461-0751)
AN/FRC-154(V)9 (NSN 5820-00-461-0752)
AN/FRC-154(V)10 (NSN 5820-00-461-0765)
AN/FRC-154(V)11 (NSN 5820-00-461-0821)
AN/FRC-154(V)12 (NSN 5820-00-461-0842)
AN/FRC-154(V)13 (NSN 5820-00-461-0844)
AN/FRC-154(V)14 (NSN 5820-00-461-0856)
AN/FRC-154(V)15 (NSN 5820-00-461-0857)
AN/FRC-154(V)16 (NSN 5820-00-461-0858)
AN/FRC-154(V)17 (NSN 5820-00-461-0859)
AN/FRC-154(V)18 (NSN 5820-00-461-0860)
AN/FRC-154(V)19 (NSN 5820-00-461-0861)
AN/FRC-154(V)20 (NSN 5820-00-461-0862)
AN/FRC-154(V)21 (NSN 5820-00-813-6560)
AN/FRC-154(V)22 (NSN 5820-00-461-0864)
AN/FRC-154(V)23 (NSN 5820-00-222-4637)
AN/FRC-154(V)24 (NSN 5820-00-472-4003)
AN/FRC-154(V)25 (NSN 5820-00-461-0865)
AN/FRC-154(V)26 (NSN 5820-00-461-0866)
AN/FRC-154(V)27 (NSN 5820-00-461-0867)
AN/FRC-154(V)28 (NSN 5820-00-461-0868)

DEPARTMENTS OF THE ARMY AND THE AIR FORCE

APRIL 1979

TECHNICAL MANUAL
No. 11-5820-792-34P

DEPARTMENTS OF THE ARMY

AND THE AIR FORCE

TECHNICAL ORDER
TO 31R5-4-50-74 3

WASHINGTON, DC, 20 April 1979

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADIO SETS**

AN/FRC-154(V)1 (NSN 5820-00-461-0733), AN/FRC-154(V)2 (NSN 5820-00-461-0736),
AN/FRC-154(V)3 (NSN 5820-00-461-0738), AN/FRC-154(V)4 (NSN 5820-00-461-0739),
AN/FRC-154(V)5 (NSN 5820-00-461-0740), AN/FRC-154(V)6 (NSN 5820-00-461-0741),
AN/FRC-154(V)7 (NSN 5820-00-461-0742), AN/FRC-154(V)8 (NSN 5820-00-461-0751),
AN/FRC-154(V)9 (NSN 5820-00-461-0752), AN/FRC-154(V)10 (NSN 5820-00-461-0765),
AN/FRC-154(V)11 (NSN 5820-00-461-0821), AN/FRC-154(V)12 (NSN 5820-00-461-0842),
AN/FRC-154(V)13 (NSN 5820-00-461-0844), AN/FRC-154(V)14 (NSN 5820-00-461-0856),
AN/FRC-154(V)15 (NSN 5820-00-461-0857), AN/FRC-154(V)16 (NSN 5820-00-461-0858),
AN/FRC-154(V)17 (NSN 5820-00-461-0859), AN/FRC-154(V)18 (NSN 5820-00-461-0860),
AN/FRC-154(V)19 (NSN 5820-00-461-0861), AN/FRC-154(V)20 (NSN 5820-00-461-0862),
AN/FRC-154(V)21 (NSN 5820-00-813-6560), AN/FRC-154(V)22 (NSN 5820-00-461-0864),
AN/FRC-154(V)23 (NSN 5820-00-222-4637), AN/FRC-154(V)24 (NSN 5820-00-472-4003),
AN/FRC-154(V)25 (NSN 5820-00-461-0865), AN/FRC-154(V)26 (NSN 5820-00-461-0866),
AN/FRC-154(V)27 (NSN 5820-00-461-0867) and AN/FRC-154(V)28 (NSN 5820-00-461-0868).

Current as of 17 October 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvement using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Material Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, section VI, T.O. 00-5-1. Forward direct to prime ALC/MST. In either case a reply will be furnished direct to you.

Table of Contents

			Illus
		Page	Figure
SECTION	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Radio Set AN/FRC-154(V)i thru 28	5	1
	01 Receiver door assembly (1A1)	11	2

*This manual supersedes so much of TM 11-5820-792-24P, 30 August 1974, as pertains to Direct Support and General Support Repair Parts and Special Tools Lists (Including Depot Maintenance Repair Parts and Special Tools)

	0101	Filters, intermediate frequency (1A1MD1, 1A1MD4)	13	3
	010101	Electronic component assemblies (1A1MD1A1, 1A1MD4A1)	15	4
	010102	Electronic component assemblies (1A1MD1A2, 1A1MD4A2)	17	5
	010103	Electronic component assemblies (1A1MD1A3, 1A1MD4A3)	19	6
	0102	Limiter discriminators (1A1MD2, 1A1MDS)	23	7, 8
	010201	Circuit card assemblies (1A1MD2A3, 1A1MD5A3)	33	9
	0103	Amplifiers, intermediate frequency (1A1MD3, 1A1MD6)	35	10, 11
02		Combiner door assembly (1A2)	45	12
	0201	Detectors, dual (1A2MD1, 1A2MD6)	51	13
	0202	Terminal filter, receiver (1A2MD2)	57	14
	0203	Baseband combiners (1A2MD3, 1A2MD4)	59	15, 16
	0204	Amplifiers, noise (1A2MD5, 1A2MD7)	69	17
03		Meter assembly, electrical (1A3)	75	18
	0301	Electronic component assemblies (1A3A1, 1A3A2)	77	19
	0302	Switch, rotary (1A3A3)	79	20
	0303	Electronic component assembly (1A3AS)	81	21
04		Exciter door assembly (1A4)	85	22
	0401	Modules, automatic frequency control (1A4MD1, 1A4MD3)	91	23
	0402	Adder modules (1A4MD4, 1A4MD6)	97	24, 25
	040201	Electronic component assemblies (1 A4MD4A3, 1 A4MD6A4)	105	26
	0403	Terminal filter, transmitter (1A4MD5)1	09	27
05		Power supply assemblies (1PS1, 1PS2)	111	28-34
	0501	Circuit card assemblies (1PS1PSA2, 1PS2PSA2)	129	35
	0502	Circuit card assemblies (1PS1PSA3, 1PS2PSA3)	131	36
	0503	Circuit card assemblies (1PS1PSA4, 1PSAPS4)	133	37
	0504	Circuit card assemblies (1PS1PSAS, 1PS2PSA5)	135	38
	0505	Circuit card assemblies (1PS1PSA6, 1PS2PSA6)	137	39
	0506	Circuit card assemblies (1PS1PSA8A1, 1PS2PSA8A1)	141	40-43
06		Power supply (1AS)	149	44
	0601	Power supply modules (1A5PS1, 1A5PS2)	155	45
	060101	Circuit card assemblies (1ASPS1A1A1, 1ASPS2A1A1)	161	46
	060102	Circuit card assemblies (1ASPS1A1A2, 1A5PS2A1A2)	163	47
	060103	Circuit card assemblies (1AS1A1A3, 1ASPS2AtA3)	165	48
	060104	Circuit card assemblies (1A5PS1A3A4, 1ASPS2A3A4)	167	49
07		Radio frequency component assembly (1A6)	171	50
	0701	Amplifiers, radio frequency (1A6MD1, 1A6MD2)	177	51
	0702	Electronic component assemblies (1A6MD3, 1A6MD4)	179	52-55
	070201	Electronic component assemblies (1A6MD3A3, 1A6MD4A3)	195	56
	0703	Mixers, microwave (1A6A5, 1A6A6) (No parts authorized)		
	0704	Waveguide assemblies (1A6FL1, 1A6FL2) (No parts authorized)		
	0705	Waveguide assemblies (1A6FL1, 1A6FL2) (No parts authorized)		
	0706	Waveguide assemblies (1A6FL3, 1A6FL4) (No parts authorized)		
	0707	Waveguide assemblies (1A6FL3, 1A6FL4) (No parts authorized)		
	0708	Electronic tubes, klystron (1A6V1, 1A6V2) (No parts authorized)		
	0709	Oscillators, radio frequency (1A6Y1, 1A6Y2, 1A6Y3, 1A6Y4)	197	57
SECTION III		Special tools list (Not applicable)		
IV.		National stock number and part number index	199	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the AN/FRC-154(V) through 28. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	-Item procured and stocked for anticipated or known usage.
XD	-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any item source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	-Support item is removed, replaced, used at the organizational level.
F	-Support item is removed, replaced, used at the direct support level.
H	-Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
F	-The lowest maintenance level capable of complete repair the support item is the direct support level.
H	-The lowest maintenance level capable of complete repair of the support item is the general support level.
Z	-Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows

Recoverability codes	Definition
Z	-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
F	-Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.
H	-Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
D	-Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

c. *National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. *Part Number.* Indicates the primary number used by