 

TECHNICAL MANUAL
DIRECT SUPPORT MAINTENANCE MANUAL
(VOLUME 4)

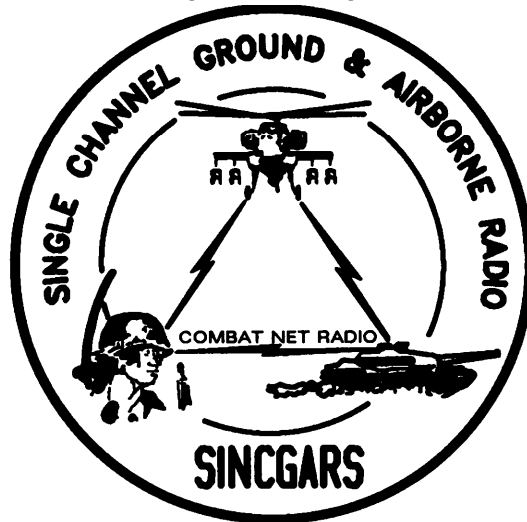

GROUND ICOM RADIO SETS

CONSISTING OF:

RECEIVER-TRANSMITTER, RADIO RT-1523(C)/U (NSN 5895-01-234-8093)
MAINTENANCE GROUP, ELECTRICAL EQUIPMENT OA-9297/GRC (NSN 5820-01-270-3936)
AMPLIFIER-ADAPTER, VEHICULAR
 AM-7239/VRC (NSN 5895-01-188-8819)
 AM-7239B/VRC (NSN 5895-01-334-3164)
AMPLIFIER, RADIO FREQUENCY AM-7238/VRC (NSN 5895-01-195-4844)
CONTROL-MONITOR C-11291/VRC (NSN 5820-01-151-9914)
MOUNTING BASE, ELECTRICAL EQUIPMENT
 MT-6352/VRC (NSN 5975-01-188-8873)
 MT-6353/VRC (NSN 5975-01-235-1962)
 MT-6576/VRC (NSN 5975-01-285-2352)
BATTERY BOX CY-8523A/PRC (NSN 6160-01-284-4200)
ANTENNA BASE, ELECTRICAL EQUIPMENT
 AS-3684/VRC (NSN 5985-01-189-7925)
 AS-3900/VRC (NSN 5985-01-297-2971)
CABLE ASSEMBLY, SPECIAL PURPOSE, ELECTRICAL
 CX-13313/VRC (NSN 5995-01-303-4951)
POWER SUPPLY ADAPTER, VEHICULAR MX-10862/VRC (NSN 6130-01-284-4195)
TRAY, BATTERY CY-8664/VRC (NSN 6160-01-339-7723)
LOUDSPEAKER-CONTROL UNIT LS-671/VRC (NSN 5965-01-222-1420)
FILL DEVICE, ELECTRONIC COUNTER COUNTERMEASURES
 MX-18290/VRC (NSN 5895-01-270-3935)
CONTROL, RECEIVER-TRANSMITTER C-11561(C)/U (NSN 5895-01-277-2680)

Approved for public release; distribution is unlimited.

	INTRODUCTION	PAGE 1-1
	RT-1532(C)/U	PAGE 2-1
	TROUBLESHOOTING	PAGE 2-25
	MAINTENANCE	PAGE 2-201
	OA-9297/GRC	PAGE 3-1
	AM-7239/VRC AM-7239B/VRC	PAGE 4-1
	AM-7238/VRC	PAGE 5-1
	C-11291/VRC	PAGE 6-1
	MT-6352/VRC	PAGE 7-1
	CY-8523A/PRC	PAGE 8-1
	MT-6353/VRC	PAGE 9-1
	AS-3684/VRC AS-3900/VRC	PAGE 10-1
	CX-13313/VRC	PAGE 11-1
	C-11561(C)/U	PAGE 12-1
	MX-10862/VRC	PAGE 13-1
	CY-8664/VRC	PAGE 14-1
	MT-6576/VRC	PAGE 15-1
	LS-671/VRC	PAGE 16-1
	MX-18290/VRC	PAGE 17-1

Direct Support Maintenance Manual

Receiver-Transmitter, Radio RT-1523(C)/U	(NSN 5895-01-234-8093);
Maintenance Group, Electrical Equipment OA-9297/GRC	(NSN 5820-01-270-3936);
Amplifier-Adapter, Vehicular AM-7239/VRC	(NSN 5895-01-188-8819);
Amplifier-Adapter, Vehicular AM-7239B/VRC	(NSN 5895-01-334-3164);
Amplifier, Radio Frequency AM-7238/VRC	(NSN 5895-01-195-4844);
Control-Monitor C-11291/VRC	(NSN 5820-01-151-9914);
Mounting Base, Electrical Equipment MT-6352/VRC	(NSN 5975-01-188-8873);
Battery Box CY-8523A/PRC	(NSN 6160-01-284-4200);
Mounting Base, Electrical Equipment MT-6353/VRC	(NSN 5975-01-235-1962);
Antenna Base, Electrical Equipment AS-3684/VRC	(NSN 5985-01-189-7925);
Antenna Base, Electrical Equipment AS-3900/VRC	(NSN 5985-01-297-2971);
Cable Assembly, Special Purpose, Electrical CX-13313/VRC	(NSN 5995-01-303-4951);
Control, Receiver-Transmitter C-11561(C)/U	(NSN 5895-01-277-2680);
Power Supply Adapter, Vehicular MX-10862/VRC	(NSN 6130-01-284-4195);
Tray, Battery CY-8664/VRC	(NSN 6160-01-339-7723);
Mounting Base, Electrical Equipment MT-6576/VRC	(NSN 5975-01-285-2352);
Loudspeaker-Control Unit LS-671/VRC	(NSN 5965-01-222-1420);
Fill Device, ECCM MX-18290/VRC	(NSN 5895-01-270-3935)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-PS, Fort Monmouth, New Jersey 07703-5000. A reply will be furnished direct to you.

Page

HOW TO USE THIS MANUAL ix

CHAPTER 1	INTRODUCTION	1-1
Section I	General Information	1-1
Section II	Equipment Description and Data	1-3
CHAPTER 2	RECEIVER-TRANSMITTER, RADIO RT-1523(C)/U	2-1
Section I	Principles of Operation	2-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	2-25
Section III	TROUBLESHOOTING PROCEDURES I	2-25
Section IV	MAINTENANCE PROCEDURES	2-201
Section V	Preparation for Storage or Shipment	2-235

*This manual supersedes TM 11-5820-890-30-4, dated 1 October 1989.

CHAPTER 3	MAINTENANCE GROUP, ELECTRICAL EQUIPMENT OA-9297/GRC	3-1
Section I	Principles of Operation	3-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	3-20
Section III	Service Upon Receipt	3-20
Section IV	Preventive Maintenance Checks and Services (PMCS)	3-24
Section V	Troubleshooting Procedures	3-25
Section VI	Maintenance Procedures	3-87
Section VII	Preparation for Storage or Shipment	3-111
CHAPTER 4	AMPLIFIER-ADAPTER, VEHICULAR AM-7239/VRC AND AM-7239B/VRC . . .	4-1
Section I	Principles of Operation	4-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	4-4
Section III	Troubleshooting Procedures	4-4
Section IV	Maintenance Procedures for AM-7239/VRC	4-97
Section V	Maintenance Procedures for AM-7239B/VRC	4-155
Section VI	Preparation for Storage or Shipment	4-204
CHAPTER 5	AMPLIFIER, RADIO FREQUENCY AM-7238/VRC	5-1
Section I	Principles of Operation	5-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	5-4
Section III	Troubleshooting Procedures,	5-4
Section IV	Maintenance Procedures	5-34
Section V	Preparation for Storage or Shipment	5-41
CHAPTER 6	CONTROL-MONITOR C-11291/VRC	6-1
Section I	Principles of Operation	6-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	6-10
Section III	Troubleshooting Procedures.. . . .	6-10
Section IV	Maintenance Procedures	6-45
Section V	Preparation for Storage or Shipment	6-49
CHAPTER 7	MOUNTING BASE, ELECTRICAL EQUIPMENT MT-6352/VRC	7-1
Section I	Principles of Operation	7-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	7-1
Section III	Troubleshooting Procedures.	7-3
Section IV	Maintenance Procedures	7-5
Section V	Preparation for Storage or Shipment	7-22
CHAPTER 8	BATTERY BOX CY-8523A/PRC	8-1
Section I	Principles of Operation	8-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	8-1
Section III	Troubleshooting Procedures.	8-2
Section IV	Maintenance Procedures	8-6
Section V	Preparation for Storage or Shipment	8-21

		Page
CHAPTER 9	MOUNTING BASE, ELECTRICAL EQUIPMENT MT-6353/VRC	9-1
Section I	Principles of Operation	9-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	9-3
Section III	Troubleshooting Procedures	9-3
Section IV	Maintenance Procedures	9-16
Section V	Preparation for Storage or Shipment	9-20
CHAPTER 10	ANTENNA BASE, ELECTRICAL EQUIPMENT AS-3684/VRC; AS-3900/VRC	10-1
Section I	Principles of Operation	10-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	10-1
Section III	Troubleshooting Procedures	10-2
Section IV	Maintenance Procedures	10-7
Section V	Preparation for Storage or Shipment	10-7
CHAPTER 11	CABLE ASSEMBLY, SPECIAL PURPOSE, ELECTRICAL CX-13313/VRC	11-1
Section I	Principles of Operation	11-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	11-1
Section III	Troubleshooting Procedures	11-2
Section IV	Maintenance Procedures	11-5
Section V	Preparation for Storage or Shipment	11-5
CHAPTER 12	CONTROL, RECEIVER-TRANSMITTER C-11561(C)/U	12-1
Section I	Principles of Operation	12-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	12-22
Section III	Troubleshooting Procedures	12-23
Section IV	Maintenance Procedures	12-147
Section V	Preparation for Storage or Shipment	12-170
CHAPTER 13	POWER SUPPLY ADAPTER, VEHICULAR MX-10862/VRC	13-1
Section I	Principles of Operation	13-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	13-3
Section III	Troubleshooting Procedures	13-3
Section IV	Maintenance Procedures	13-27
Section V	Preparation for Storage or Shipment	13-76
CHAPTER 14	TRAY,BATTERY CY-8664/VRC	14-1
Section I	Principles of Operation	14-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment	14-2
Section III	Troubleshooting Procedures	14-3
Section IV	Maintenance Procedures	14-18
Section V	Preparation for Storage or Shipment	14-40

	Page
CHAPTER 15	MOUNTING BASE, ELECTRICAL EQUIPMENT MT-6576/VRC 15-1
Section I	Principles of Operation 15-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment 15-2
Section III	Troubleshooting Procedures 15-2
Section IV	Maintenance Procedures 15-5
Section V	Preparation for Storage or Shipment 15-22
CHAPTER 16	LOUDSPEAKER-CONTROL UNIT LS-671/VRC 16-1
Section I	Principles of Operation 16-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment 16-3
Section III	Troubleshooting Procedures 16-3
Section IV	Maintenance Procedures 16-24
Section V	Preparation for Storage or Shipment 16-31
CHAPTER 17	FILL DEVICE, ECCM MX-18290/VRC 17-1
Section I	Principles of Operation 17-1
Section II	Repair Parts, Special Tools, TMDE, and Support Equipment 17-2
Section III	Troubleshooting Procedures 17-2
Section IV	Maintenance Procedures 17-7
Section V	Preparation for Storage or Shipment 17-7
APPENDIX A	REFERENCES A-1
APPENDIX B	TORQUE REQUIREMENTS B-1
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS FOR MAINTENANCE GROUP OA-9297/GRC C-1
APPENDIX D	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST D-1
APPENDIX E	GLOSSARY E-1
Section I	Abbreviations E-1
Section II	Unusual Terms E-5
ALPHABETICAL INDEX	 Index 1

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1	RT-1523 Series Radio Components	1-0
2-1	RT Functional Sections Block Diagram	2-2
2-2	Repartitioning of Functional Sections	2-3
2-3	Control Section Module Locations	2-5
2-4	RF Section Module Locations	2-6
2-5	ICOM I/O Section Module Locations	2-7
2-6	Power Supply Location	2-8
2-7	Power Supply Functional Block Diagram	2-9

LIST OF ILLUSTRATIONS (Continued)

Figure	Title	Page
2-8	RT Chassis External Connectors	2-11
2-9	Antenna Connector Schematic	2-13
2-10	FH Block Diagram	2-19
2-11	The Troubleshooting Process for the RT	2-26
2-12	Operational Check Test Setup Diagram	2-29
2-13	RT Module Locations	2-205
2-14	Module Screw Locations	2-208
2-15	RF Cable Locations	2-212
2-16	RT Front Panel Keypad	2-219
2-17	Front View of RT Front Panel Assembly	2-221
2-18	Rear View of RT Front Panel Assembly	2-222
2-19	Threaded Screw Insert Replacement	2-234
2-20	Packing Static Sensitive Modules	2-236
3-1	Test Adapter Front Panel	3-3
3-2	Test Cables	3-5
3-3	Test Adapter Interaction Block Diagram	3-17
3-4	Test Adapter Power Supply	3-18
3-5	Assembly and Installation of Reference Fixture	3-22
3-6	Operational Check Test Setup Diagram	3-28
3-7	Maintenance Group Pretroubleshooting Test Setup	3-39
3-8	REF RT Troubleshooting Test Setup	3-51
3-9	Control-Monitor Troubleshooting Test Setup	3-53
3-10	Impedance Matching Test Setups	3-71
3-11	Threaded Screw Insert Replacement	3-89
3-12	Test Adapter Front Panel Repair	3-91
4-1	Audio Amplifier Block Diagram	4-3
4-2	Amplifier-Adapter Test Setup.	4-6
4-3	Shorting Bar Installation	4-99
4-4	Power Supply Replacement.	4-101
4-5	Vehicular Amplifier-Adapter AM-7239/VRC (Exploded View)	4-102
4-6	Audio Amplifier CCA Replacement	4-104
4-7	Transistor Q1 Replacement.	4-105
4-8	Replacement of Components in Audio Amplifier Chassis	4-108
4-9	Maintenance of Audio Amplifier Chassis Case	4-120
4-10	Replacement of Components in Power Control Chassis	4-126
4-11	Disassembled View of Mounting Adapter AM-7239/VRC	4-133
4-12	Maintenance of Power Control Chassis Case	4-139
4-13	Disassembled View of Power Supply Chassis	4-143
4-14	Disassembled View of Mounting Adapter AM-7239B/VRC	4-158
4-15	Removal and installation of Audio Amplifier Chassis Components	4-161
4-16	Replacement of Components in Audio Amplifier Chassis	4-164
4-17	Removal and Installation of Audio Amplifier Chassis	4-172
4-18	Maintenance of Audio Amplifier Chassis Case	4-173
4-19	Replacement of Components in Power Control Chassis	4-176
4-20	Disassembled View of Mounting Adapter AM-7239B/VRC	4-182
4-21	Maintenance of Power Control Chassis Case	4-188
4-22	Disassembled View of Power Supply Chassis	4-190

LIST OF ILLUSTRATIONS (Continued)

Figure	Title	Page
4-23	Replacement of Power Supply Cover Gasket	4-200
4-24	Packing Static Sensitive Modules.	4-205
5-1	Power Amplifier Block Diagram	5-2
5-2	RF Power Amplifier Test Setup	5-6
5-3	Reference RF Output Test Setup	5-8
5-4	RF Output Test Setup	5-10
5-5	Test Point Locations for Decoder Control (6A2)	5-14
5-6	Test Point Locations in Power Amplifier Case (6A1)	5-15
5-7	Test Point Locations for Power Amplifier Heat Sink (6A3)	5-16
5-8	RF Output (dBm) Troubleshooting Test Setup	5-19
5-9	RF Output (Vdc) Troubleshooting Test Setup	5-20
5-10	VSWR Adjustment Troubleshooting Test Setup	5-32
5-11	Power Amplifier (Exploded View)	5-36
5-12	Packing Static Sensitive Modules	5-42
6-1	Control-Monitor Functional Block Diagram	6-2
6-2	Microcontroller Functional Block Diagram	6-3
6-3	Decoder/Timer Functional Block Diagram	6-5
6-4	Analog Module Functional Block Diagram	6-7
6-5	Power Supply Functional Block Diagram	6-8
6-6	Analog Check Timing	6-9
6-7	Control-Monitor Test Setup	6-13
6-8	Operation with Radio Test Setup	6-16
6-9	Control-Monitor Module Locations	6-48
6-10	Packing Static Sensitive Modules	6-50
7-1	Electrical Connector Assembly Schematic Diagram	7-2
7-2	Electrical Connector Assembly (Exploded View)	7-4
7-3	Threaded Screw Insert Replacement	7-20
8-1	Battery Box Schematic Diagram	8-2
8-2	Battery Box Troubleshooting Test Setup	8-5
8-3	Battery Box CY-8523A/PRC (Exploded View)	8-8
9-1	PA Mount Schematic Diagram	9-2
9-2	PA Mount Test Setup	9-5
9-3	Diode CR2 Position on Relay K1	9-17
9-4	PA Mount	9-17
9-5	Mounting Bracket with CR1, VR1, VR2, CR3, and R1	9-18
10-1	AS-3684 Antenna Base Test Setup	10-4
10-2	AS-3900 Antenna Base Test Setup	10-6
11-1	CX-13313/VRC Cable Schematic Diagram	11-4

LIST OF ILLUSTRATIONS (Continued)

Figure	Title	Page
12-1	RCU Functional Sections Block Diagram	12-2
12-2	RCU Partitioning of Functional Sections	12-3
12-3	Control Section Module Locations.	12-4
12-4	ICOM I/O Section Module Locations	12-6
12-5	Speaker Amplifier Section Module Locations	12-10
12-6	Power Supply Location	12-11
12-7	Power Supply Functional Block Diagram	12-12
12-8	Front Panel/Chassis External Connectors	12-14
12-9	The Troubleshooting Process for the RCU	12-24
12-10	Operational Check Test Setup Diagram	12-27
12-11	RCU Parent Board Connectors	12-47
12-12	RCU Module Locations	12-150
12-13	Module Screw Locations	12-152
12-14	RCU Front Panel Keypad	12-156
12-15	Front View of RCU Front Panel Assembly	12-160
12-16	Rear View of RCU Front Panel Assembly	12-161
12-17	Packing Static Sensitive Modules	12-171
13-1	Power Supply Adapter Test Setup	13-4
13-2	Power Supply Adapter (Front and Bottom Views)	13-29
13-3	Power Supply Adapter (Left Side View) With Heat Sink Assembly	13-30
13-4	Power Supply Adapter (Rear View) With Rear Access Cover	13-32
13-5	Power Supply Adapter (Rear View) Without Rear Access Cover	13-43
13-6	Power Supply Adapter (Bottom View) Without Heat Sink Assembly	13-50
13-7	Rear Access Cover Assembly on Power Supply Adapter	13-61
13-8	Power Supply Adapter Chassis Assembly (Left Side Cutout View) Without Heat Sink Assembly.	13-64
13-9	Power Supply Adapter Chassis Assembly (Front View)	13-65
13-10	Power Supply Adapter Chassis Assembly (Bottom View) Without Heat Sink Assembly.	13-67
13-11	Power Supply Adapter Chassis Assembly (Rear View) Without Rear Access Cover	13-69
13-12	Packing Static Sensitive Modules	13-77
14-1	Battery Tray Test Setup	14-4
14-2	Battery Tray Test Points	14-6
14-3	Battery Tray Assembly With Mounting Plate	14-19
14-4	Battery Tray Subassembly With Mounting Plate	14-21
14-5	Battery Tray Subassembly Without Mounting Plate and Battery Tray Gasket.	14-22
14-6	Battery Tray Subassembly With Internal Wiring Harness	14-30
14-7	Threaded Screw Insert Replacement	14-39
14-8	Packing Static Sensitive Modules	14-41
15-1	SRM Mounting Base	15-1
15-2	Electrical Connector Assembly Schematic Diagram	15-3
15-3	Electrical Connector Assembly (Exploded View)	15-4
15-4	Threaded Screw Insert Replacement	15-20

LIST OF ILLUSTRATIONS (Continued)

Figure	Title	Page
16-1	Loudspeaker and External Components	16-2
16-2	LS-671/VRC Test Setup	16-4
16-3	Speaker CCA Test points	16-8
16-4	Loudspeaker-Control Unit LS-671/VRC (Front and Rear Views)	16-25
17-1	MX-18290/VRC Test Setup	17-4
17-2	RT Test Setup	17-6
C-1	Maintenance Group OA-9297/GRC	C-3
C-2	Interconnecting Device J-4501/GRC	C-6
C-3	Electronic Equipment Tool Kit	C-16
C-4	Electronic Equipment Parts Kit	C-20
FO-1	RT RF Receive Signal Path Functional Block Diagram	FP-1
FO-2	RT RF Transmit Signal Path Functional Block Diagram	FP-3
FO-3	RT Audio Receive Signal Path Functional Block Diagram	FP-5
FO-4	RT Audio Transmit Signal Path Functional Block Diagram	FP-7
FO-5	RT Data Receive Signal Path Functional Block Diagram	FP-9
FO-6	RT Data Transmit Signal Path Functional Block Diagram	FP-11
FO-7	RT Primary Control Signals	FP-13
FO-8	RT Self-Test Signal Path Functional Block Diagram	FP-15
FO-9	RT Retransmit Signal Path Functional Block Diagram	FP-17
FO-10	RT Remote Control Receive Signal Path Functional Block Diagram	FP-19
FO-11	RT Cipher Text Receive Signal Path Functional Block Diagram	FP-23
FO-12	RT Cipher Text Transmit Signal Path Functional Block Diagram	FP-25
FO-13	RT Parent Board Connectors	FP-27
FO-14	Amplifier-Adapter, Vehicular AM-7239/VRC Schematic Diagram	FP-29
FO-15	Amplifier-Adapter, Vehicular AM-7239B/VRC Schematic Diagram	FP-31
FO-16	Power Amplifier Block Diagram	FP-33
FO-17	Control-Monitor C-11291/VRC Schematic Diagram	FP-35
FO-18	Control-Monitor Parent Board and Display Board	FP-37
FO-19	Test Adapter Schematic Diagram	FP-39
FO-20	RCU Analog Receive Signal Path Functional Block Diagram	FP-41
FO-21	RCU Analog Transmit Signal Path Functional Block Diagram	FP-43
FO-22	RCU Digital Data Receive Signal Path Functional Block Diagram	FP-45
FO-23	RCU Digital Data Transmit Signal Path Functional Block Diagram	FP-47
FO-24	RCU Speaker Operation Functional Block Diagram	FP-49
FO-25	RCU Primary Control Signals Functional Block Diagram	FP-51
FO-26	RCU Self-Test Signal Path Functional Block Diagram	FP-53
FO-27	Fill Operation Signal Path Functional Block Diagram	FP-55
FO-28	Power Supply Adapter MX-10862/VRC Schematic Diagram	FP-57
FO-29	Battery Tray CY-8664/VRC Schematic Diagram	FP-59
FO-30	Loudspeaker-Control Unit LS-671/VRC Schematic Diagram	FP-61

LIST OF TABLES

Table	Title	Page
2-1	Power Supply Output Voltages	2-8
2-2	Power Supply Output Destinations	2-10
2-3	Threaded Screw Inserts	2-233
3-1	Test Adapter Switches	3-18
3-2	Test Adapter Continuity Checks	3-43
3-3	Threaded Screw Inserts	3-87
12-1	ICOM Power Supply Output Destinations	12-7
12-2	Primary Black Power Destinations	12-10
12-3	Power Supply Output Voltages	12-11
12-4	Power Supply Output Destinations	12-13

HOW TO USE THIS MANUAL

 
This manual is divided into 17 chapters. Chapter 1 is an introduction to the equipment. Chapters 2 through 17 are about the units maintained by Direct Support (DS) Maintenance. Each chapter begins with an index to the sections. Most of the sections also begin with indexes.

How to Find Something Fast. Check the index on the front cover. The sections you will use most often are boxed on the front cover. The boxes line up with edge marks on the pages. If you need something that is not listed there, use the alphabetical index in the back of this manual.


Operating Procedures and Unit Maintenance Instructions. Procedures for operating the equipment are not included in this manual. You should read the Operator's Manual TM 11-5820-890-10-1 and be familiar with the procedures in it prior to performing DS maintenance. Also, the information in the Unit Maintenance Manual TM 11-5820-890-20-1 is not repeated in this Direct Support Maintenance Manual.

Read all preliminary material found at the beginning of each procedure. It has important information and safety instructions you must follow before beginning work.


Warning pages are at the beginning of this manual. You should learn the warnings before doing maintenance on the equipment. Always follow appropriate safety procedures and precautions.

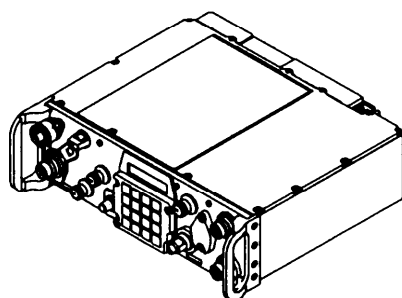

 
**RECEIVER-TRANSMITTER,
RADIO
RT-1523(C)/U**

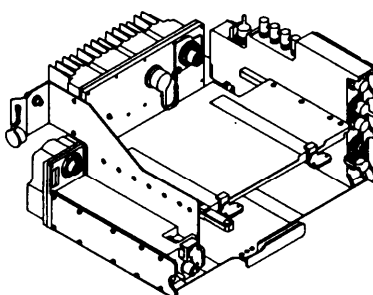

 
**AMPLIFIER-ADAPTER,
VEHICULAR
AM-7239B/VRC**

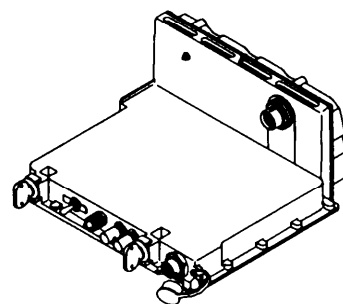


**ADAPTER, POWER SUPPLY
MX-10862/VRC**

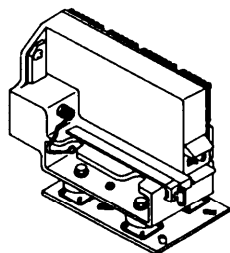 

 
**MOUNTING BASE,
ELECTRICAL EQUIPMENT
MT-6353/VRC**

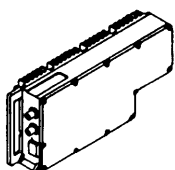

 
**AMPLIFIER, RADIO
FREQUENCY
AM-7238/VRC**

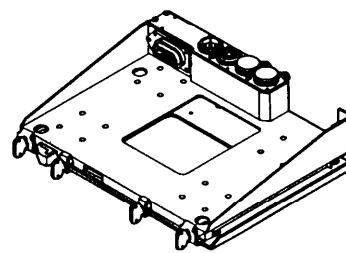

 
**MOUNTING BASE,
ELECTRICAL EQUIPMENT
MT-6352/VRC**

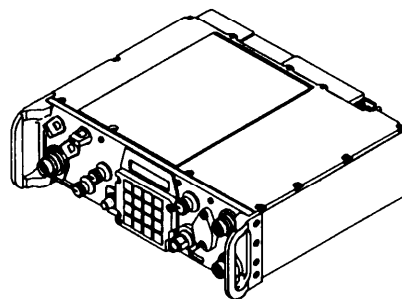

 
**CONTROL,
RECEIVER-TRANSMITTER
C-11561(C)/U**

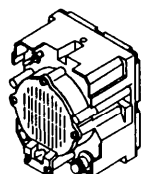

 
**LOUDSPEAKER-
CONTROL UNIT
LS-671/VRC**

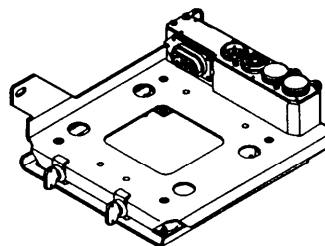

 
**MOUNTING BASE,
ELECTRICAL EQUIPMENT
MT-6576/VRC**

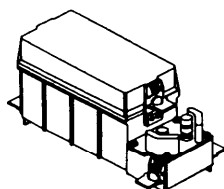


**BATTERY BOX
CY-8523A/PRC**

 


**FILL DEVICE, ECCM
MX-18290/VRC**

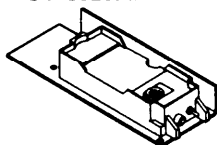 

**TRAY, BATTERY
CY-8664/VRC**

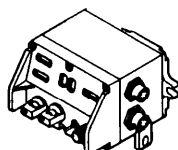 

**CONTROL-
MONITOR
C-11291/VRC**

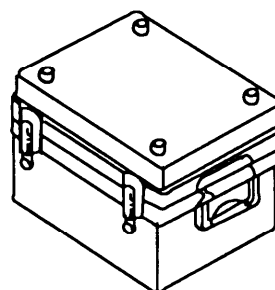 

**MAINTENANCE GROUP
OA-9297/GRC**



**ANTENNA,
VEHICULAR
AS-3900/VRC
EL7XL1501A**

Figure 1-1. RT-1523 Series Radio Components

CHAPTER 1

INTRODUCTION

Subject	Section	Page
General Information	I	1-1
Equipment Description and Data	II	1-3

OVERVIEW

This chapter provides general information about the communication-electronics (C-E) items of equipment that make up the RT-1523 series of radio sets.

The principles of operation and specific maintenance instructions for the RT and the maintenance group are included in the maintenance chapters.

Section I. GENERAL INFORMATION

Subject	Para	Page
Scope	1-1	1-1
Consolidated Index of Army Publications and Blank Forms	1-2	1-2
Maintenance Forms, Records, and Reports	1-3	1-2
Reporting Equipment Improvement Recommendations (EIR)	1-4	1-2
Administrative Storage	1-5	1-2
Destruction of Army Electronics Materiel to Prevent Enemy Use	1-6	1-2
Nomenclature Cross-Reference List	1-7	1-2

1-1. SCOPE.

Type of Manual: This manual covers the direct support level of maintenance for the RT-1523 series of radio sets. The following equipment is covered:

Model Numbers and Equipment Names:

- Receiver-Transmitter, Radio RT-1523(C)/U
- Maintenance Group, Electrical Equipment OA-9297/GRC
- Amplifier-Adapter, Vehicular AM-7239/VRC* or AM-7239B/VRC
- Amplifier, Radio Frequency AM-7238/VRC
- Control-Monitor C-11291/VRC
- Mounting Base, Electrical Equipment MT-6352/VRC
- Battery Box CY-8523A/PRC
- Mounting Base, Electrical Equipment MT-6353/VRC
- Antenna Base, Electrical Equipment AS-3684/VRC* or AS-3900/VRC
- Cable Assembly, Special Purpose, Electrical CX-13313/VRC*
- Control, Receiver-Transmitter C-11561(C)/U
- Power Supply Adapter, Vehicular MX-10862/VRC
- Tray, Battery CY-8664/VRC
- Mounting Base, Electrical Equipment MT-6576/VRC
- Loudspeaker-Control Unit LS-671/VRC
- Fill Device, ECCM MX-18290/VRC

The listed components, except those noted with an asterisk, are shown in figure 1-1.

Purpose of Radio Sets: The purpose of the RT-1523 series of radio sets is to provide short-range, two-way radio communication in the 30 to 87.975 MHz range, using frequency-modulated (FM) transmission and reception.

1-2. CONSOLIDATED INDEX OF ARMY PUBLICATIONS AND BLANK FORMS.

Refer to the latest issue of DA Pam 25-30 to determine whether there are new editions, changes, or additional publications pertaining to the equipment.

1-3. MAINTENANCE FORMS, RECORDS, AND REPORTS.

- a. **Reports of Maintenance and Unsatisfactory Equipment.** Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750 as contained in Maintenance Management Update.
- b. **Reporting of Item and Packaging Deficiencies.** Fill out and forward a Report of Discrepancy (ROD) (SF 364) as prescribed by AR 735-11-2/DLAR 4140.55/SECNAVINST 4355.18/AFR 400-54/MCO 4430.3J.
- c. **Reporting of Transportation Discrepancies.** Fill out and forward a Transportation Discrepancy Report (TDR) (SF 361) as prescribed by AR 55-38/NAVSUPINST 4610.33C/AFR 75-18/MCO P4610.19D/DLAR 4500.15.

1-4. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR).

If your RT-1523 radio set component needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about the design or performance. Put it on an SF 368 (Product Quality Deficiency Report). Mail it to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-PA-MA-D, Fort Monmouth, New Jersey, 07703-5000. We'll send you a reply.

1-5. ADMINISTRATIVE STORAGE.

Administrative storage of equipment issued to and used by Army activities will have preventive maintenance performed in accordance with the PMCS charts before storing. When removing the equipment from administrative storage, the PMCS should be performed to insure operational readiness. Disassembly and repacking of equipment for shipment or limited storage are covered in paragraphs 2-54, 3-42, 4-79, 5-23, 6-25, 7-18, 8-25, 9-19, 10-11, 11-11, 12-41, 13-42, 14-34, 15-18, 16-22, and 17-12.

1-6. DESTRUCTION OF ARMY ELECTRONICS MATERIEL TO PREVENT ENEMY USE.

Destruction of Army C-E to prevent enemy use shall be in accordance with TM 750-244-2.

1-7. NOMENCLATURE CROSS-REFERENCE LIST.

This list contains common names used throughout this manual in place of official nomenclature.

Common Name	Official Nomenclature
Battery box	Battery Box CY-8523A/PRC
Battery tray	Tray, Battery CY-8664/VRC
Control-monitor	Control-Monitor C-11291/VRC
Frequency counter	Frequency Counter TD-1225(V)1/U
DMM	Digital Multimeter AN/USM-486