

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST**

FOR

**RADIO SET AN/ARC-54
(NSN 5821-00-082-3598)**

TECHNICAL MANUAL

No. 11-5821-244-20P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 27 December 1985

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST**

FOR

**RADIO SET AN/ARC-54
(NSN 5821-00-082-3598)**

Current as of 22 August 1985

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-ME-MP, Fort Monmouth, New Jersey 07703-5007. A reply will be furnished direct to you.

TABLE OF CONTENTS

	Page	Illus Figure
Section I. Introduction	1	
II. Repair Parts List	5	
Group 01 Radio Set AN/ARC-54	5	1
0101 Control, Radio Set C-1636/ARC-54	9	2
0102 Receiver-Transmitter, Radio RT-348/ARC-54	11	3
01020107 R. F. Chassis Subassembly	15	4
0102010701 R. F. Chassis	19	5
010202 Fixed I F Amplifier	21	6
0103 Mounting MT-1535/ARC-54.. . . .	23	7
0104 Connector Assembly	25	8
Section III. Special Tools List (Not Applicable)		
IV. National Stock Number and Part Number Index	27	

*This manual supersedes TM 11-5821-244-20P, 30 March 1971.

SECTION I
INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the Radio Set AN/ARC-54. It authorizes requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. *Repair Parts List*. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. *Special Tools List*. Not applicable.

c. Section IV. *National Stock Number and Part Number Index*. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number*. Indicates the figure number of the illustration on which the item is shown.

(2) *Item number*. The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes*.

(1) *Source code*. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XB	Item included in both a depot overhaul/repair kit and a maintenance kit.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750-1.

(2) *Maintenance code*. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

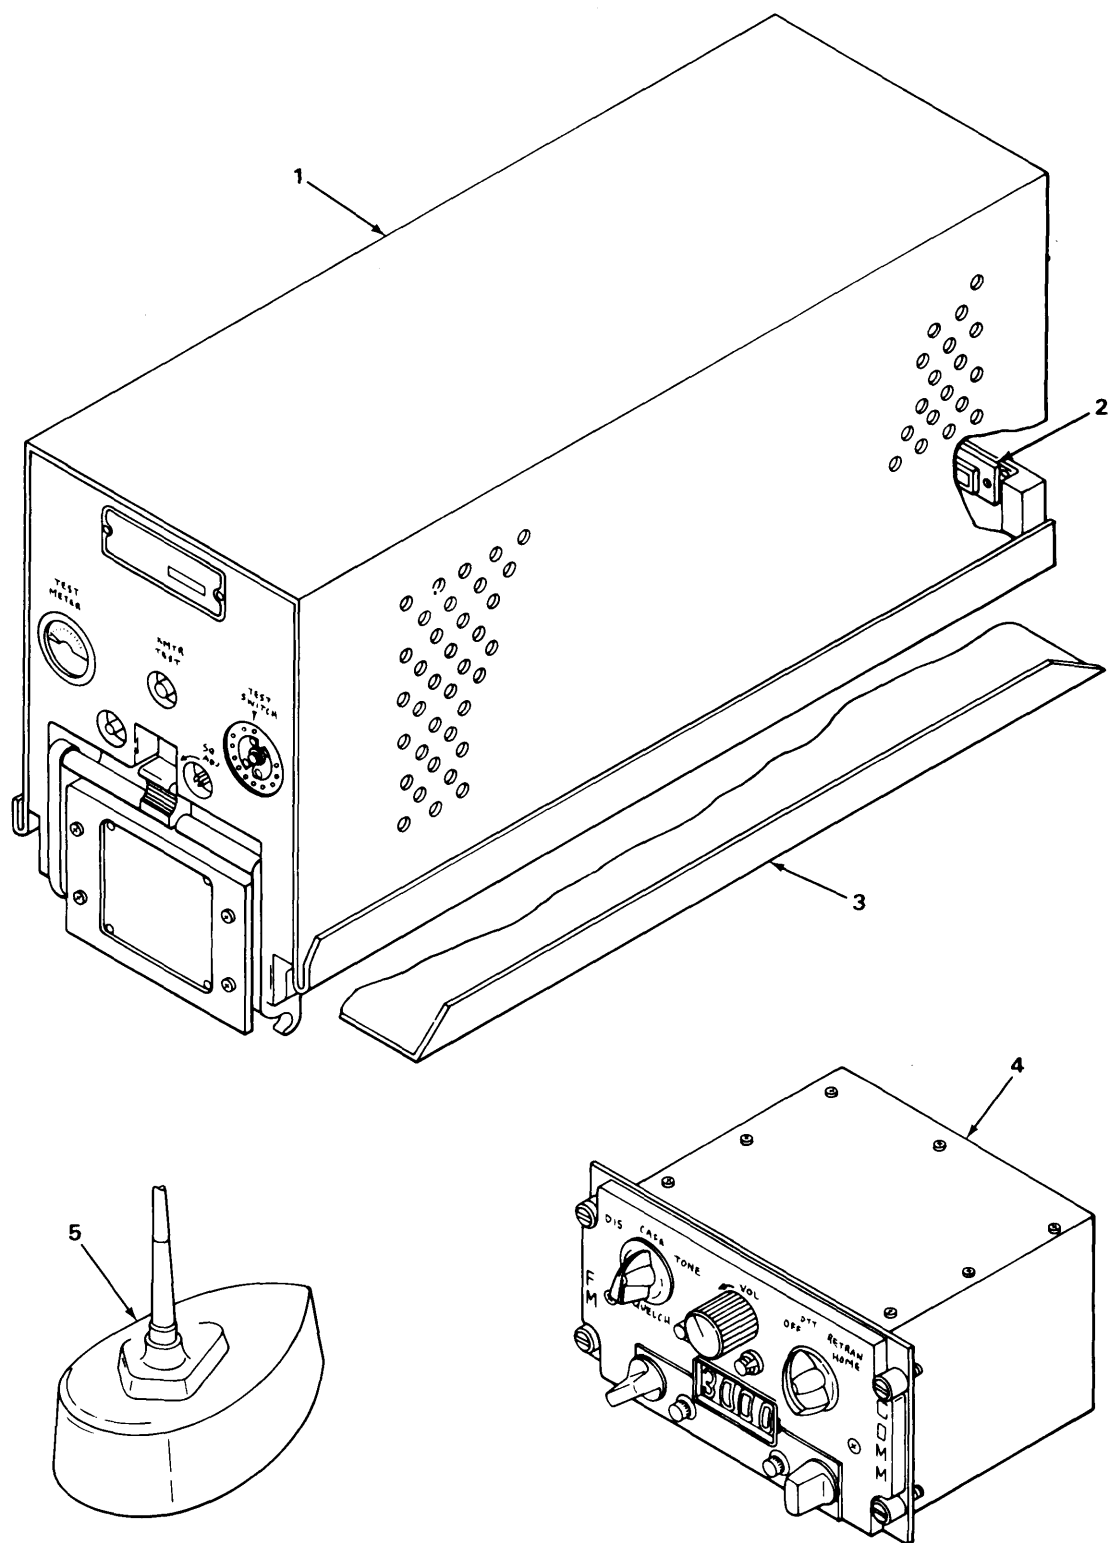


Figure 1. Radio Set AN/ARC-54.

SECTION 11				REPAIR PARTS LIST		IM11-5821-244-20P	(7)	(8)
(1)	(2)	(3)		(4)	(5)	(6)		
ILLUSTRATION						DESCRIPTION		
(a)	(b)		NATIONAL					
FIG	ITEM	SMR	STOCK	FSCM	PART		USABLE ON CODE	QTY
NO	NO	CODE	NUMBER		NUMBER			INC
								IN
								UNIT
GROUP 01 RADIO SET AN/ARC-54								
1	1	XBOFF		80063	SM-D-549669	REC-TRANS RADIO (SEE FIGURE 3 FOR BREAKDOWN)	EA	1
1	2	PAUFF	5935-00-695-4914	80063	SMB504/09	CONNECTOR ASSEMBLY (SEE FIGURE 7 FOR BREAKDOWN)	EA	1
1	3	XBOFF		80063	SM-B-506292	MOUNTING ASSEMBLY (SEE FIGURE 6 FOR BREAKDOWN)	EA	1
1	4	XBOFF		80063	SM-B-506294	CONTROL RADIO SET (SEE FIGURE 2 FOR BREAKDOWN)	EA	1
1	5	XBOFF		80063	SM-B-381497	COUPLER, ANTENNA	EA	1