

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

FOR

RADIO SET AN/ARC-102 (NSN 5821-00-050-8255)

HEADQUARTERS, DEPARTMENT OF THE ARMY
19 OCTOBER 1981

TECHNICAL MANUAL }
No. 11-5821-248-20P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 19 October 1981

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS FOR RADIO SET AN/ARC-102 (NSN 5821-00-050-8255)

Current as of 28 May 1981

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publication and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications-Electronics Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07708.

In either case, a reply will be furnished direct to you.

Table of Contents

	Page	Illus Figure
SECTION I. Introduction	1	
II. Repair Parts List	5	
GROUP 00. Radio Set AN/ARC-102	5	1
01 Receiver-Transmitter RT-698/ARC-102 (No parts authorized)		
0101 Chassis Assembly	7	2
010101 Delay circuit (No parts authorized)		
010102 Cable Assembly, Radiofrequency (No parts authorized)		
010103 Cable Assembly, Radiofrequency (No parts authorized)		
010104 Control Subassembly (No parts authorized)		
0102 Frequency Divider Module (No parts authorized)		
010201 Frequency Divider Circuit Card Assembly (No parts authorized)		
0103 Oscillator, Radiofrequency Module (No parts authorized)		
0104 Intermediate Frequency Translator Module (No parts authorized)		
010401 Translator Subassembly (No parts authorized)		
0105 Kiloherzt Frequency Stabilizer Module Module (No parts authorized)		
0106 Low Voltage Power Supply Module (No parts authorized)		
0107 Amplifier (No parts authorized)		
010701 Amplifier Subassembly (No parts authorized)		
0108 High Voltage Power Supply Module (No parts authorized)		
0109 Audio Frequency Amplifier Module (No parts authorized)		
010901 Amplifier Subassembly (No parts authorized)		
0110 Megacycle Frequency Stabilizer Module (No parts authorized)		
0111 Amplifier, Radiofrequency (No parts authorized)		
011101 Amplifier Subassembly (No parts authorized)		
011102 Amplifier Subassembly (No parts authorized)		
011103 Amplifier Subassembly (No parts authorized)		
011104 Amplifier Subassembly (No parts authorized)		
011105 Detector Subassembly (No parts authorized)		
0112 Radiofrequency Translator (No parts authorized)		
011201 Autopositioners Submodule (No parts authorized)		
011202 Radio frequency Switch Assembly (No parts authorized)		
02 Radio Set Control C-3940/ARC-94	9	8
0201 Rotating counter (No parts authorized)		
03 Power Inverter Mounting PP-3702/ARC-102 (No parts authorized)		
04 Static Inverter (No parts authorized)		
SECTION III Special Tools List (Not applicable)		
IV. National Stock Number and Part Number Index	10	

*This manual supersedes TM 11-5821-248-20P, 30 September 1976.

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/ARC-102. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item tailed out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code

PA— Item procured and stocked for anticipated or known usage.

Definition

NOTE

Cannibalization or salvage may be used as a source of 'supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code

Application/Explanation

O — Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code

Application/Explanation

H— The lowest maintenance level capable of complete repair of the support item is the general support level.

Z— Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows: