

ARMY
NAVY
AIR FORCE

TM 11-5411-211-24P-1
EE996-AA-PLL-020/E154 S640
TO 35E4-172-4-2

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL
SUPPORT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LIST**

FOR

**SHELTER, ELECTRONIC EQUIPMENT
STORAGE S-640/G
(NSN 5411-01-127-6854)**

DEPARTMENTS OF THE ARMY, THE NAVY, AND THE AIR FORCE

7 FEBRUARY 1985

TECHNICAL MANUAL
No. 11-5411-211-24P-1
TECHNICAL MANUAL
EE996-AA-PLL-020/E154 S640
TECHNICAL ORDER
No. TO 35E4-172-4-2

DEPARTMENTS OF THE ARMY,
THE NAVY, AND THE AIR FORCE

WASHINGTON, DC, 7 February 1985

**ORGANIZATIONAL, DIRECT SUPPORT. AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
SHELTER, ELECTRONIC EQUIPMENT STORAGE
S-640/G (NSN 5411-01-127-6854)
Current as of 23 January 1985**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-ME-MP, Fort Monmouth, NJ 07703-5007.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to prime ALC/MST.

For Navy, mail comments to the Commander, Naval Electronics Systems Command, ATTN: ELEX 8122, Washington, DC 20360.

In either case, a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I. Introduction.....	1	
	II. Repair Parts List.....	5	
GROUP	00 Shelter, Electronic Equipment Storage S-6401G (Roadside and Rear Wall)	5	1
	Shelter, Electronic Equipment Storage S-640/G (Curbside, Front Wall, Floor and Ceiling) .	9	2
	01 Bracket Installation (Roadside and Rear Wall)	15	3
	Bracket Installation (Floor)	19	4
	0101 Utilities Installation, Electrical.....	23	5
	010101 Raceway Installation.....	29	6
	01010101 Shelter S-280 COG, Modified (See TM 11-5410-213-15P and TB 750-240)		
	01010102 Power Entrance Box (208V-3)	33	7
	01010103 Power Distribution Box (208V-3).....	37	8
	01010104 Main Line Power Filter Box	39	9
	01010105 Blower Assembly Installation.....	41	10
	02 Telephone Set TA-3121T (See TM 11-5805-201-34P)		
	03 Heater	45	11
	04 Intercom Station LS 147F/F1 (See TM 11-5830-256-23P)		
	05 Dehumidifier (See commercial literature)		
	06 Power Cable.....	49	12
SECTION	III. Special Tools Listed (Not applicable)		
	IV. National Stock Number and Part Number Index	51	

***This manual supersedes TM 11-5411-24P-1, 23 July 1984.**

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the S-6401G. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts listed are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequences. Bulk materials are listed in NSN sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NWN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PD	Support item, excluding support equipment,

*Code**Definition*

procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

XB - Item is not procured or stocked. If not available through salvage, requisition.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750-1.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:


Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.
F	Support item is removed, replaced, used at the direct support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
F	The lowest maintenance level capable of complete repair of the support item is the direct support level.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	Nonreparable. No repair is authorized.


(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.

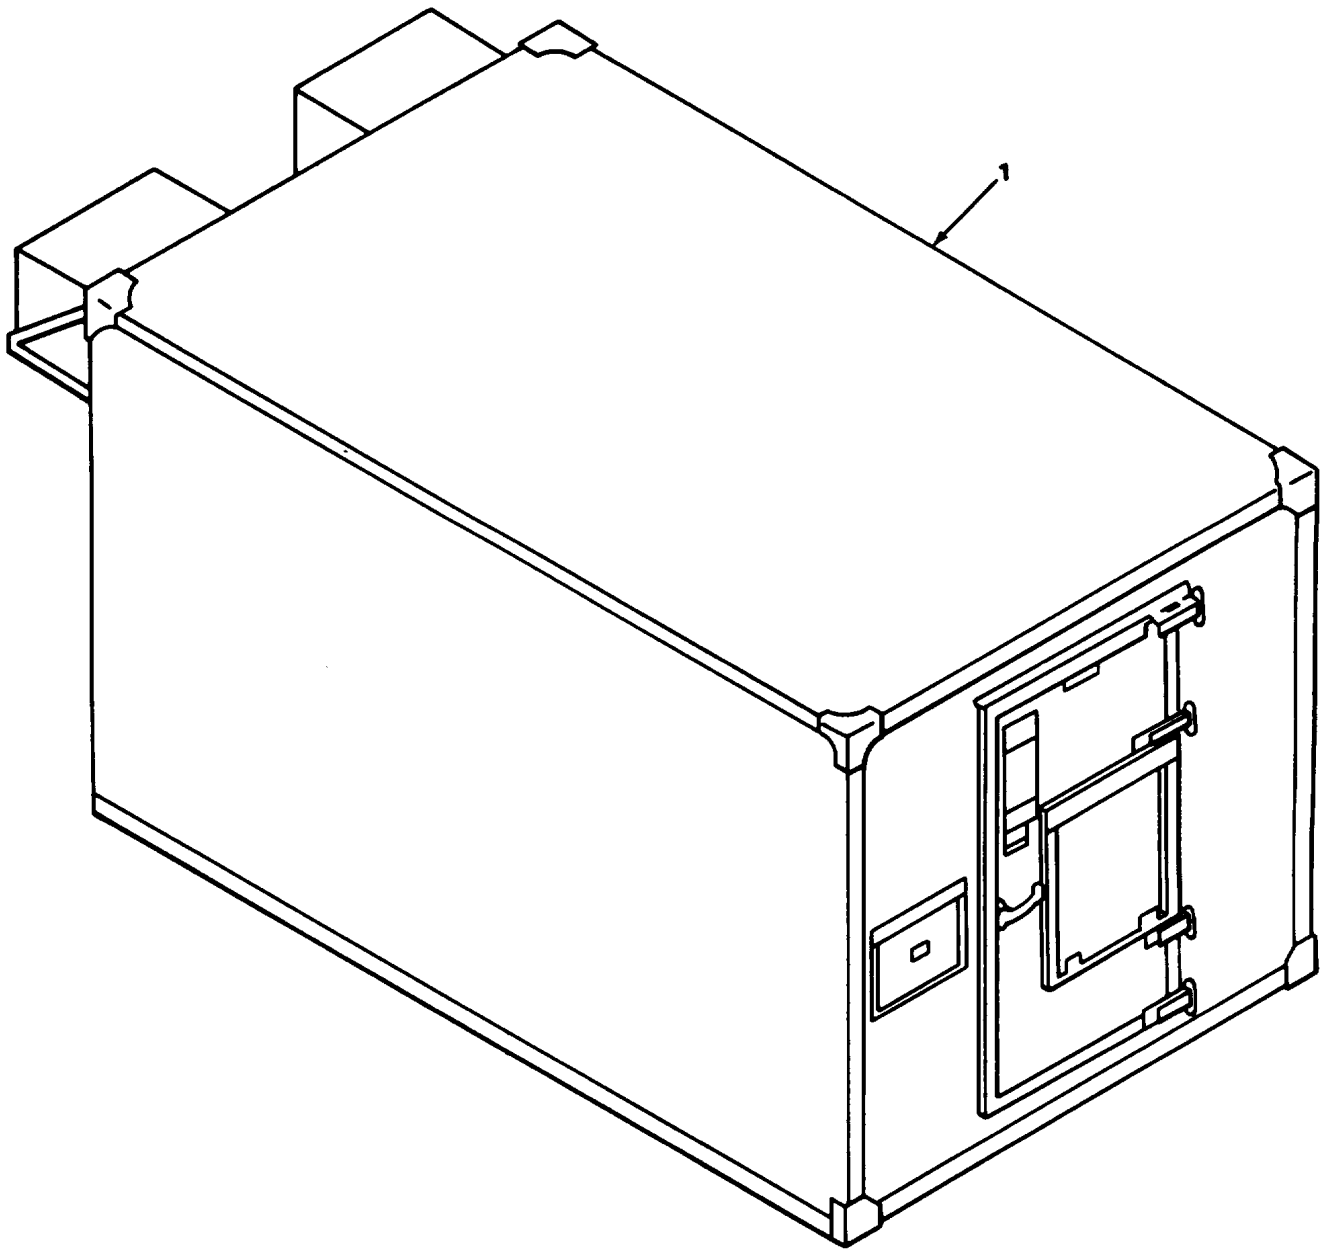

EL8YZ010

FIGURE 1. SHELTER, ELECTRONIC EQUIPMENT STORAGE S-640/G (ROADSIDE AND REAR WALL)
(SHEET 1 OF 3).

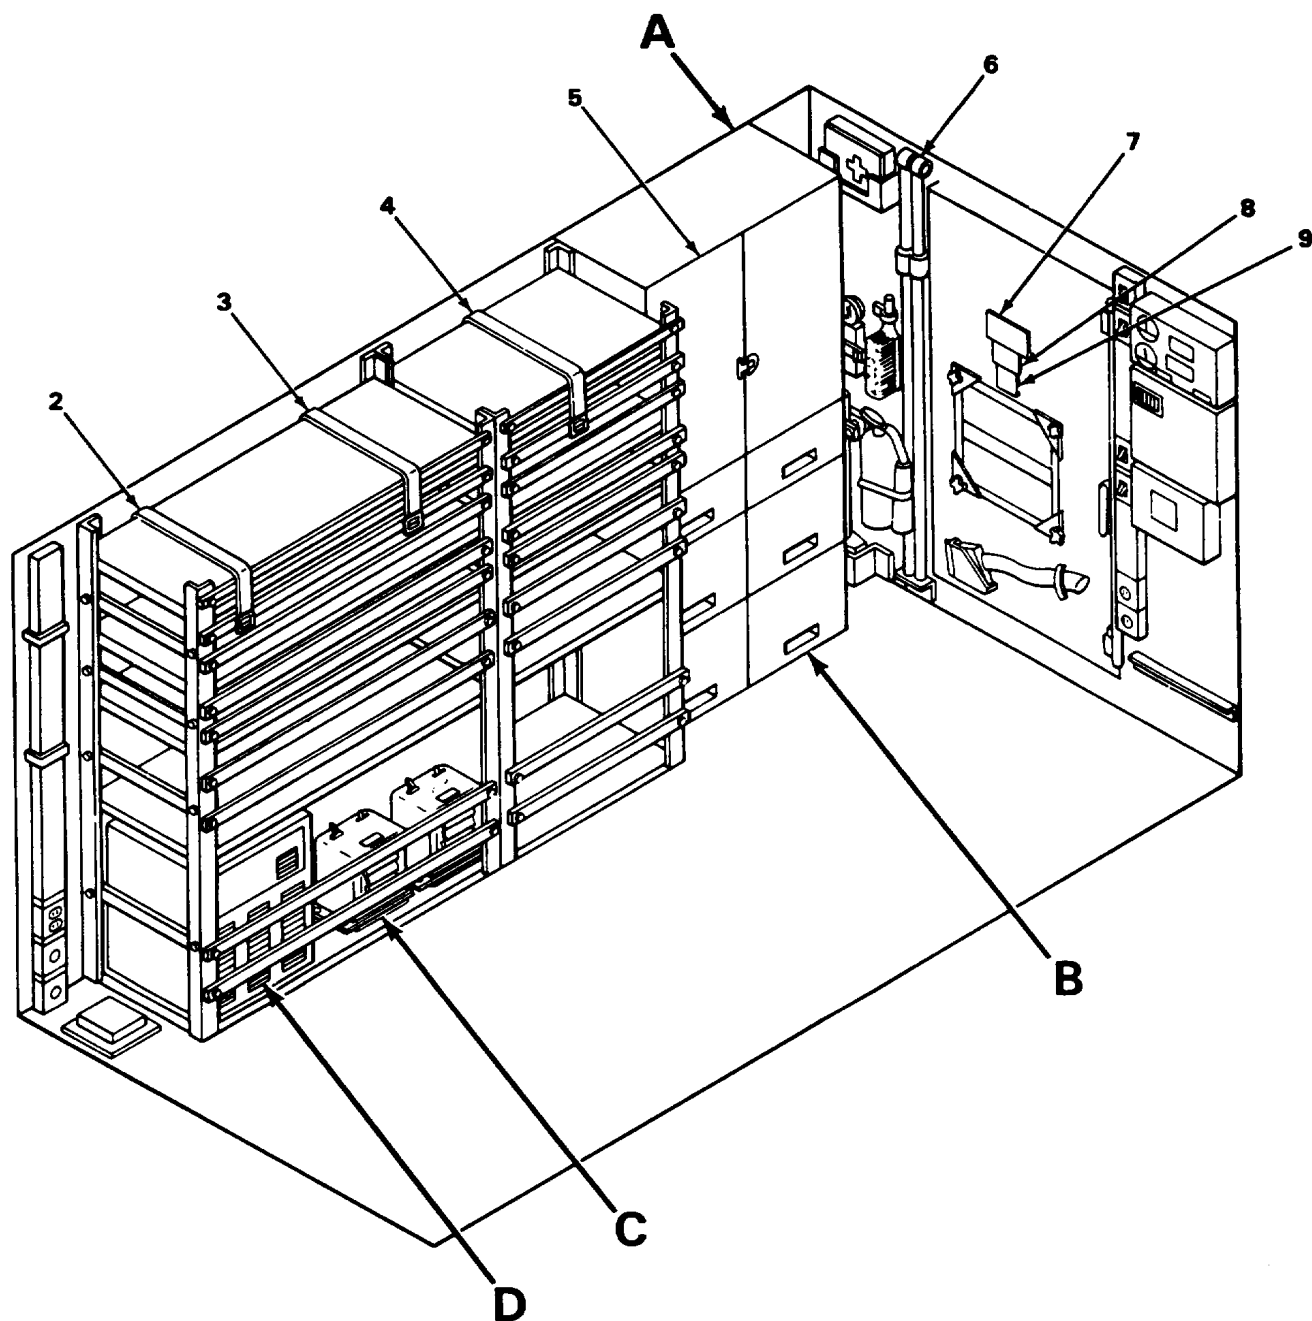

EL8Y2007

FIGURE 1. SHELTER, ELECTRONIC EQUIPMENT STORAGE S-640/G (ROADSIDE AND REAR WALL)
(SHEET 2 OF 3).