

TM 5-3895-366-24P

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**SAW, CONCRETE, SELF PROPELLED,
ABRASIVE DISK, MODEL C-3000-30
NSN 3895-01-303-8909**

Approved for public release distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

Technical Manual

No. 5-3895-366-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 15 October 1991

**Unit, Direct Support and General Support Maintenance
Repair Parts and Special Tools List
for
SAW, CONCRETE, SELF PROPELLED, ABRASIVE DISK
MODEL C-3000-30
NSN 3895-01-303-8909**

Current as of 15 October, 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: U.S. Army Tank-Automotive Command, Warren, MI 489397-5000, Attn: AMSTA-MBS. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I	Introduction	1	
Section II	Repair Parts List	1 - 1	
Group 01	Engine		
	Engine Assembly	1 - 1	1
	Cylinder Head	2 - 1	2
	Engine Block and Crankcase	3 - 1	3
	Crankshaft, Bearing, and Seals	4 - 1	4
	Flywheel Assembly	5 - 1	5
	Connecting Rod Assembly	6 - 1	6
	Piston Assembly	7 - 1	7
	Valves, Guides, and Seats	8 - 1	8
	Camshaft, Timing Gear, and Gear Cover	9 - 1	9
	Oil Pump Assembly	10 - 1	10
	Oil Filter Assembly	11 - 1	11
	Oil Breather Assembly	12 - 1	12
	Oil Pan Assembly	13 - 1	13
	Oil Level Gauge	14 - 1	14
	Hand Crank	15 - 1	15
	Manifold, Intake, and Exhaust	16 - 1	16
	Pulley and Guard Assembly	17 - 1	17
Group 03	Fuel System		
	Carburetor	18 - 1	18
	Fuel Pump	19 - 1	19

Approved for public release distribution is unlimited.

TABLE OF CONTENTS (Cont)

		Page	Illus/ Figure
	Air Cleaner Assembly	20-1	20
	Fuel Tank Lines and Fittings	21-1	21
	Governor Assembly	22-1	22
	Governor Controls	23-1	23
	Fuel Strainer, Adapter, and Primer Assembly	24-1	24
Group 04	Exhaust System		
	Muffler	25-1	25
Group 05	Cooling System		
	EngineCover	26-1	26
	Shrouds and Heat Deflectors	27-1	27
Group 06	Electrical System		
	Flywheel Alternator	28-1	28
	Starter Assembly	29-1	29
	Ignition Components	30-1	30
	Distributor, ignition	31-1	31
	Engine Control Panel	32-1	32
	Battery, Storage	33-1	33
Group 10	Front Axle		
	Front Axle, Blade Drive	34-1	34
Group 13	Wheels and Tracks		
	Wheel Assemblies, Front	35-1	35
Group 15	Frame, Towing Attachments, Drawbars, and Articulation Systems		
	Chassis	36-1	36
	Under Carriage Weldment	37-1	37
	A-Frame	38-1	38
	Depth Control Rod	39-1	49
	Depth Control Indicator	40-1	40
Group 24	Pump and Motor		
	Hydraulic Pump	41-1	41
	Hydraulic Hand Pump	42-1	42
	Hydraulic Motor	43-1	43
	Directional Control Valve	44-1	44
	Flow Control Valve	45-1	45
	Hydraulic Cylinder	46-1	46
	Hydraulic Hoses	47-1	47
	HydraulicHoses	48-1	48
	Oil Filter and Base	49-1	49
Group 35	Pulley, Bens and Shafts, Blade Drive		
	Blades and Blade Collars	50-1	50
	Blade Guard	51-1	51
	SplashGuard	52-1	52
Group 73	Concrete and Asphalt Equipment Components		
	Drive Wheels, Axle, Sprockets, and Bearings	53-1	53
	Water Pump	54-1	54
	Water Manifold	55-1	55
	Water Pressure Safety Switch, Valves, and Hoses	56-1	56

TABLE OF CONTENTS (Cont)

		Page	Illus/ Figure
Group 9401	Kits	KITS-1	
Section III	Special Tools List (Not applicable)		
IV	Cross Reference Indexes		
	National Stock Number Index	I-1	
	Part Number Index	I-7	
	Figure and item Number Index	I-20	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the concrete saw. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL.

In addition to Section I, *Introduction*, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL [as indicated by Basis of Issue (BOI) information in the *DESCRIPTION AND USABLE ON CODE* column] for the performance of maintenance.

c. **Section IV. Cross-reference Indexes.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. **ITEM NO. [Column (1)].** Indicates the number used to identify items called out in the illustration.

b. **SMR CODE [Column (2)].** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

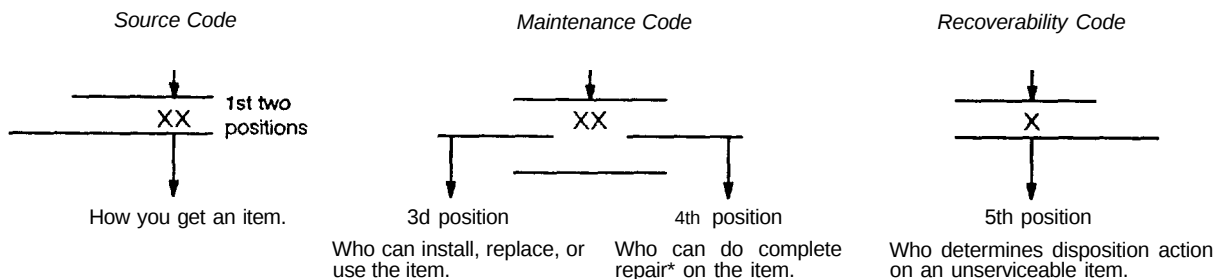

* *Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a faded item.