

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

Operator's Manual

SAW, BAND,

METAL CUTTING

(BOICE-CRANE CO. MODEL 2325)

(3419-222-1330)

This copy is a reprint which includes current
pages from Changes 1




HEADQUARTERS, DEPARTMENT OF THE ARMY

JUNE 1965

TABLE OF CONTENTS

Section		Page
I	DESCRIPTION	3
	1-1. Model Designation	3
	1-5. Purpose of the Equipment	3
	1-9. Major Components of the Equipment	3
	1-17. Location of Inspection Plates and Doors	4
II	SPECIAL SERVICE TOOLS.....	4
III	OPERATION	5
	3-1. Preparation for Use.....	5
	3-7. Operating Procedure.....	5
	3-14. Band Saw Guides	5
	3-25. Band Saw Blade.....	6
	3-44. Band File Guides	8
	3-52. Band Files	9
	3-63. Wheel Speed Changing Instructions.....	10
	3-69. General Operating Technique.....	11
	3-101. Screw Feed Device.....	12
	3-108. Miter Guide.....	13
	3-111. Internal Sawing and Use of Blade Welder.....	13
IV	INSPECTION AND LUBRICATION.....	18
	4-1. Periodic Inspection.....	18
	4-6. Lubrication.....	19
V	MAINTENANCE.....	20
	5-2. Trouble Shooting	20
	5-5. Wheel and Slide Assembly	21
	5-10. Telescoping Blade Guard.....	22
	5-15. Band Saw Guides	22
	5-22. Band File Guides	22
	5-26. Table Assembly	22
	5-34. Wheel Tires	23
	5-38. Motor	23
VI	PARTS LIST.....	24-38
	APPENDIX. BASIC ISSUE ITEMS LIST	39

Service Manual

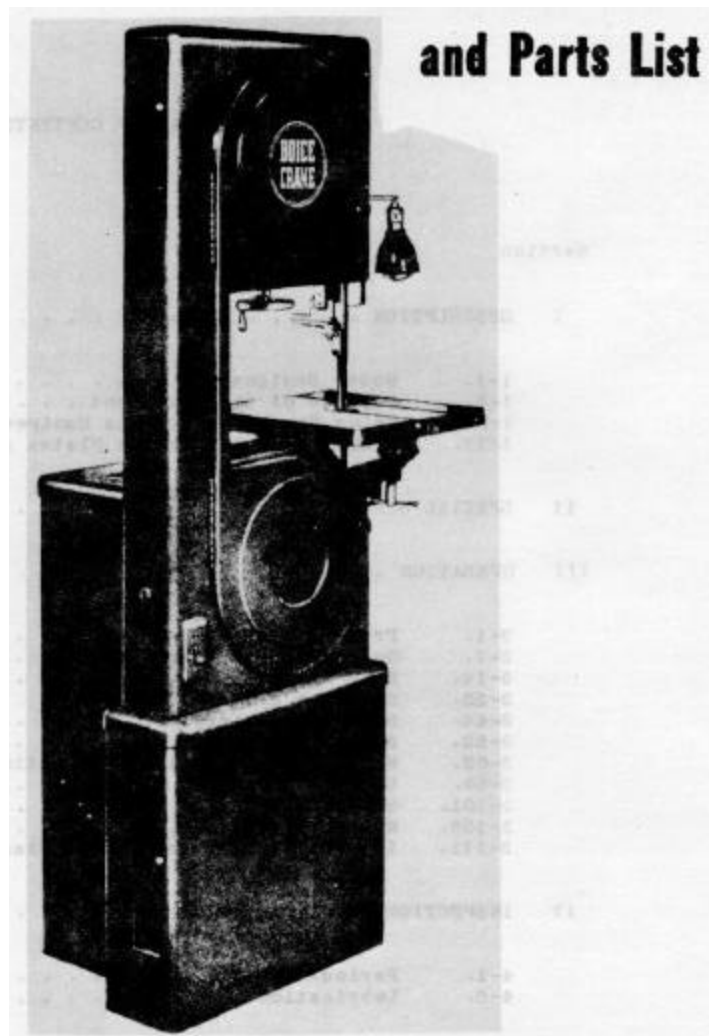

BOICE-CRANE

Figure 1-1. Combination 14" CONTOUR SAW & BAND-FILER