

TM 9-4910-458-35P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT SUPPORT, GENERAL SUPPORT,
AND
DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LIST TEST STAND, AUTOMOTIVE GENERATOR,
ALTERNATOR, AND STARTER (UNITED MANUFACTURING
COMPANY MODEL AGART TYPE II PART NUMBER
7336 (4910-316-5252) AND PART NUMBERS 7336-1,
7336-2, AND 7336-3 (4910-767-0218))

HEADQUARTERS, DEPARTMENT OF THE ARMY

28 DECEMBER 1967

TECHNICAL MANUAL }
 No. 9-4910-458-35P }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, D. C., 28 December 1967

	Page
SECTION I. INTRODUCTION	2
II. REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE	
Battery charger circuit, drive control, binding posts, and test circuit (figure 1)	6
Binding posts, rheostats, switches and related items (figure 2)	14
Rectifier compartment (figure 3)	17
Battery, reversing switch door, rectifier compartment, panel light, and battery compartment (figure 4)	18
Stowage compartment and mounting brackets (figure 5)	21
Battery compartment assembly (test stand 7336) (figure 6 and 7)	23
Battery compartment assembly (test stands 7336-1 and 7336-2) (figures 8 and 9)	26
Battery compartment assembly (test stand 7336-3) (figures 10 and 11)	28
Battery compartment (vent hose), ducts, mercury switch and components of internal circuitry (figure 12)	31
Cabinet, blower duct, and regulator mounting plate assembly (test stand 7336) (figure 13)	32
Cabinet, blower duct and regulator mounting plate assembly (test stands 7336-1, 7336-2, and 7336-3) (figure 14)	34
Rear cabinet (figure 15)	35
Input drive control circuitry-high voltage compartment (figure 16)	36
Load bank, blower and blower motor (figure 17)	39
Meters, rheostats switches, controls and related items (figure 18)	40
Control box mounting holder assembly (figure 19)	47
Lamp and bracket (figure 20)	47
Repair parts and equipment (figure 21)	48
Mounting and testing equipment (figure 22)	51
Mounting equipment (figure 23)	51
Equipment - V belts (figure 24)	52
Mounting equipment (figure 25)	53
Cable harnesses - testing (figures 26, 27, 28, 29)	53
Cable harnesses and test leads (figure 30)	55
Battery cable harnesses (figure 31)	56
Mounting equipment (figure 32)	56
Speed control and varidrive assembly (figure 33)	57
Tachometer generator assembly (figure 34)	63
Varidrive assembly (figure 35)	63
Varidrive motor assembly (figure 36)	65
Speed control (varidrive) and components of internal circuitry (figure 37)	67
components of internal circuitry-meter and main control (figure 38)	68
Load bank, tachometer generator and components of internal circuitry (figure 39)	70
Components of internal circuitry (figures 40, 41, 42 and 43)	71
Electrical wire	72
SECTION III. SPECIAL TOOLS, TEST, AND SUPPORT EQUIPMENT	74
SECTION IV. FEDERAL STOCK NUMBER AND PART NUMBER INDEX	74
ILLUSTRATIONS	82

DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. Scope.

This manual is a list of repair parts and special tools required for the performance of Direct Support, General Support, and Depot Maintenance of the automotive generator, alternator, and starter test stand.

2. General.

This repair parts and special tools list is divided into the following sections:

a. Repair Parts List-Section II. A list of repair parts authorized for tile performance of maintenance at the direct support, general support, and depot level.

b. Special Tools, Test and Support Equipment List-Section III. Not applicable.

c. Federal Stock Number and Part Number Index-Section IV. An index to illustration figure and item number.

3. Explanation of Columns.

The following provides an explanation of columns in the tabular lists in section II:

a. Source, Maintenance, and Recoverability Codes, column 1, is as follows:

- (1) Source Code, column 1A, indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
C	Applied to repair parts authorized for local procurement. If not obtainable from local procurement, such repair parts will be requisitioned through normal supply channels with a supporting statement of nonavailability from local procurement.
M	Applied to repair parts which are not procured or stocked but are to be manufactured at indicated maintenance categories.
P	Applied to repair parts which are stocked in or supplied from the GSA/DSA, or Army supply system, and authorized for use at indicated maintenance categories.

- (2) Maintenance Code, column 1B, indicates the lowest category of maintenance

authorized to install the listed item. The maintenance level codes are:

	Explanation
C	Operator/Crew
O	Organizational Maintenance
F	Direct Support Maintenance
H	General Support Maintenance

- (3) Recoverability Code, column 1C, indicates whether unserviceable items should be returned for recovery or salvage. items not coded are expendable. Recoverability code is:

Code	Explanation
R	Items which are economically repairable at direct and general support maintenance activities and are normally furnished by supply on an exchange basis.

b. Federal Stock Number, column 2, indicates the Federal stock number for the item.

c. Description, column 3, indicates the Federal item name and a brief description of the item. A five digit manufacturer's or other service code and part number or Federal part number will be included in parentheses within the description column for reference. Repair parts quantities included in the assembly are shown in front of the part.

d. Unit of Issue, column 4, indicates the unit used as a basis of issue, e.g. ea, sh, ft, etc.

e. Quantity Incorporated in Unit Pack, column 5, indicates the actual quantity contained in the unit pack.

f. Quantity Incorporated in Unit, column 6, indicates the quantity of repair parts in an assembly. The symbol = in this column indicates that the raw material listed is used "as required".

g. 30-Day DS/GS Maintenance Allowances, columns 7 and 8 are as follows:

- (1) The allowance columns are divided into six subcolumns. Indicated in each subcolumn, opposite the first appearance of each item, is the total quantity of items authorized