

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR'S MANUAL
TEST SET, IGNITION COIL CAPACITOR RESISTOR
SUN ELECTRIC CORP. (MODEL CCT-20) (4910-300-1305)

Headquarters, Department of the Army, Washington, D.C.
23 June 1969

TABLE OF CONTENTS


SECTION I.	INTRODUCTION AND DESCRIPTION	Page
1-1.	Introduction	1
1-3.	Description and Purpose.	1
II.	OPERATING INSTRUCTIONS	
2-1.	Operation	4
2-2.	Coil Circuit Test.	4
2-3.	Resistor Circuit Test.	5
2-5.	Condenser Circuit Test	5
III.	MAINTENANCE INSTRUCTIONS	
3-1.	Maintenance	6
IV.	LUBRICATION INSTRUCTIONS	
4-1.	Lubrication	7
V.	REPAIR PARTS LIST	
5-1.	Recommended Parts List	7
5-3.	Instructions for Requesting Parts not Identified by FSN.	7

LIST OF TABLES

Table	1	Coil Tester Specifications.....	2
	2	Major Components and Functions.....	4

LIST OF ILLUSTRATIONS

Figure	1	Ignition Coil Test Set.....	ii
	2	Internal Components (Rear View - Top and Bottom)	8
	3	Internal Components (Left and Right-Side Views).....	11
	4	Electrical Schematic Diagram.....	13

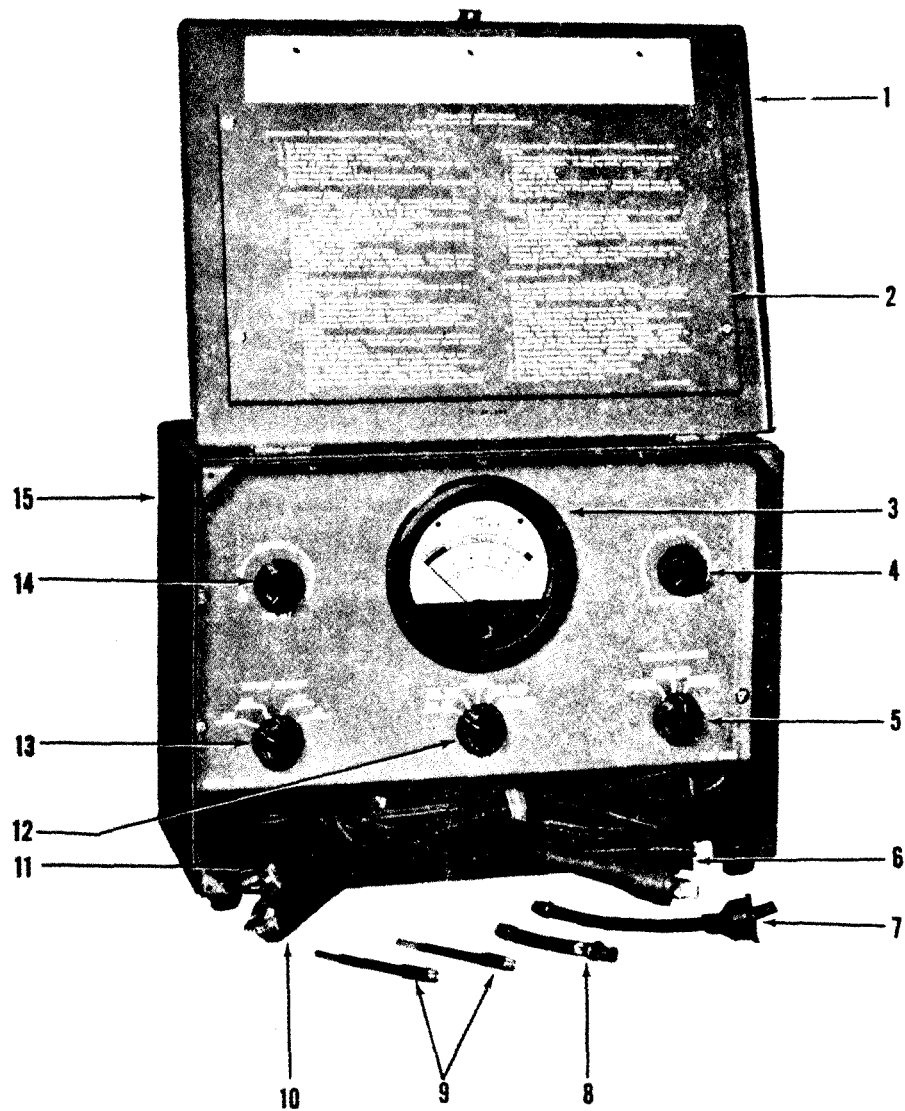

- | | |
|------------------------------|-------------------------------|
| 1. Cover Assembly | 8. Coil Tower Adapter |
| 2. Instruction Plate | 9. Coil Primary Adapter |
| 3. Meter | 10. Battery Lead (Red Boot) |
| 4. Ohm-Condenser Control | 11. Battery Lead (Black Boot) |
| 5. Condenser Selector Switch | 12. Test Selector Switch |
| 6. Test Leads | 13. Battery Selector Switch |
| 7. Coil Tower Adapter | 14. Coil Set Control |
| 15. Case Assembly | |

Figure 1. Ignition Coil Test Set