


***ARMY TM 9-2805-256-14
AIR FORCE TO 38G2-102-2
NAVY NAVFAC P-8-611-14E**

TECHNICAL MANUAL

**OPERATOR, UNIT, DIRECT SUPPORT,
GENERAL SUPPORT MAINTENANCE MANUAL**

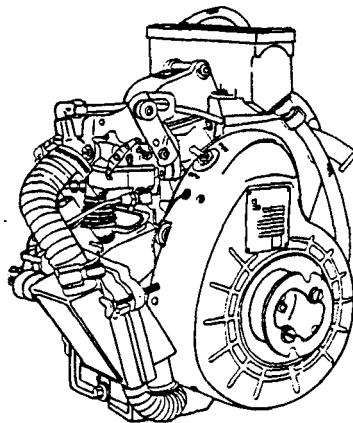

**ENGINE, GASOLINE, 1 1/2 HP,
MILITARY STANDARD MODELS
(MODEL 1A08-1, NSN 2805-00-601-5181)
(MODEL 1A08-2, NSN 2805-00-714-8552)
(MODEL 1A08-3, NSN 2805-00-068-7510)
(MODEL 1A08-4, NSN 2805-01-182-8467)**

Approved for public release. Distribution is unlimited.

★ This manual supersedes (Army) TM 5-2805-256-14, (Air Force) TO 38G2-102-2, (Navy) NAVFAC P-8-611-14E dated 16 January 1976 in its entirety.

**HEADQUARTERS, DEPARTMENT OF THE ARMY,
THE AIR FORCE, AND THE NAVY**

10 AUGUST 1990

TECHNICAL MANUAL 9-2805-256-14
TECHNICAL ORDER 38G2-102-2
NAVFAC P-8-611-14E

HEADQUARTERS, DEPARTMENTS OF THE ARMY
THE AIR FORCE, AND THE NAVY,
WASHINGTON, D. C., 10 August 1990

Operator, Unit, Direct Support and General Support Maintenance Manual

ENGINE, GASOLINE, 1 1/2 HP MILITARY STANDARD MODELS
(MODEL 1A08-1, NSN 2805-00-601-5181)
(MODEL 1A08-2, NSN 2805-00-714-8552)
(MODEL 1A08-3, NSN 2805-00-068-7510)
(MODEL 1A08-4, NSN 2805-01-182-8467)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

For Air Force, submit AFTO Form, 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to Commander, San Antonio Air Logistic Center, ATTN: SA-ALC-MMDDA, Kelly Air Force Base. Texas 78241-5000. For Navy, mail comments to the Commander, Naval Construction Battalion Center, ATTN: Code 15741 F, Bldg 43, Port Hueneme, California 93043-5000

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	PAGE
CHAPTER 1 INTRODUCTION	1-1
Section I General Information	1-1
Section II Equipment Description and Data	1-2
Section III Principles of Operation	1-8
CHAPTER 2 OPERATING INSTRUCTIONS	2-1
Section I Description and Use of Operator's Controls and Indicators	2-1
Section II Preventive Maintenance Checks and Services	2-4
Section III Operation Under Usual Conditions	2-7
Section IV Operation Under Unusual Conditions	2-10

*This manual supersedes (Army) TM 5-2805-256-14, (Air Force) TO 38G2-102-2, (Navy) NAVFAC P-8-611-14E dated 16 January 1976 in its entirety.

Change 2 i

TABLE OF CONTENTS (cont)


CHAPTER 3	OPERATOR'S MAINTENANCE INSTRUCTIONS	3-1
Section I	Lubrication Instructions	3-1
Section II	Operator Troubleshooting Procedures	3-1
CHAPTER 4	UNIT MAINTENANCE	4-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment	4-1
Section II	Service Upon Receipt	4-2
Section III	Unit Preventive Maintenance Checks and Services (PMCS)	4-2
Section IV	Unit Troubleshooting	4-3
Section V	Unit Maintenance Procedures	4-7
Section VI	Preparation for Shipment or Storage	4-73
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
Section I	Repair-Parts, Special Tools, TMDE, and Support Equipment	5-1
Section II	Direct Support Troubleshooting	5-1
Section III	Direct Support Maintenance Procedures	5-5
CHAPTER 6	GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment	6-1
Section II	General Support Troubleshooting.....	6-1
Section III	General Support Maintenance Procedures	6-3
APPENDIX A	REFERENCE.....	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-1
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS	C-1
APPENDIX D	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST.....	D-1
APPENDIX E	TORQUE LIMITS	E-1
APPENDIX F	ADDITIONAL AUTHORIZATION LIST	F-1
INDEX		Index-1

LIST OF ILLUSTRATIONS

Figure Number	Title	Page
1-1	Military Standard Engine	1-0
1-2	Location and Description of Major Components Models 1A08-1, -2	1-4
1-3	Location and Description of Major Components Models 1A08-3, -4	1-6
2-1	Operators Controls and Indicators	2-3
2-2	Starting Procedures	2-8
2-3	Stopping Procedures	2-9
4-1	Fuel Filter Disassembly and Reassembly	4-9
4-2	Cylinder Head Covers Removal and Installation	4-11
4-3	Lower Air Duct Removal and Installation	4-13
4-4	Flywheel Cover Removal and Installation	4-15
4-5	Ignition Switch Removal and Installation	4-17
4-6	High Tension Cable Removal and Installation	4-19
4-7	Spark Plug Removal and Installation	4-21
4-8	Air Cleaner Assembly Service (Oil Bath)	4-23
4-9	Air Cleaner Assembly Service (Dry)	4-25
4-10	Air Cleaner Assembly Service (Dry) Removal and Installation	4-27
4-11	Air Cleaner Assembly Service (Oil Bath) Removal and Installation	4-29
4-12	Clamps and Hoses Replacement.	4-31
4-13	Air Cleaner Element Removal and Installation (Oil Bath)	4-32
4-14	Element Removal and Installation (Dry)	4-33
4-15	Relief Valve Removal and Installation	4-35
4-16	Rocker Cover Removal and Installation	4-37
4-17	Oil Fill Tube and Gage Assembly Removal and Installation	4-39
4-18	Governor Adjustment	4-41
4-19	Breaker Point Cover Removal and Installation	4-43
4-20	Breaker Points Removal and Installation	4-45
4-21	Breaker Points Adjustment	4-47
4-22	Condenser Removal and Installation	4-49
4-23	Breather Line Removal and Installation (Oil Bath Air Cleaner)	4-51
4-24	Breather Line Removal and Installation (Dry Element Air Cleaner)	4-53
4-25	Throttle Control Removal and Installation	4-55
4-26	Carburetor Adjustment	4-57
4-27	Carburetor Removal	4-59
4-28	Carburetor Installation	4-61
4-29	Fuel Line Removal and Installation	4-63
4-30	Fuel Pump Pressure Test	4-65
4-31	Fuel Pump Removal and Installation	4-66
4-32	Starter Flange Removal and Installation	4-67
4-33	Flywheel Fan Removal and Installation	4-69
4-34	Intake Manifold Removal and Installation	4-71
4-35	Exhaust Manifold Removal and Installation	4-73
4-36	Bearing Cap Inspection	4-74
5-1	Oil Pan Removal and Installation.	5-7
5-2	Governor Assembly Removal	5-9

LIST OF ILLUSTRATIONS (cont)

Figure Number	Title	Page
5-3	Governor Repair Breakerless Ignition.	5-11
5-4	Governor Repair Breaker Point Ignition	5-13
5-5	Governor Assembly Installation	5-15
5-6	Ignition Timing	5-17
5-7	Ignition Control Unit Removal and Installation	5-19
5-8	Transformer Removal and Installation	5-21
5-9	Ignition Module Removal and Installation	5-23
5-10	Low Voltage Cable Removal and Installation	5-25
5-11	Cylinder Head Removal	5-27
5-12	Cylinder Head Assembly Repair.. . . .	5-29
5-13	Cylinder Head Installation	5-30
5-14	Rockers Removal	5-31
5-15	Rockers Installation	5-33
5-16	Valve Adjustment	5-35
5-17	Intake and Exhaust Valve Removal and Installation	5-37
5-18	Piston and Connecting Rod Assembly Removal	5-39
5-19	Piston and Connecting Rod Repair	5-41
5-20	Piston and Connecting Rod Assembly Installation	5-42
5-21	Rotating Magnet Removal and Installation	5-43
5-22	Coil Removal and Installation	5-45
5-23	Flywheel Side Oil Seal Removal and Installation	5-47
5-24	Noise Suppression Filter Removal and Installation	5-49
5-25	Crankshaft Side Oil Seal Removal and Installation	5-51
5-26	CompressionTest	5-53
5-27	Breakerless Ignition System Wiring Diagram	5-54
5-28	Breaker Point Ignition Wiring Diagram	5-55
6-1	Bearing Cap Removal	6-5
6-2	Bearing Cap Repair	6-6
6-3	Bearing Cap Installation	6-7
6-4	Crankshaft Removal	6-9
6-5	Crankshaft Inspection	6-10
6-6	Crankshaft Installation	6-11
6-7	Camshaft Removal	6-13
6-8	Camshaft Inspection	6-15
6-9	Camshaft Installation	6-17
6-10	Crankcase Repair	6-19

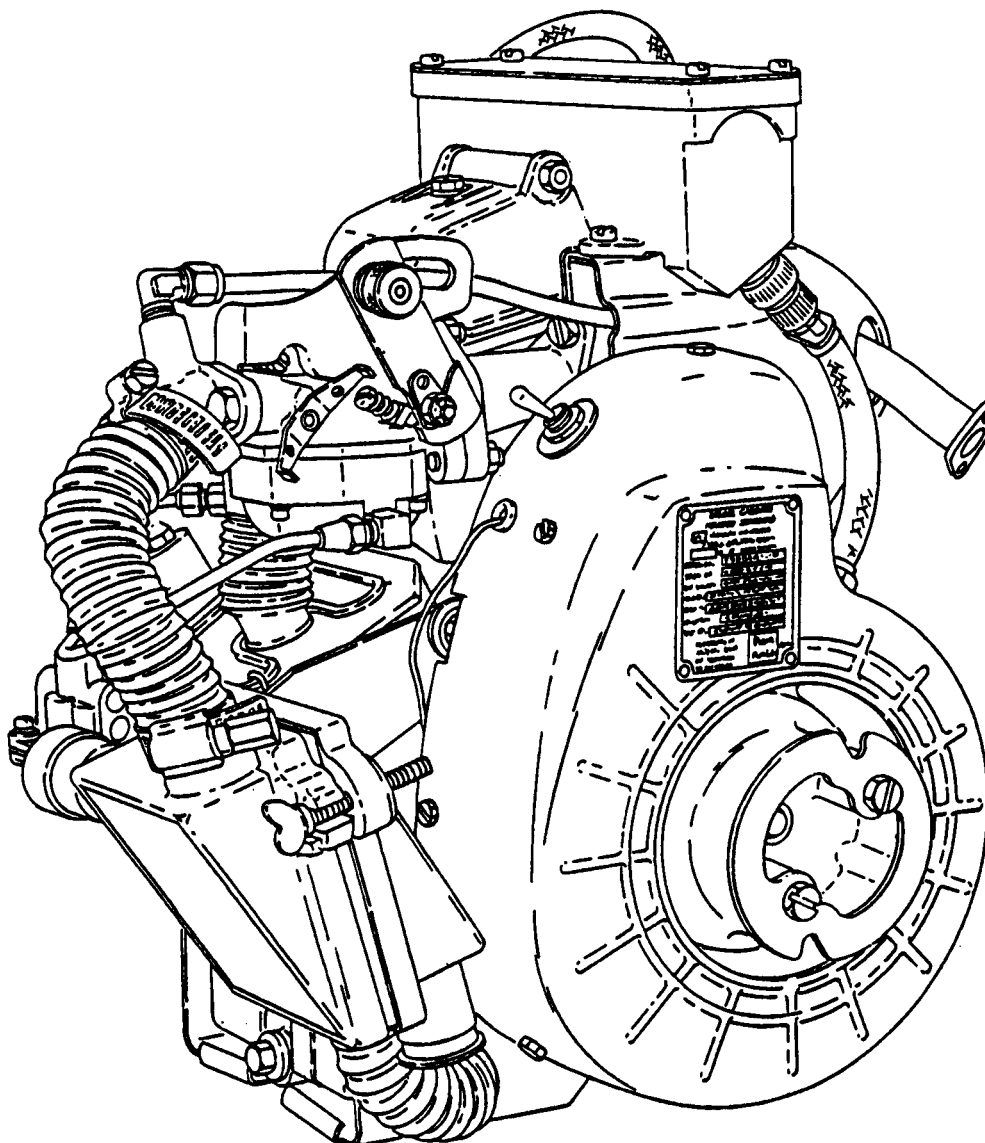

4886-001

Figure 1-1. Military Standard Engine.

CHAPTER 1
INTRODUCTION

	Page
OVERVIEW	1-1
Section I. General Information	1-1
Section II. Equipment Description and Data	1-2
Section III. Principles of Operation	1-8

OVERVIEW

This chapter contains general information pertaining to 1 1/2 HP Military Standard Engine and its components.

Section I. GENERAL INFORMATION

Paragraph	Page
1-1 Scope.....	1-1
1-2 Consolidated Index of Army Publications and Blank Forms.....	1-1
1-3 Maintenance Forms, Records, and Reports.....	1-1
1-4 Reporting Equipment Improvement Recommendations (EIR's).....	1-2
1-5 Destruction of Army Materiel to Prevent Enemy Use	1-2
1-6 Preparation for Storage and Shipment.....	1-2
1-7 Glossary.....	1-2

1-1. Scope. This manual contains operator, unit, direct support and general support maintenance for the 1 1/2 HP Military Standard Engine, Models 1A08-1, -2, -3, and -4 (figures 1-1, 1-2, and 1-3).

1-2. Consolidated Index of Army Publications and Blank Forms. Refer to the latest issue of DA PAM 25-30 to determine whether there are new editions, changes, or additional publications pertaining to the equipment

1-3. Maintenance Forms, Records and Reports.

a. Reports of Maintenance and Unsatisfactory Equipment. Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, as contained in Maintenance Management Update. Air Force personnel will use AFR 66-1 (Air Force Maintenance Management Policy) for maintenance reporting and TO-00-35D54 for unsatisfactory equipment reporting. Navy personnel will report maintenance performed utilizing the Maintenance Data Collection Subsystem (MDCS) IAW OPNAVINST 4790.2, Vol 3 and unsatisfactory material/conditions (UR submissions) IAW OPNAVINST 4790.2, Vol 2, chapter 17.

b. Reporting of Item and Packaging Discrepancies. Fill out and forward SF 364 (Report of Discrepancy (ROD)) as prescribed in AR 735-11-2/DLAR 414-.55/SECNAVINST 4355.18/AFR 400-54/MCO 4430.3J.