

ARMY

***TM9-2805-258-24P**

AIR FORCE

TO38G2-89-34

MARINE CORPS

SL-4-03523D

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**ENGINE, GASOLINE, 10 HP
MILITARY STANDARD MODELS**

(MODEL 2A042-2, NSN 2805-00-952-3927)

(MODEL 2A042-3, NSN 2805-00-872-5971)

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

* This manual supersedes TM5-2805-258-24P/TO38G2-89-34/SL-4-03523C, dated 27 July 1988, and all changes.

**HEADQUARTERS, DEPARTMENT OF THE ARMY,
AIR FORCE, AND HEADQUARTERS,
U.S. MARINE CORPS**

31 MARCH 1993

TECHNICAL MANUAL

HEADQUARTERS, DEPARTMENTS OF
THE ARMY, AND THE AIR FORCE, AND
HEADQUARTERS, U.S. MARINE CORPS
WASHINGTON, D.C., 31 March 1993

NO. 1

**UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**ENGINE, GASOLINE, 10 HP
MILITARY STANDARD MODELS**

**(MODEL 2A042-2, NSN 2805-00-952-3927)
(MODEL 2A042-3, NSN 2805-00-872-5971)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%/oavma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

		Page	Illus/ Figure
SECTION 1	INTRODUCTION.....	1	
SECTION 2	REPAIR PARTS LIST	1-1	
Group 01	Fuel Filter Assembly.....	1-1	1
Group 02	Air Cleaner Assembly.....	2-1	2
Group 03	Oil Filter Assembly	3-1	3
	Oil Filter Assembly	4-1	4
Group 04	Cooling System	5-1	5
Group 05	Flywheel	6-1	6
Group 06	Fan Housing	7-1	7

* This manual supersedes TM 5-2805-258-24P/TO 38G2-89-34/SL-4-03523C, dated 27 July 1988 and all changes.

TABLE OF CONTENTS - Continued

		Page	Illus/ Figure
Group 07	Lubrication System		
	Oil Manifold and Sending Units	8-1	8
	Lubrication System Components.	9-1	9
Group 08	Automatic Choke Assembly	10-1	10
Group 09	Preheater Assembly	11-1	11
Group 10	Magneto Assembly (Fairbanks Morse)	12-1	12
	Magneto Assembly (Slick Aircraft).	13-1	13
Group 11	High Tension Cables	14-1	14
Group 12	Spark Plugs	14-1	14
Group 13	Starter	15-1	15
Group 14	Regulator-Rectifier	16-1	16
Group 15	Governor Assembly	17-1	17
Group 16	Exhaust Manifold and Exhaust Pipe	18-1	18
Group 17	Manual Choke	19-1	19
Group 18	Carburetor	19-1	19
Group 19	Fuel System	19-1	19
Group 20	Intake Manifold Assembly	20-1	20
Group 21	Rocker Box Covers	21-1	21
Group 22	Alternator Assembly	22-1	22
Group 23	Wiring Harness	22-1	22
Group 24	Timing Gear Cover	23-1	23
Group 25	Oil Pan Assembly	24-1	24
Group 26	Cylinder Head	25-1	25
Group 27	Piston and Connecting Rod Assembly	26-1	26
Group 28	Cylinders	26-1	26
Group 29	Camshaft Assembly	27-1	27
Group 30	Crankshaft Assembly	27-1	27
Group 31	Crankcase Seal	28-1	28
Group 32	Bulk Material	Bulk-1	
Section III.	SPECIAL TOOLS LIST (Not Applicable)		
Section IV.	CROSS-REFERENCE INDEXES	I-1	
	National Stock Number Index...	I-1	
	Part Number Index	I-4	
	Figure and Item Number index	I-11	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section 1. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Engine, Gasoline, 10hp, Military Standard Models. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.
2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:
 - a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).
 - b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.
 - c. Section IV. Cross-References Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.
3. EXPLANATION OF COLUMNS (SECTIONS II AND III).
 - a. ITEM NO. (Column (1)). indicates the number used to identify items called out in the illustration.
 - b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

