

ARMY TECHNICAL MANUAL	*TM 9-2805-262-24P
NAVY PUBLICATION	NAVFAC P-8-613E-24P
AIR FORCE TECHNICAL ORDER	TO 38G2-90-14
MARINE CORPS TECHNICAL ORDER	SL-4-03522C

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, GENERAL SUPPORT
AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LIST

ENGINE, GASOLINE, 6 HP MILITARY STANDARD MODELS

DOD MODEL	NSN
4A032-1	2805-00-776-0483
4A032-2	2805-00-068-7512
4A032-3	2805-01-139-0596
4A032-4	2805-01-276-5946

Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-2805-203-24P/NAVFAC P-813E-24P/TO 38G2-90-14/SL-4-03522B,
dated 11 April 1977, and all changes.

HEADQUARTERS, DEPARTMENTS OF THE ARMY, NAVY AND
AIR FORCE AND HEADQUARTERS U.S. MARINE CORPS
17 SEPTEMBER 1992

TECHNICAL MANUAL

HEADQUARTERS,
 DEPARTMENTS OF THE ARMY, NAVY AND
 AIR FORCE AND HEADQUARTERS, U.S. MARINE CORPS
 WASHINGTON, D.C., 17 SEPTEMBER 1992

No. 9-2805-262-24P

UNIT, DIRECT SUPPORT, GENERAL SUPPORT AND DEPOT
 MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

ENGINE, GASOLINE, 6 HP, MILITARY STANDARD

<u>DOD MODEL</u>	<u>N S N</u>
4A032-1	2805-00-776-0483
4A032-2	2805-00-068-7512
4A032-3	2805-01-139-0596
4A032-4	2805-01-276-5946

Approved for public release; distribution is unlimited.

Current as of 27 December 1991

TABLE OF CONTENTS

	Page	Illus/ Figure
Section I. INTRODUCTION	1	
Section II. REPAIR PARTS LIST	11	
Group 01 Fuel Filter Assembly		
Fuel Filter	11	1
Group 02 Air Cleaner Assembly		
Air Cleaner	13	2
Group 03 Governor and Controls		
Governor and Related Parts	15	3
Group 04 Carburetor Assembly		
Carburetor and Related Parts	17	4
Group 05 High Tension Cables		
Group 06 Spark Plug		
Spark Plugs and Cables	19	5
Group 07 Exhaust Manifold Assembly		
Manifold Assembly, Exhaust	21	6
Group 08 Rocker Cover Assembly	23	7
Group 09 Cooling System		
Engine Shroud, Rocker Arm Covers	23	7
Group 10 Fuel Pump		
Fuel Pump	25	8
Group 11 Intake Manifold Assembly		
Intake Manifold	27	9

This manual supersedes TM5-2805-203-24P/NAVFAC P-813E-24P/TO38G2-90-14/SL-4-03522B, dated 11 April 1977, and all changes.

TABLE OF CONTENTS - Continued

	Page	Illus/ Figure
Group 12 Crankcase Ventilation System		
Breather Tube Assembly	29	10
Group 13 Oil Filter Assembly		
Oil Filter	31	11
Group 14 Starter Rope Pulley		
Pulley	33	12
Group 15 Cylinder Head Assembly		
Cylinder Head, Drain Back		
Tube and intake Manifold Adapters	35	13
Group 16 Electric System		
Breaker Point Cover	39	14
Housing, Breaker Point	41	15
Coil Cover	45	16
Breakerless Ignition	51	17
Group 17 Oil Pump Assembly		
Oil Pump Gears and Wear Plate.	55	18
Group 18 Oil Pan Assembly		
Oil Pan	57	19
Group 19 Piston and Connecting Rod Assembly		
Piston, Rings and Connecting Rod	59	20
Group 20 Flywheel		
Flywheel Fan	61	21
Group 21 Flywheel Housing and Protective Screen		
Flywheel Housing and Engine		
Mounting Bracket	63	22
Group 22 End Cover		
End Cover Assembly	65	23
Group 23 Camshaft and Valve Tappets, Gear and Thrust Plate		
Camshaft Thrust Plate and Breather Box	67	24
Camshaft	69	25
Group 24 Crankshaft and Main Bearing		
Crankshaft	71	26
Group 25 Crankcase Assembly		
Crankcase	73	27
Group 26 Bulk Material	75	Bulk
Section III. SPECIAL TOOLS LIST (Non applicable)		
Section IV. CROSS-REFERENCE INDEXES		
National Stock Number Index...	77	
Part Number Index	80	

SECTION I

INTRODUCTION

1. Scope

This joint Army and Air Force manual lists repair parts and special tools required for the performance of unit, direct support, general support and depot maintenance of the MIL-STD engine. The following paragraphs are keyed to applicable users. All users should read paragraph 4, Special Information, prior to using this manual.

2. General

This repair parts and Special Tools List is divided into the following sections:

a. *(ALL) Repair Parts-Section II.* A list of repair parts authorized for the performance of maintenance at the organizational, direct support, general support and depot level in figure and item number sequence.

b. *(ALL) Special Tools, Test and Support Equipment-Section III.* A list of special tools, test and support equipment authorized for the performance of maintenance at the organizational, intermediate (field), (direct support and general support) and depot level. (Not Applicable).

c. *National Stock Number and Reference Number Index-Section IV.* A list of National Stock Numbers in numerical sequence, followed by a list of reference numbers appearing in all the listings, in alphanumeric sequence, cross-referenced to the illustration figure number and item number.

d. *Reference Designator Index-Section V.* The reference Designator Column includes all assigned reference designators arranged first in alphabetical order, second in numeric order. Opposite each symbol is listed the figure and item number of the part in Section II and the reference number (Not Applicable).

3. Explanation of Columns

The following provides an explanation of columns in the tabular lists in Sections II and III.

a. *(ALL) Illustrations (Column 1).* this column is divided as follows.

(7) *Figure Number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item Number.* Indicates the number used to identify the item on the illustration.

b. *(ALL) Source, Maintenance, and Recoverability Codes (SMR).* Column 2.

(1) Uniform Source Codes applicable to all Military Services. GENERAL: Source Codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative on nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfittings to specified maintenance repair activities.