

TECHNICAL MANUAL
DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL
TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR
TEST SETS
TS-538/U, TS-538A/U, TS-538B/U,
AND TS-538C/U
(NSN 6625-00-243-5174)

HEADQUARTERS, DEPARTMENT OF THE ARMY

August 1978

TECHNICAL MANUAL }
No. 11-6625-213-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 4 August 1978

DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL
TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR
TEST SETS

TS-538/U, TS-538A/U, TS-538B/U
AND TS-538C/U
(NSN 6625-00-243-5174)

Current as of 3 February 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Figure
S ECTION	I. Introduction	1	
	II. Repair parts list	5	
G R O U P	00 Test sets TS-538/U, TS-538A/U, TS-538B/U, TS-538C/U.	5	1
	01 Test set assembly (1A3)	7	2-4
	0101Capacitor-resistor assembly (1A3A4).	17	5
	0102 Capacitor-resistor assembly (1A3A6).	19	6
	0103 Capacitor-resistor assembly (1A3A8).	21	7
	0104 Resistor assembly (1A3A15).	23	8
	0105 Waveguide assembly (1A3A17).	25	9

•This manual supersedes TM 11-6625-213-35P, 29 April 1971.

		Page	Illus Figure
	0106 Oscillator, radio frequency assembly (1A3A12)	27	10, 11
	0107 Attenuator, variable assembly (1A3AT1)	31	12
02	Cable Assembly, Radio Frequency CG-299A/U	33	13
03	Cable Assembly, Power Electrical CX-337/U	35	14
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	36	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the TS-538/U, TS-538A/U, TS-538B/U, and TS-538C/U. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and parts numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-Item procured and stocked for anticipated or known usage.	

Definition

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items; The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-Support item is removed, replaced, used at the organizational level.	
F-Support item is removed, replaced, used at the direct support level.	
H-Support item is removed, replaced, used at the general support level.	

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
F-The lowest maintenance level capable of complete repair of the support item is the direct support level.	
Z-Nonreparable. No repair is authorized.	

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.	

Recoverability**codes****Definition**

F-Reparable item. When uneconomical, reparable, condemn and dispose at the direct support level.

c. *National Stock Number*. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. *Part Number*. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. *Federal Supply Code for Manufacturer (FSCM)*. The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. *Description*. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. *Unit of Measure (U/M)*. Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in., pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. *Quantity Incorporated in Unit*. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code**Used on**

2KL

TS-538/U

4S2

TS-538A/U

AJ2

TS-538B/U

4S3

TS-538C/U

b. The following publications pertain to the TS-538/U, TS-538A/U, TS-538B/U, and TS-538C/U and its components:

TM 11-6625-213-12, Test Sets TS-538/U, TS-538A/U, TS-538B/U, and TS-538C/U,
TM 11-6625-213-35, Test Sets TS-538/U, TS-538A/U, TS-538B/U, and TS-538C/U

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) *First*. Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second*. Find the illustration covering the functional group to which the item belongs.

(3) *Third*. Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth*. Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.


(1) *First*. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second*. After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)

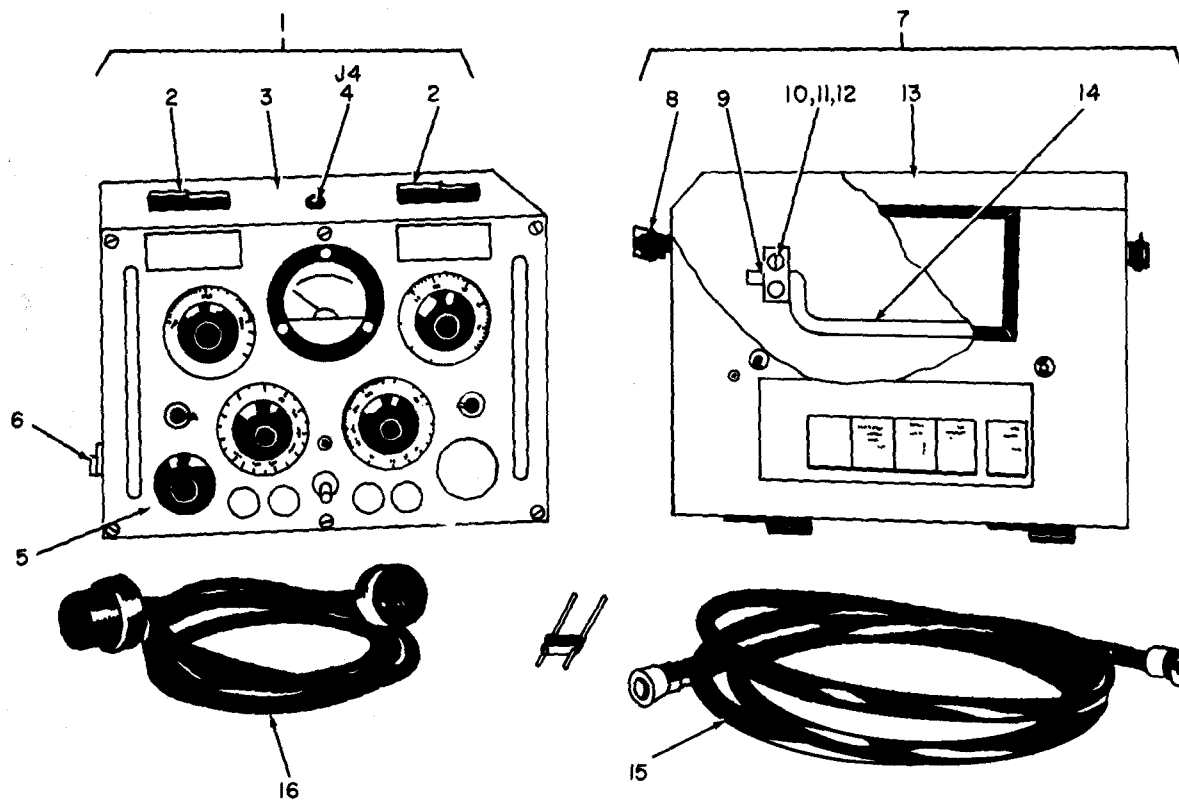

NOTE: ITEM NUMBER 6 IS PART OF I

EL4PX001

Figure 1. Test Set TS-538/U, TS-538A/U, TS-538B/U, TS-538C/U.

SECTION II (1) ILLUSTRATION		(2)	(3)	(4)	(5)	TM11-6625-213-34P (6)	(7)	(8)
(A) FIG NO	(B) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION	USABLE ON CODE	QTY INC IN UNIT
						GROUP 00 TEST SET TS-538/U, TS-538A/U, TS-538B/U, TS-538C/U		
1	1	XDFFF		SMD282557	80063	CABINET ASSEMBLY	EA	1
1	2	XDFZZ		SCB93214-2	80063	HINGE	EA	2
1	3	XDFZZ		SCD176417	80063	CABINET	EA	1
1	4	PAFZZ	5935-00-926-7460	UG291DU	80058	CONNECTOR, RCPT, ELEC	EA	1
1	5	XDFFF		SMD282558	80063	TEST SET ASSEMBLY	EA	1
1	6	XDFZZ		15797M	04582	CATCH, TOP	EA	2
1	7	XDOFF		SCD93213	80063	COVER ASSEMBLY	EA	1
1	8	PAFZZ	5340-00-205-5159	SCD20648	80063	CATCH ASSEMBLY	EA	2
1	9	XDFZZ		SCB93217	80063	CLAMP	EA	2
1	10	PAFZZ	5310-00-838-6537	MS35650-105	96906	NUT, PLAIN, HEXAGON	EA	4
1	11	XDFZZ		MS35337-100	96906	WASHER, LOCK	EA	4
1	12	PAFZZ	5305-00-582-9250	MS35229-61	96906	SCREW, MACHINE	EA	4
1	13	XDFZZ		SCD176434	80063	COVER	EA	1
1	14	XDFZZ		SCB93216	80063	HANDLE	EA	1
1	15	PAOFF	5995-00-889-0606	CG299BU7-5	80058	CABLE ASSEMBLY, RADIO FREQUENCY	EA	1
1	16	PAOFF	5995-00-577-3470	CX337U	80058	CABLE ASSEMBLY, POWER	EA	1