

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS
LISTS (INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
SPECTRUM ANALYZER AN/UPM-58
FSN 6625-523-8576**

HEADQUARTERS, DEPARTMENT OF THE ARMY

September 1973

Technical Manual
No. 11-6625-232-34P }
}

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 28 September 1973

**Direct Support and General Support Maintenance
Repair Parts and Special Tools Lists (Including
Depot Maintenance Repair Parts and Special Tools)
SPECTRUM ANALYZER AN/UPM-58
FSN 6625-523-8576**

Current as of February 1973

	Paragraph	Page
Section I. INTRODUCTION		
Scope	1-1	1
General	1-2	1
Explanation of columns.....	1-3	1
Special information	1-4	3
Location of repair parts.....	1-5	3
Abbreviations (Not applicable).....	1-6	3
Reporting of equipment publication improvements.....	1-7	3
II. REPAIR PARTS LIST		6
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER		
CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		25

***This manual supersedes TM 11-6625-232-35P, 26 March 1959, including all changes.**

SECTION I INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of direct support, general support, and depot maintenance of the AN/UPM-58. The PCCN for the AN/UPM-58 is GTEAAM for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. *Repair Parts List-Section II.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level. This repair parts list is arranged in alphabetical order.

b. *Special Tools, Test and Support Equipment - Section III.* Not applicable.

c. *Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number-Section IV.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are-

Code	Explanation
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

Code	Explanation
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF--	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at direct support maintenance level.
MH	Item to be manufactured or fabricated at general support maintenance level.
MD--	Item to be manufactured or fabricated at depot maintenance level.
AO	Item to be assembled at organizational level.
AF --	Item to be assembled at direct support maintenance level.
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XC	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD	Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

Code	Application/Explanation
-------------	--------------------------------

O--	Support item is removed, replaced, used at the organizational level of maintenance.
-----	---

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

F -	Support item is removed, replaced, used at the direct support maintenance level.
-----	--

H--	Support item is removed, replaced, used at the general support maintenance.
-----	---

D -	Support items that are removed, replaced, used at depot only.
-----	---

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be -repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multiservice equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code:

Code	Application/Explanation
-------------	--------------------------------

O -	The lowest maintenance level capable of complete repair of the support item is the organizational level.
-----	--

F -	The lowest maintenance level capable of complete repair of the support item is direct support.
-----	--

H -	The lowest maintenance level capable of complete repair of the support item is general support.
-----	---

Code	Application/Explanation
-------------	--------------------------------

D -	The lowest maintenance level capable of complete repair of the support item is the depo level.
-----	--

L -	Repair restricted to designated Specialized Repair Activity.
-----	--

Z -	Non repairable. No repair is authorized.
-----	--

B--	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.
-----	---

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows:

Code	Explanation
-------------	--------------------

Z -	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
-----	--

O--	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
-----	---

F -	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
-----	---

H -	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
-----	--

D -	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
-----	--

L--	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
-----	---

A--	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).
-----	---

b. *Federal Stock Number.* Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description.* Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.