

This copy is a reprint which includes current pages from Change 1.

*TM 11-6625-249-12P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR'S AND ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST AND MAINTENANCE ALLOCATION CHART FOR
RESISTANCE BRIDGES ZM-4A/U AND ZM-4B/U

Headquarters, Department of the Army, Washington 25, D. C.
30 June 1959

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope	1	1
Stockage	2	2
Batteries	3	2
References	4	2
Comments or suggestions	5	2
II. FUNCTIONAL PARTS LIST		
III. MAINTENANCE ALLOCATION		
General	6	4
Maintenance by using organizations	7	5
MAINTENANCE ALLOCATION CHART		6
ALLOCATION OF TOOLS FOR MAINTENANCE FUNCTIONS		8

SECTION I
INTRODUCTION

1. Scope

a. This manual lists items supplied for initial operation. The list includes all items authorized for basic operator maintenance of the equipment. End items of equipment are issued on the basis of allowances prescribed in equipment authorization tables and other documents that are a basis for requisitioning.

b. The columns are defined as follows:

- (1) *Federal or technical service stock number.* This column lists the 11-digit Federal stock number.
- (2) *Repair parts source, maintenance, and*

recoverability code. Not used.

- (3) *Designation by model.* Not used.
- (4) *Description.* Nomenclature or the standard item name and brief identifying data for each item are listed in this column. When requisitioning, enter the nomenclature and description on the requisition.
- (5) *Unit of issue.* The unit of issue is the supply medium by which the individual item is counted for procurement, storage, requisitioning, allowances, and issue purposes.

*This manual supersedes TM 11-6625-249-12P, 10 October 1958.

- (6) *Expendability.* Expendable items are indicated by the letter X; nonexpendable items are indicated by NX.
- (7) *Quantity authorized.* Under "Items Comprising an Operable Equipment" the column lists the quantity of items supplied for the initial operation of the equipment.
- (8) *Illustration.* Not used.

2. Stockage

No parts are authorized for stockage at second echelon level.

3. Batteries

Dry batteries indicated are used with the equipment but are not considered part of the equipment. They will not be preshipped auto-

matically but are to be requisitioned in quantities necessary for the particular organization, in accordance with SB 11-6.

4. References

Additional instructions concerning maintenance of this equipment are contained in TM 11-2019, Test Sets I-49, I-49A, and I-49B, and Resistance Bridges ZM-4A/U and ZM-4B/U.

5. Comments or Suggestions

Any comments concerning omissions and discrepancies in this manual will be prepared on DA Form 2028 and forwarded direct to Commanding Officer, U. S. Army Signal Equipment Support Agency, Fort Monmouth, N. J., ATTN : SIGFM/ES-ML.