

TM 11-6625-274-12

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR'S AND ORGANIZATIONAL
MAINTENANCE MANUAL

TEST SETS, ELECTRON TUBE TV-7/U,
TV-7A/U, TV-7B/U AND TV-7D/U

This copy is a reprint which includes current
pages front Charges 6 and 7.

HEADQUARTERS, DEPARTMENT OF THE ARMY

14 JUNE 1960

TECHNICAL MANUAL

No. 11-6625-274-12

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON 25, D.C., 14 June 1960

TEST SETS, ELECTRON TUBE
TV-7/U, TV-7A/U, TV-7B/U, AND TV-7D/U

	Paragraph	Page
CHAPTER 1.	INTRODUCTION	
Section I.	General	
	Scope	1 3
	Forms and records	2 7
II.	Description and data	
	Purpose and use	3 7
	Technical characteristics	4 7
	Table of components	5 7
	Description of test set	6 8
	Differences in models	7 8
CHAPTER 2.	INSTALLATION AND OPERATING INSTRUCTIONS	
Section I.	Service upon receipt of equipment	
	Unpacking.....	8 10
	Checking unpacked equipment.....	9 11
II.	Controls and indicator	
	General	10 11
	Controls, indicators, and jacks	11 11
III.	Operation under usual conditions	
	General instructions	12 13
	Test leads	13 14
	Tube test sockets	14 14
	Tube test data	15 14
	Adapters	16 15
IV.	Operating test set	
	Starting procedure	17 16
	Operating procedure.....	18 16
	Checking filament continuity (12-volt Filament tubes)	19 17
	Reading meter	20 18
	Gas test	21 18
	Noise test	22 19
	Panel lamp test	23 19
	Testing special tube types	24 19
	Testing subminiature tubes	25 19
	Stopping procedure	26 20

*This manual supersedes so much of TM 11-5083, 29 September 1953, including C1, 2 September 1955; C2, 8 February 1956, and C3, 1 April 1959, as pertains to operation and organizational maintenance; so much of C4, 26 August 1959, as pertains to packaging and repackaging; TM 11-6625-274-10P, 11 June 1959, and so much of TM 11-6625-274-20P, 11 June 1959, as pertains to the maintenance allocation chart.

	Paragraph	Page
V.	Operation under unusual conditions	
	General	27 20
	Operation at low temperatures	28 21
	Operation under tropical conditions	29 21
	Operation in desert climates	30 21
CHAPTER 3 .	MAINTENANCE INSTRUCTIONS	
	General	31 22
	Materials required	32 22
	Preventive maintenance	33 22
	Visual inspection	34 25
	Equipment performance checklist	35 25
	Removal of chassis	36 27
	Tube replacement	37 27
	Preferred-type tubes	38 28
	Replacement of lamps	39 28
CHAPTER 4 .	SHIPMENT, LIMITED STORAGE, AND DEMOLITION TO PREVENT ENEMY USE	
Section I.	Shipment and limited storage	
	Removal from service	40 30
	Repackaging for shipment or limited storage	41 30
II.	Demolition of materiel to prevent enemy use	
	Authority for demolition	42 32
	Methods of destruction	43 32
APPENDIX I.	REFERENCES	33
II.	OPERATOR'S MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST	34
III.	MAINTENANCE ALLOCATION CHART	37

CHAPTER 1


INTRODUCTION

Section I. GENERAL

1. Scope

a. This manual describes Test Sets, Electron Tube TV-7/U (fig. 1), TV-7A/U (fig. 2), TV-7B/U (fig. 3), and TV-7D/U (fig. 4), and covers installation, operation, and first and second echelon maintenance. It includes in-

structions for operation under usual and unusual conditions, cleaning and inspection of the equipment, and replacement of parts available to first and second echelon maintenance personnel.

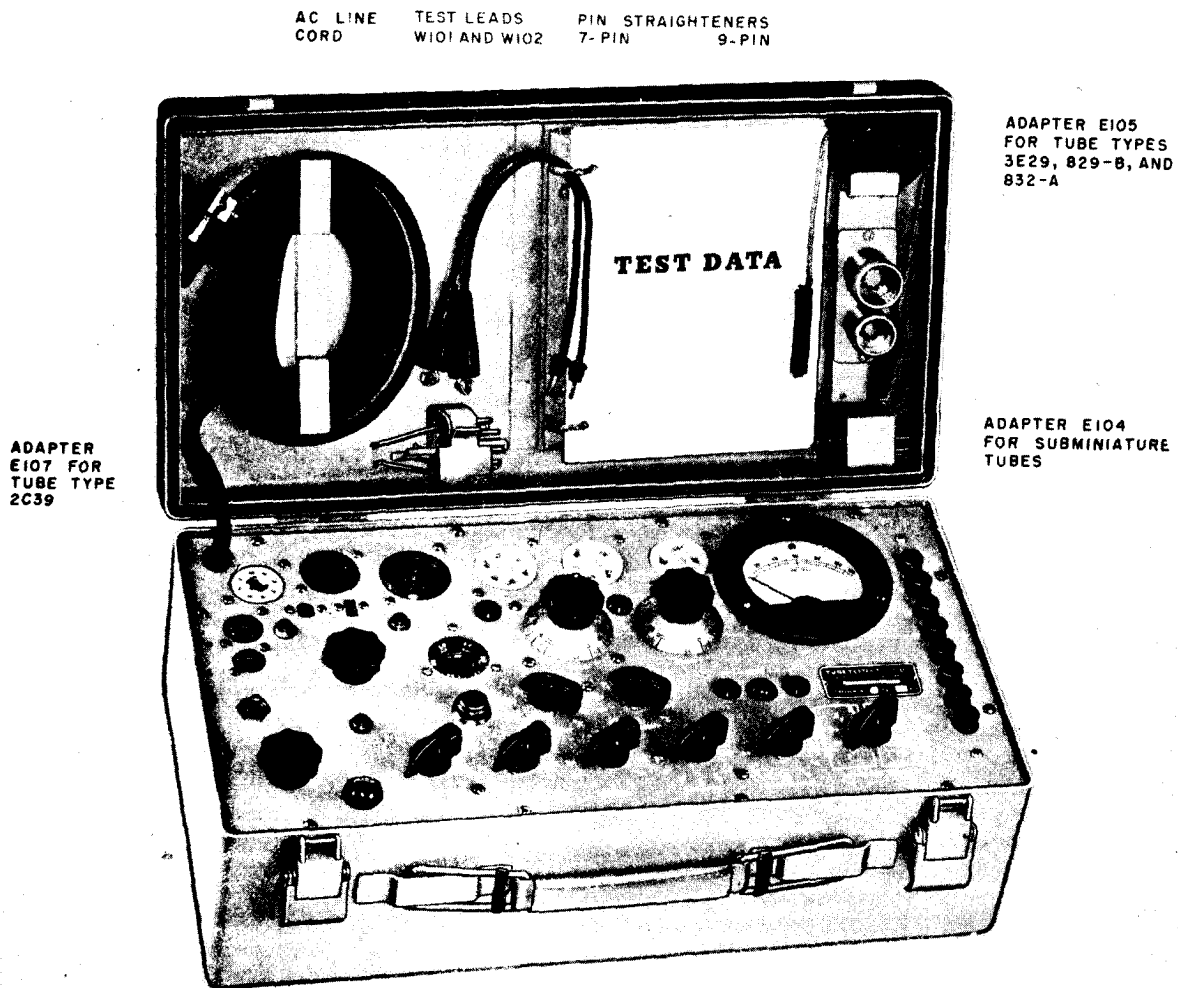

TM6625-274-12-1

Figure 1. Test Set, Electron Tube TV-7/U, less running spares.