
TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
[INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR

SIGNAL GENERATORS

AN/URM-64 (NSN 6625-00-283-9621)

AND

AN/URM-64A (NSN 6625-00-553-0433)

HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER 1978

TECHNICAL MANUAL }
No. 11-6625-299-24P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 22 November 1978

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS
FOR
SIGNAL GENERATORS
AN/URM-64 (NSN 6625-00-283-9621)
AND
AN/URM-64A (NSN 6625-00-553-0433)**

Current as of 7 June 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
S ECTION	I. Introduction	1	
	II. Repair parts list	5	
G ROUP	00 Signal Generators AN/URM-64, AN/URM-64A	5	1,2
	01 Signal Generators TS-419/U, TS-419A/U	9	3-9
	02 Power Cable CX-337/U (W101), Power Cable CX-3135/U (W101) (Used on TS-419A/U only)	39	10
	03 Radio Frequency Cable CG-546/U (W102)	41	11
	04 Video Cable CG-409/U (W103, W104), Video Cable CG-409A/U (W103, W104) (Used on TS-419A/U only) ..	43	12
SECTION	III. Special tools list (Not applicable)		
	Iv. National stock number and part number index	44	

*This manual supersedes TM 11-6625-299-20P, 13 December 1974 and TM 11-6625-299-34P, 28 March 1975.

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/URM-64 and AN/URM-64A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections

a. *Section II. Repair Parts List* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List* Not applicable.

c. *Section IV National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XD-A	support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance

Code	Application/Explanation
0	-Support item is removed, replaced, used at the organizational level.

H	-Support item is removed, replaced, used at the general support level.
---	--

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes

Code	Application/Explanation
o	—The lowest maintenance level capable of complete repair of the support item is the organizational level.
H	—The lowest maintenance level capable of complete repair of the support item is the general support level.
D	—The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	—Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z	—Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
0	—Reparable item. When uneconomically reparable, condemn and dispose at organizational level.
H	—Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
D	—Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

c. *National Stock Number.* Indicates the National

stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the “design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock-numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h Quantity Incorporated in Unit Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A “V” appearing in this column in lieu of a quantity indicates that no specific quantity is applicable, (e.g., shims, spacers, etc).

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are

Code	Used on
30C	AN/URM-64
30D	AN/URM-64A

b. The following publication pertains to the AN/URM-64 and AN/URM-64A and its components: TM 11-6625-299-15, Signal Generators AN/URM-64 and AN/URM-64A

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) First Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) Second. Find the illustration covering the functional group to which the item belongs.

(3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

(1) *First* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4.)

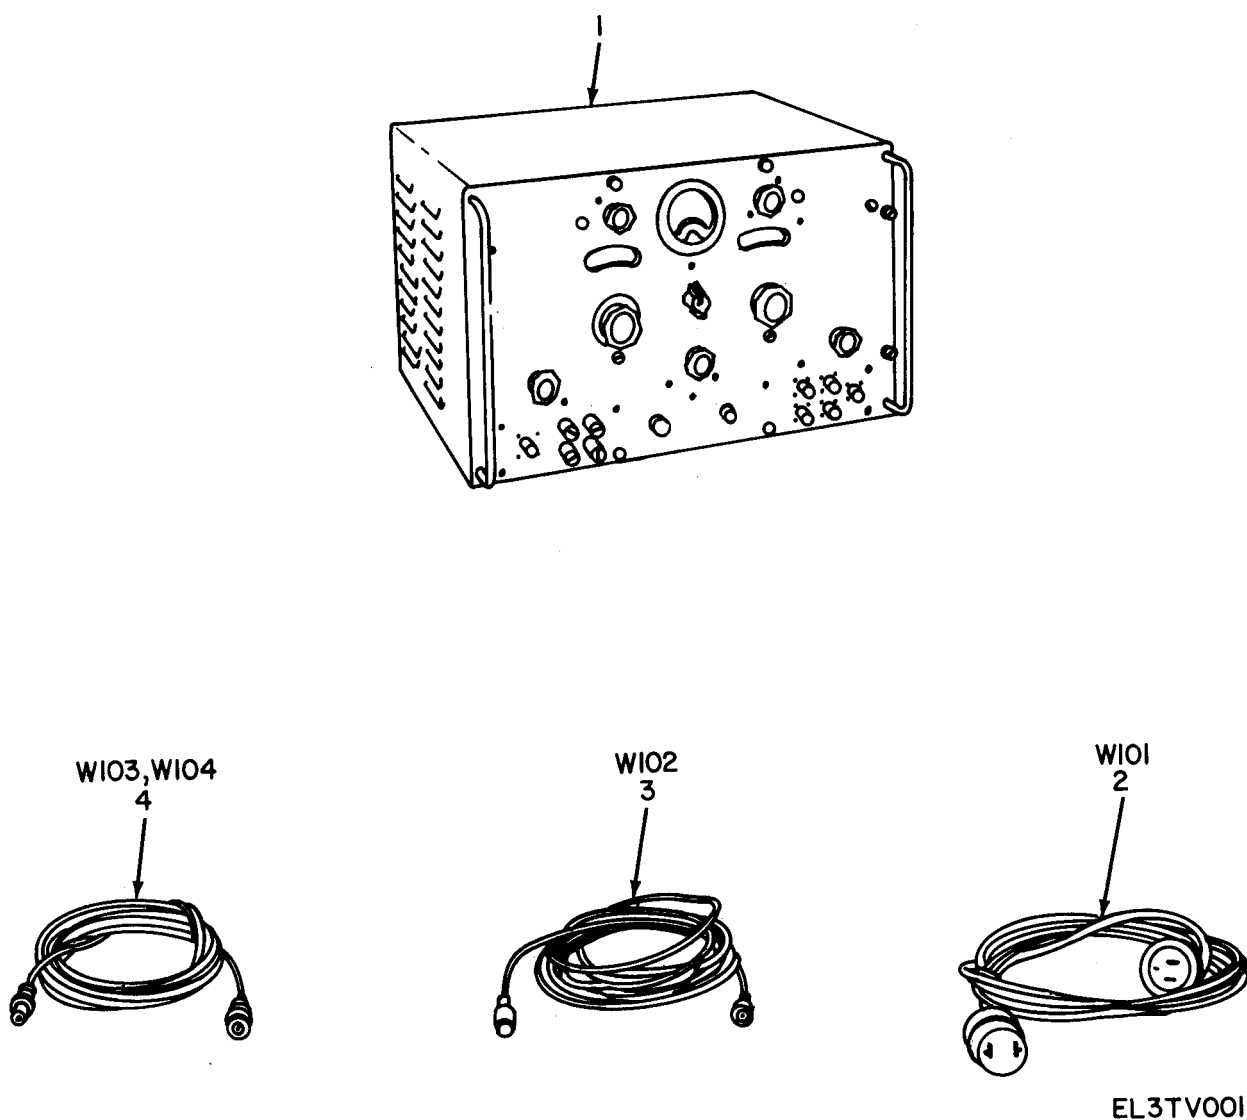


Figure 1. Signal Generators AN/URM.64 and AN/URM-64A.

SECTION II		TM11-6625-299-24P							
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)		
ILLUSTRATION					DESCRIPTION		QTY		
(A)	(B)						INC		
FIG	ITEM	SMR	NATIONAL	PART			IN		
NO	NO	CODE	STOCK	NUMBER	FSCM	USABLE ON CODE	U/M	UNIT	
GROUP 00 SIGNAL GENERATORS AN/URM-64 AND									
AN/URM-64A									
1	1	PAHDD	6625-00-257-4817	TS419U	80058	SIGNAL GENERATOR	30C	EA	1
1	1	XDHDD		TS419AU	80058	GENERATOR, SIGNAL	3CD	EA	1
1	2	PA000	5995-00-577-3470	CX337U	80058	CABLE ASSY, PWR	30C	EA	1
1	2	PA000	5995-00-823-2588	CX3135U	80058	CABLE ASSY, PWR	30D	EA	1
1	3	XD000		CG546U	80058	CABLE ASSEMBLY, RADI		EA	1
1	4	XD000		CG409AU	80058	CABLE ASSEMBLY, RADI		EA	2