

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) FREQUENCY METER TS-186D/UP FSN 6625-930-7203

Headquarters, Department of the Army, Washington, DC
16 December 1974

Current as of 1 October 1974

SECTION I. INTRODUCTION	Paragraph	Page
Scope	1-1	2
General	1-2	2
Explanation of columns	1-3	2
Special information	1-4	4
Location of repair parts	1-5	4
Abbreviations (Not applicable)	1-6	4
Reporting of equipment publication improvements	1-7	4
II. REPAIR PARTS LIST		6
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT		14
IV. INDEX — FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS- REFERENCE TO FIGURE AND ITEM NUMBER		15

THIS PUBLICATION IS A COURTESY QUICK COPY
FROM THE UNITED STATES ARMY PUBLICATIONS
DISTRIBUTION CENTER, ST. LOUIS, MISSOURI,
TO MEET YOUR NEEDS WHILE WE REPLENISH OUR
REGULAR STOCK.

SECTION I INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of direct support, general support, and depot maintenance of the TS-186D/UP. The PCCN for the TS-186D/UP is GTEAFM for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. Repair Parts List - Section II. A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level. This repair parts list is arranged in alphabetical order.

b. Special Tools, Test and Support Equipment - Section III. A list of special tools, test and support equipment authorized for the performance of maintenance at the direct support, general support and depot level.

c. Index - Federal Stock Number and Reference Number Cross - Reference to Figure and Item Number - Section IV. A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are:

<i>Code</i>	<i>Explanation</i>
PA - Item procured and stocked for anticipated or known usage.	stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.
PB - Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.	PE - Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PC - Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.	PF - Support equipment which will not be stocked but which will be centrally procured on demand.
PD - Support item, excluding support equipment, procured for initial issue or outfitting and	PG - Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
	KD - An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
	KF - An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct Support or general support levels of maintenance.
	KB - Item included in both a depot overhaul/repair kit and a maintenance kit.
	MO - Item to be manufactured or fabricated at organizational level.
	MF - Item to be manufactured or fabricated at direct support maintenance level.
	MH - Item to be manufactured or fabricated at general support maintenance level.
	MD - Item to be manufactured or fabricated at depot maintenance level.
	AO - Item to be assembled at organizational level.
	AF - Item to be assembled at direct support maintenance level.
	AH - Item to be assembled at general support maintenance level.
	AD - Item to be assembled at depot maintenance level.
	XA - Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
	XB - Item is not procured or stocked. If not available through salvage, requisition.
	XC - Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.