

TECHNICAL MANUAL

GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
SPECTRUM ANALYZER AN/UPM-84
(NSN 6625-00-557-8262)

TECHNICAL MANUAL HEADQUARTERS

No. 11-6625-359-40P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC 14 July 1977

GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
SPECTRUM ANALYZER AN/UPM-84
(NSN 6625-00-557-8262)
Current as of 7 February 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

		Page	Illus Figure
SECTION	I. INTRODUCTION	1	
	II. REPAIR PARTS LIST	5	
Group	00 Spectrum Analyzer AN/UPM-84	5	1
	01 Spectrum AnalyzerTS- 1011UPM-84	9	2
	0101 Tuning head and panel assembly	13	3
	010101 Panel assembly	17	4
	010102 163 MC filter and bracket assembly	19	5
	010103 Oscillator and tracking system assembly	21	6
	01010301 Tracking chassis assembly	25	7
	010104 Dial mount assembly	27	8
	010105 Oscillator drive assembly	31	9, 10
	01010501 Oscillator assembly	37	11
	01010502 Attenuator drive assembly	39	12
	010106 180 MC-Low pass filter	43	13
	0102 Chassis assembly, CRT (Power supply)	45	14
	0103 Chassis assembly, power supply	49	15, 16
	0104 Blower assembly	55	17
	0105 Wide band chassis and cover assembly	59	18
	0106 Video chassis and potentiometer assembly	63	19
	0107 Upper panel assembly	69	20
	010701 Spectrum calibrator	73	21
	0108 Sweeper filter chassis and cover assembly	77	22
	0109 Sweeper assembly	81	23
	0110 Narrow band chassis and cover assembly	85	24
	02 Cable Assembly, RFCG-1525	87	25
	03 Cable Assembly, Electrical Power CX-3974/U	88	26
	04 Cable Assembly, RF CG- 1526/U (18 inches)	89	27
	05 Cable Assembly, RF CG-1526/U (6 feet) (Same as Group 04)		
SECTION	III. SPECIAL TOOLS LIST (NOT APPLICABLE)		
	IV. NATIONAL STOCK NUMBER AND PART NUMBER INDEX	90	

***This manual supersedes TM 11-4625-359-35P. 1 December 1960.**

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the ANIUPM-84. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and parts numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
------	------------

PA--	Item procured and stocked for anticipated or known usage.
------	---

XD--	A support item that is not stocked. When required, item will be procured through normal supply channels.
------	--

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are as-signed to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O--	Support item is removed, replaced, used at the organizational level.
-----	--

H--	Support item is removed, replaced, used at the general support level.
-----	---

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
------	-------------------------

H--	The lowest maintenance level capable of complete repair of the support item is the general support level.
-----	---

Z--	Nonreparable. No repair is authorized.
-----	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
----------------------	------------

Z--	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
-----	--

H--	Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
-----	--

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.