

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)
SIGNAL GENERATOR SG-336/U
(FSN 6625-669-2395)**

Headquarters, Department of the Army, Washington, D.C.
20 December 1974

Current as of 3 October 1974

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope.....	1-1	2
General.....	1-2	2
Explanation of columns	1-3	2
Special information	1-4	4
Location of repair parts	1-5	4
Abbreviations (Not applicable).....	1-6	4
Reporting of equipment publication improvements	1-7	4
II. REPAIR PARTS LIST		6
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IV. INDEX --FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS- REFERENCE TO FIGURE AND ITEM NUMBER		17

SECTION I INTRODUCTION

1-1. Scope

This manual lists repair parts and special tool required for the performance of general support an depot maintenance of the SG-336/U. The PCCN for the SG-336/U is GTEAEK for all models.

NOTE

No parts authorized for stockage at direct support.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. *Repair Parts List -Section II.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, an depot level. This repair parts list is arranged in alphabetical order.

b. *Special Tools, Test and Support Equipment - Section, III.* Not applicable.

c. *Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number Section-IV.* A list, in ascending numeric sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of column found in the tabular list.

a. *Source, Maintenance and Recoverability Code (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are --

Code	Explanation
PA --	Item procured and stocked for anticipated or known usage.
PB --	Item procured and stocked for insurance purposes because essentiality dictate that a minimum quantity be available i the supply systems.
PC --	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD --	Support item, excluding support equipment procured for initial issue or outfitting and stocked only for subsequent or addition initial issues or outfittings. Not subject automatic replenishment.

Code	Explanation
PE --	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF --	Support equipment which will not be stocked but which will be centrally procured on demand.
PG --	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD --	An item of depot overhaul/repair kit and not purchased separately. Depot kit (defined as a kit that provides items required at the time of overhaul or repair.
KF --	An item of a maintenance kit and not purchased separately. Maintenance kit. defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB --	Item included in both a depot over haul/repair kit and a maintenance kit.
MO --	Item to be manufactured or fabricated at organizational level.
MF --	Item to be manufactured or fabricated at direct support maintenance level.
MH --	Item to be manufactured or fabricated at general support maintenance level.
MD --	Item to be manufactured or fabricated at depot maintenance level.
AO --	Item to be assembled at organizational level.
AF --	Item to be assembled at direct support maintenance level.
AH --	Item to be assembled at general support maintenance level.
AD --	Item to be assembled at depot maintenance level.
XA --	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB --	Item is not procured or stocked. If not available through salvage, requisition.
XC --	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD --	Support items can be requisitioned with justification.