

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
FOR
TEST SETS, RADIO
AN/ARM-45 (NSN 6625-00-855-9447)
AND
AN/ARM-45A**

Headquarters, Department of the Army, Washington, DC
30 September 1976

Current as of 28 June 1976

REPORTING OF ERRORS

You can help improve this manual by calling attention to errors and by recommending improvements and stating your reasons for the recommendations. Your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) should be mailed direct to Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703. A reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I. Introduction.....	1	
	II. Repair parts list.....	5	
GROUP	00 Test Sets, Radio AN/ARM-45 and AN/ARM-45A.....	5	1
	01 Test Set Subassembly MX3736A, AN/ARM-45 and MX3736A AN/ARM-45A (No parts authorized)		
	02 Cable assembly, number 1A (No parts authorized)		
	03 Cable assembly, number 2 (No parts authorized)		
	04 Cable assembly, number 4 (No parts authorized)		
	05 Cable assembly, number 5 (No parts authorized)		
	06 Cable assembly, number 3 (No parts authorized)		
	07 Cable assembly, number 1B (No parts authorized)		
	08 Panel assembly.....	5	1
	0801 Board assembly A1 (No parts authorized)		
	0802 Board assembly A2 (No parts authorized)		
	0803 Board assembly A3 (No parts authorized)		
	0804 Cable assembly A4 (No parts authorized)		
	0805 Cable assembly A5 (No parts authorized)		
	0806 Cable assembly A6 (No parts authorized)		
	0807 Cable assembly A7 (No parts authorized)		
	080701 Cable assembly A2 (No parts authorized)		
	0808 Cable assembly A8 (No parts authorized)		
	0809 Cable assembly A9 (No parts authorized)		
	0810 Control Unit, 614U-5 (No parts authorized)		
	0811 Dummy load assembly (No parts authorized)		
	081101 Cable assembly A11A1, A11A2, A11A3 (No parts authorized)		
	09 Chassis, dummy load (No parts authorized)		

*This manual supersedes TM 11-6625-409-20P, 26 June 1970.

Table of Contents - Cont'd

			Page	Illus Figure
GROUP	10	Patch cable, power number 1 (No parts authorized)		
	11	Patch cable, R.F. number 1 (No parts authorized)		
	11	Patch cable, R.F. number 2 (No parts authorized)		
	13	Patch cable, R.F./V.I.F. (No parts authorized)		
	14	Patch cable, audio (No parts authorized)		
	15	Patch cable, power number 2 (No parts authorized)		
	16	Patch cable, modulator (No parts authorized)		
	17	Patch cable (No parts authorized)		
SECTION	III.	Special tools list (Not applicable)		
	IV.	National stock number and part number index (Not applicable)		

SECTION I INTRODUCTION

1. Scope

This manual lists repair parts and special tools required for performance of organizational maintenance of the AN/ARM-45 and AN/ARM-45A.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* Not applicable.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. *Illustration.* This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration in which the item is shown.

(2) Item number. The number used to identify each item called out in the illustration.

b. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) Source code. Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA-	Item procured and stocked for anticipated or known usage.
XD-	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD, and aircraft support items as restricted by AR 70042.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance

level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/& Explanation
0 -	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/& Explanation
F -	The lowest maintenance level capable of complete repair of the support item is the direct support level.
Z -	Nonreparable. No repair is authorized.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z -	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
F	-Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.

c. *National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. *Part Number.* Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements, to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. *Federal Supply Code for Manufacturer (FSCM).* The FSCM is a 5-digit numeric code listed in SB 70842 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. *Description.* Indicates the Federal item name and, if required, a minimum description to identify the item.