

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDED DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

FOR

**TEST SETS, TELETYPEWRITER
AN/GGM-1 (NSN 6625-00-897-5505)
AN/GGM-2 (NSN 6625-00-893-1726)
AN/GGM-3 (NSN 6625-00-893-1727)
AN/GGM-4 (NSN 6625-00-893-1728)
AND
AN/GGM-5 (NSN 662500-893-1735)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

FEBRUARY 1978

ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR

TEST SETS, TELETYPESWRITER
AN/GGM-1 (NSN 6625-00-897-5505)
AN/GGM-2 (NSN 6625-00-893-1726)
AN/GGM-3 (NSN 6625-00-893-1727)
AN/GGM-4 (NSN 6625-00-893-1728)
AND
AN/GGM-5 (NSN 662500-893-1735)

Current as of 23 September 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list.....	5	
Group	00 Test Sets, Teletypewriter AN/GGM-1, ANGGM-2	5	1-4
	01 Test Set, Teletypewriter TS-1512/GGM (See TM 11-6625-422-25P-2 for parts)		
	0101 Assembly (A1) (See TM 11-6625-422-25P-2 for parts)		
	010101 Front panel (A1A1) (See TM 11-6625-422-25P-2 for parts)		
	010102 Rear panel assembly (A1A2) (See TM 11-6625-422-25P-2 for parts)		
	0102 Main assembly (A2) (See TM 11-6625422-25P-2 for parts)		
	010201 Printed circuit board (A2A1) (See TM 11-6625-422-25P-2 for parts)		
	010202 Printed circuit board A2A2) (See TM 11-6625-422-25P-2 for parts)		
	010203 Printed circuit board (A2A3) (See TM 11-6625-422-25P-2 for parts)		
	010204 Printed circuit board A2A4) (See TM 11-11-6625-422-25P-2 for parts)		
	010205 Printed circuit board (A2A5) (See TM 11-6625-422-25P-2 for parts)		
	010206 Printed circuit board (A2A6) (See TM 11-6625-422-25P-2 for parts)		
	010207 Printed circuit board (A2A7) (See TM 11-6625-422-25P-2 for parts)		
	010208 Printed circuit board (A2A8) (See TM 11-6625422-25P-2 for parts)		

*This manual supersedes TM 11-6625-422-24P, 31 July 1973.

Table of Contents-Continued

Group		Page	Illus Figure
	010209 Printed circuit board (A2A9) (See TM 11-6625-422-25P-2 for parts)		
	010210 Extender board (A2A10) (See TM 11-6625422-25P-2 for parts)		
	010211 Printed circuit board (A2A11) (See TM 11-6625-422-25P-2 for parts)		
	010212 Printed circuit board (A2A12) (See TM 11-6625-422-25P-2 for parts)		
	010213 Printed circuit board (A2A13) (See TM 11-6625-422-25P-2 for parts)		
	010214 Printed circuit board (A2A14) (See TM 11-6625422-25P-2 for parts)		
	010215 Printed circuit board (A2A15) (See TM 11-6625-422-25P-2 for parts)		
	010216 Printed circuit board (A2A16) (See TM 11-6625422-25P-2 for parts)		
	010217 Printed circuit board (A2A17) (See TM 11-6625-422-25P-2 for parts)		
	010218 Printed circuit board (A2A18) (See TM 11-6625-422-25P-2 for parts)		
02	Oscilloscope OS-119/GGM (See TM 11-6625422-24P-3 for parts)		
03	Generator, Time Base SG-430GGM (See TM 11-6625-422-25P-4 for parts)		
	0301 Variable baud oscillator assembly (PC-467) (See TM 11-6625-422-25P-4 for parts)		
	0302 37.5 baud oscillator assembly (PC457) (See TM 11-6625-422-25P-4 for p arts)		
	0303 46.5 baud oscillator assembly (PC-463) (See TM 11-6625-422-25P-4 for parts)		
	0304 61.1 baud oscillator assembly (PC-463) (See TM 11-6625-422-25P-4 for parts)		
	0305 742 baud oscillator assembly (See TM 11-6625422-25P-4 for parts)		
	0306 112.5 baud oscillator assembly (See TM 11-625-422-25P-4 for parts)		
	0307 150 baud oscillator assembly (See TM 11-6625422-25P-4 for parts)		
	0308 Alarm assembly (PC-484) (See TM 11-6625-422-25P-4 for parts)		
04	Generator, Test pattern SG-431/GGM (See TM 11-6625-422-25P-5 for parts)		
	0401 Electronic relay assembly (A1A3) (See TM 11-6625-422-25P-5 for parts)		
	0402 Printed circuit card assembly (A2A1) (See TM 11-6625-422-25P-5 for parts)		
	0403 Printed circuit card assembly (A2A2) (See TM 11-6625-422-25P-5 for parts)		
	0404 Printed circuit card assembly (A2A3) (See TM 11-6625422-25P-5 for parts)		
	0405 Printed circuit card assembly (A2A4) (See TM 11-6625-422-25P-5 for parts)		
	0406 Printed circuit card assembly (A2A5) (See TM 11-6625-422-25P-5 for parts)		
	0407 Printed circuit card assembly (A2A6) (See TM 11-6625-422-25P-5 for parts)		
	0408 Printed circuit card assembly (A2A7) (See TM 11-625-422-25P-5 for parts)		
	0409 Printed circuit card assembly (A2A8) (See TM 11-6625-422-25P-5 for parts)		
	0410 Printed circuit card assembly (A2A9) (See TM 11-6625422-25P-5 for parts)		
	0411 Printed circuit card assembly (A2A10) (See TM 11-6625-422-25P-5 for parts)		
	0412 Printed circuit card assembly (A2A11) (See TM 11-662422-25P-5 for parts)		
	0413 Printed circuit card assembly (A2A12) (See TM 11-6625-422-25P-5 for parts)		
	0414 Printed circuit card assembly (A2A13) (See TM 114625-422-25P-5 for parts)		
	0415 Printed circuit card assembly (A2A14) (See TM 11-6625-422-25P-5 for parts)		
	0416 Printed circuit card assembly (A2A15) (See TM 11-6625-422-25P-5 for parts)		
	0417 Printed circuit card assembly (A2A16) (See TM 11-6625422-25P-5 for parts)		
	0418 Printed circuit card assembly (A2A17) (See TM 114625-422-25P-5 for parts)		
	0419 Printed circuit card assembly (A2A18) (See TM 11-6625422-25P-5 for parts)		
	0420 Printed circuit card assembly (A2A19) (See TM 11-6625-422-25P-5 for parts)		
	0421 Printed circuit card assembly (A2A20) (See TM 11-625-422-25P-5 for parts)		
	0422 Printed circuit card assembly (A2A21) (See TM 11-6625-422-25P-5 for parts)		
05	Power Supply PP-2971/GGM (See TM 11-6625-422-25P-5 for parts)		
00	Test Sets, Teletypewriter AN/GGM-3, AN/GGM415	15	5-7
01	Test Set, Teletypewriter TS-1512/GGM (See TM 11-6625-422-25P-2 for parts)		
02	Oscilloscope OS-119/GGM (See TM 11-6625422-24P-3 for parts)		
03	Generator, Test Pattern SG-431/GGM (See TM 11-6625-422-25P-5 for parts)		
04	Power Supply PP-2971/GGM (See TM 11-6625-422-25P-1 for parts)		
00	Test Set, Teletypewriter AN/GGM-527	27	8-10
01	Test Set, Teletypewriter TS-1512/GGM (See TM 11-6625-422-25P-2 for parts)		
02	Power Supply PP-2971/GGM (See TM 11-6625422-25P-1 for parts)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index32	32	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/GGM-1, AN/GGM-2, AN/GGM-3, AN/GGM-4, and AN/GGM-5. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

- (1). *Figure number.* Indicates the figure number of the illustration on which the item is shown.
- (2). *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

- (1). *Source code.* Source codes indicate the

manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA.	Item procured and stocked for anticipated or known usage.
XD.	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 70042.

(2). *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a). *The maintenance code* entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
C.	Crew or operator maintenance performed within organizational maintenance.
O.	Support item is removed, replaced, used at the organizational level.
H.	Support item is removed, replaced, used at the general, support level.

(b). The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes: