

***TM 5-6675-309-24P**
TM 08840A-24P/2

TECHNICAL MANUAL

**Unit, Direct Support, General Support
and Depot Maintenance Repair Parts
and Special Tools List
for**

**POWER SUPPLY TEST SET
AN/USM-428
NSN 6675-01-075-4033**

Approved for public release; distribution is unlimited.

***This manual supersedes TM 5-6675-309-24P, dated 20 February 1967.**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
HEADQUARTERS, U.S. MARINE CORPS
22 JULY 1992**

TECHNICAL MANUAL

NO. 5-6675-309-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
AND HEADQUARTERS U.S. MARINE CORPS
WASHINGTON, D.C., 22 JULY 1992

UNIT, DIRECT SUPPORT GENERAL SUPPORT, AND DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

FOR
POWER SUPPLY TEST SET
AN/USM-428
NSN 6675-01-075-4033

Current as of 3 April 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Troop Support Command, ATTN: AMSTR-MMTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Marine Corps users shall submit NAVMC Form 10772 (Recommended Changes to Technical Publications). Send to: Commanding General, Marine Corps Logistics Base (Code 850), Albany, GA 31704-5000.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I	INTRODUCTION	1	
Section II	REPAIR PARTS LIST	1-1	
Group 01	Test Set, Power Supply		
	Power Supply Test Set AN/USM-428	1-1	1
	Power Supply Test Set Exploded View	2-1	2
	Instrument Case Assembly	3-1	3
	Electronic Component Assembly No. 1	4-1	4
	Electronic Component Assembly No. 2	5-1	5
	Current Limiter Component Assembly	6-1	6

* This manual supersedes TM 5-6675-309-24P/ TM 08840A-24P/2, dated 20 February 1987.

		Illus/ Page Figure
Group 02	Cable Power	
	Cable Assembly Set Exploded View	7-1 7
Group 03	Case	
	Power Supply Test Set Case CY-7564/USM428	8-1 8
	Power Supply Test Set Accessory Case CY-7610/USM428	9-1 9
Section III	SPECIAL TOOLS LIST (Not Applicable)	
Section IV	CROSS REFERENCE INDEXES	1-1
	National Stock Number Index	1-1
	Part Number Index	1-3
	Figure and Item Number Index	1-13

UNIT, DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Power Supply Test Set. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II.** Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items are shown in the associated illustration(s)/figure(s).

 
 
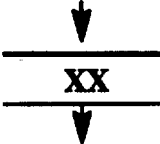
b. **Section III.** Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV.** Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a S-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

Source Code	Maintenance Code	Recoverability Code
		
How you get an item	3rd position Who can install replace or use the item	4th position Who can do complete repair* on the item
		Who determines disposition action on an unserviceable item

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items: use the applicable NSN to requested/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
MO - (Made at org/AVUM Level) MP - (Made at DS/AVUM Level) MH - (Made at GS Level) ML - (Made at Specialized Repair Activity (SRA)) MD - (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO - (Assembled by org/AVUM Level) AF - (Assembled by DS/AVIM Level) AH - (Assembled by GS Category) AL - (Assembled by SRA) AD - (Assembled by Depot)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA -	Do not requisition "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
XB -	If an "XB" item is not available from salvage, order it using the CAGEC and part number given.
x c -	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by Reciprocating Compressor manufacturer's part number.
XD -	Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given if no NSN is available.