

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

SIGNAL GENERATOR, MCL, MODEL 15122

APN MIS-35936/1

NSN 4931-01-019-7939

Current as of 18 July 1986

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) to: Commander, U.S. Army TMDE Support Group, ATTN: AMXTM-LML, Redstone Arsenal, AL 35898-5400. A reply will be furnished directly to you.

TABLE OF CONTENTS

			Page
Section	I	INTRODUCTION	1
Section	II.	REPAIR PARTS LIST.....	
Group	0010	Signal generator	2-1
	0020	Module, plug-in	2-2
	0030	Module, plug-in	2-2
	0040	Module, plug-in	2-3
	0050	Module, plug-in	2-3
Section	III.	SPECIAL TOOLS LIST (Not applicable)	
Section	IV.	NATIONAL STOCK NUMBER AND PART NUMBER INDEX.....	I-1

*This manual supersedes TM 9-4931-494-34P, 30 September 1976.

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. Scope. This RPSTL lists and authorizes spares and repair parts required for performance of direct and general support maintenance of Signal Generator, MCL, Model 15122. It authorizes the requisitioning, issue, and disposition of spares and repair parts as indicated by the Source, Maintenance and Recoverability (SMR) codes.

2. General. In addition to this section I, Introduction, the Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. Parts lists are composed of functional groups in ascending numeric sequence. Parts are listed in alphabetical sequence within each figure number.


b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National Item Identification Number (NIIN) sequence, of all National Stock Numbered (NSN) items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listing. NSN's and part numbers are cross-referenced to the figure and item number appearance.

3. Explanation of Columns (Section II)

a. Item No. (Column (1)). Indicates the number used to identify each item appearing in the listing.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions as shown in the following breakdown:

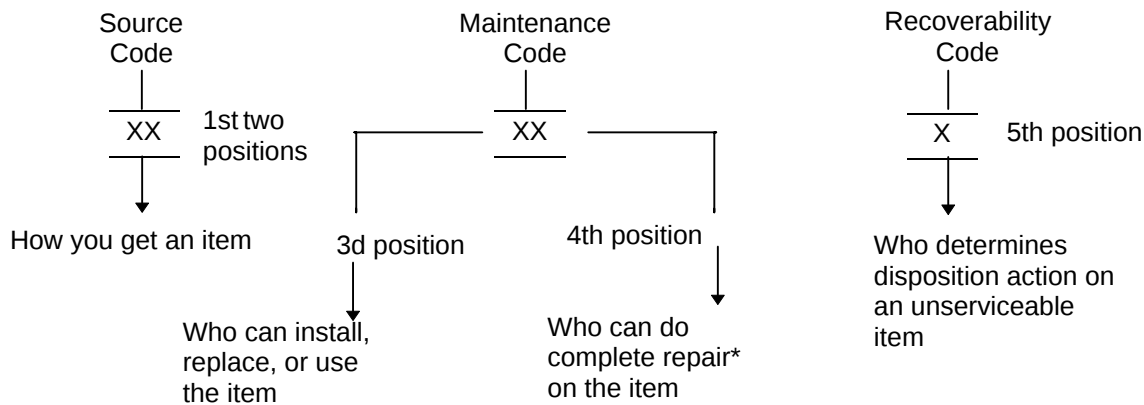

*Complete Repair: Maintenance capacity, capability, and authority to perform all the corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how you get an item needed for maintenance, repair, or overhaul of an end item/equipment. Source codes are always the first two positions of the SMR code. Explanation of source codes follows:

Code	Explanation
PA	- Stocked items; use the applicable NSN to request/requisition items with this code. This item is authorized to the category indicated by the code entered in the 3d position of the SMR code.
XD	- Item is not stocked. Order an "XD" coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

(2) Maintenance Code. Maintenance codes tell you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to the following level of maintenance.

Code	Application/Explanation
F	-Direct support level can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells you whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions). This position will contain one of the following codes.

Code	Application/Explanation
F	-Direct support is the lowest level that can do complete repair of the item.
Z	-Nonreparable. No repair is authorized.

(3) Recoverability Code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR code as follows:

Recoverability Codes	Definition
Z	-Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in the third position of the SMR code.
F	-Reparable item. When uneconomically reparable, condemn and dispose of the item at the direct support level.