
TECHNICAL MANUAL

**DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)**

**LUBRICATING AND SERVICING UNIT, POWER
OPERATED, TRAILER MTD, 23 CFM COMPRESSOR,
RECIPROCATING, GASOLINE DRIVEN
(HENRY SPEN MODEL 901765-1)**

NSN 4930-00-017-9167

This manual supersedes TM 5-4930-207-35P, 9 November 1970.

HEADQUARTERS, DEPARTMENT OF THE ARMY

10 OCTOBER 1980

TECHNICAL MANUAL

No. 5-4930-207-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 10 Oct 30DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)LUBRICATING AND SERVICING UNIT, POWER OPERATED,
TRAILER MTD, 23 CFM COMPRESSOR, RECIPROCATING,
GASOLINE DRIVEN (HENRY SPEN MODEL 901765-1)

NSN 4930-00-017-9167

Current as of 14 MAY 1980

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Table of Contents

	Listing Page	Illus Figure
SECTION I. INTRODUCTION		
II. REPAIR PARTS LIST		
Group 01 Inclosure, Work Platform and Battery Holddown.		
Inclosure Assembly	6	1
Work Platform	8	2
Work Platform Shims	10	3
Battery Holddown	12	4
Group 02 Battery Box, Tool Box.		
Battery Box, Tool Box.	14	5
Group 03 Accessory Items		
Fire Extinguisher	16	6
Upper Storage Drawer	18	7
Grease Gun	20	8
Upper Storage Drawer.	22	9
Grease Gun, Portable.	24	10
Transfer Pump, Valve and Cylinder	26	11
Transfer Pump, Valve and Cylinder	28	12
Transfer Pump, Valve and Cylinder.	30	13
Extension Lamp	32	14
Group 04 Hose Reels		
Reel Bank Assembly	34	15
Reel Assembly, Air.	36	16
Reel Assembly, Lubricant	38	17
Valve, Grease Dispensing.	40	18
Meter, Grease, Nozzle, Assembly.	42	19
Meter, Grease, Housing Assembly	44	20

Table of Contents (Cont)

	Listing Page	Illus Figure
Reel Assembly, Lubricant	38	17
Valve, Grease Dispensing	40	18
Meter, Grease, Nozzle, Assembly	42	19
Meter, Grease, Housing Assembly.	44	20
Group 05 Fuel System and Exhaust Diverter		
Exhaust Diverter	46	21
Fuel System	48	22
Group 06 Control Panel		
Control Panel	50	23
Group 07 Compressor and Drive		
Compressor, Drive Belt and Guard	52	24
Air Intake Assembly	54	25
Compressor Tubing and Flywheel	56	26
Unloader	58	27
Cylinder Head	60	28
Compressor Connecting Rods and Rings	62	29
Compressor Crankcase and Components.	64	30
Group 08 Engine and Accessories		
Engine Bolt and Guard	66	31
Engine and Related Parts.	68	32
Generator Mounting, and Oil Filter Lines	70	33
Generator Explode	72	34
Generator Assembly	74	35
Starter Switch	76	36
Starter Assembly	78	37
Group 09 Air Receiver and Alcohol Dispenser		
Air Receiver and Lines	80	38
Alacohol Dispenser	82	39
Group 10 Lubricating Pumps, Valves and Tank Covers		
Flow Regulator and Lines.	84	40
Air Regulator	86	41
Lubrication Tank Cover.	88	42
High Pressure Pump and Lubrication Lines	90	43
High Pressure Pump Tube Assembly	92	44
Circulating Valve, High Pressure.	94	45
Packing Group Body, High Pressure.	96	46
High Pressure Air Motor Explode	98	47
High Pressure Air Motor Components	100	48
High Pressure Air Motor, Bottom Section	102	49
Low Pressure Pump	104	50
Low Pressure Tube Assembly.	106	51
Circulating Valve, Low Pressure	108	52
Packing Group Body, Low Pressure	110	53
Low Pressure Air Motor Explode.	112	54
Low Pressure Air Motor Components.	114	55
Low Pressure Air Motor, Bottom Section	116	56
Lubrication Frame	118	57

Table of Contents (Cont)

		Listing Page	Illus Figure
Group 11	Trailer Lights and Wiring Harness		
	Stoplight, Blackout	122	58
	Stoplight, Taillight	124	59
	Clearance Lights	126	60
	Power Receptacle	128	61
	Trailer Wiring and Reflectors	130	62
Group 12	Tires and Wheels.		
	Tires and Wheels	132	62A
Group 13	Brake System, Air and Hydraulic		
	Air Brake Lines and Fittings.	134	63
	Air Brake Line Filter	136	64
	Air Chamber, Brake	138	65
	Master Brake Cylinder	140	66
	Hydraulic Brake Lines	142	67
Group 14	Wheel Hub and Service Brakes		
	Brake Drum and Wheel Hub.	144	68
	Service Brakes Explode	146	69
	Service Brakes.	148	70
	Wheel Cylinder	150	71
Group 15	Shock Absorbers, Axle and Springs		
	Shock Absorber and Springs.	152	72
	Axle	154	73
Group 16	Wheel Chocks, Coupler and Rear Support Assembly		
	Wheel Chock	156	74
	Coupler and Safety Chain.	158	75
	Rear Support Assembly Explode	160	76
	Rear Support Assembly	162	77
Group 17	Trailer Frame and Fenders.		
	Fenders	164	78
	Trailer Frame	166	79
Section III.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (NOT APPLICABLE)		
IV.	FEDERAL STOCK NUMBER AND REFERENCE NUMBER INDEX		

Section I. INTRODUCTION

1. Scope. This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support depot maintenance of the Lubricating Unit. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General. This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed in NSN sequence.

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National Item Identification Number (NIIN) sequence, of all National Stock Numbers (NSN) appearing in the listings, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. This index is followed by a cross-reference list of reference designators to figure and item numbers.

3. Explanation of Columns.

a. Illustration. This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration on which the item is shown.

(2) Item Number. The number used to identify item called out in the illustration.

b. Source, Maintenance and Recoverability (SMR) Codes.

(1) Source Code. Source codes indicate the manner of acquiring support items for maintenance, repair or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KD	An item of a depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.