

TECHNICAL MANUAL
DIRECT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
LUBRICATING AND SERVICING UNIT,
POWER OPERATED, TRAILER MOUNTED,
23 CFM, COMPRESSOR,
RECIPROCATING,
GED (ELLIOTT MACHINE MODEL ENG 3)
NSN 4930-00-935-4451

*This manual supersedes TM 5-4930-217-34P, 9 April 1987, including all changes.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

18 MAY 1990

TECHNICAL MANUAL

TM 5-4930-217-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 18 May 1990Direct Support and General Support Maintenance
Repair Parts and Special Tools List

For

LUBRICATING AND SERVICING UNIT,
POWER OPERATED, TRAILER MOUNTED,
23 CFM, COMPRESSOR, RECIPROCATING,
GED (ELLIOTT MACHINE MODEL ENG 3)
NSN 4930-00-935-4451

Current as of 21 December 1989

Approved for public release; distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

		Page	Illus. Figure
Section I.	INTRODUCTION	1	
II.	REPAIR PARTS LIST	1-1	
Group 01.	Enclosure	1-1	1
Group 02.	Pump Transfer		
	Pump Transfer "A"	2-1	2
	Pump Valve and Oiler "A"	3-1	3
	Pump Transfer "A"	4-1	4
	Pump Transfer "B"	5-1	5
Group 03.	Hose Lines and Fittings	6-1	6
Group 04.	Light Assembly and Frame	7-1	7
	Light	7-1	7
	Frame	8-1	8
Group 05.	Alcohol Dispenser Valve Control	9-1	9
	Alcohol Dispenser	10-1	10
Group 06.	Reel Assembly		
	Reel	11-1	11
Group 07.	Air Regulator	12-1	12
Group 08.	High and Low Pressure Pumps		
	High and Low Pressure Pump "A"	13-1	13
	High and Low Pressure Pump "A"	14-1	14
	High and Low Pressure Pump "B"	15-1	15

*This manual supersedes TM 5-4930-217-34P, 9 April 1987, including all changes.

TABLE OF CONTENTS (Continued)

		Page	Illus. Figure
Group 09.	Control Panel	16-1	16
Group 10.	Reservoir	17-1	17
Group 11.	Lubricating Unit	18-1	18
Group 12.	Tool Box	19-1	19
Group 13.	Air Drain Assembly		
	Air Drain	20-1	20
Group 14.	Fittings		
	Accessories	21-1	21
	Fittings	22-1	22
	Accessories	23-1	23
Group 15.	Drawers	24-1	24
Group 16.	Batteries and Box	25-1	25
Group 17.	Frame	26-1	26
Group 18.	Control Valves		
	Control Valves, Grease "B"	27-1	27
	Control Valve, Oil "A"	28-1	28
	Control Valve, Grease "A"	29-1	29
	Control Valve, Oil "B"	30-1	30
Group 19.	Fuel Tank	31-1	31
Group 20.	Generator		
	Guard Generator	32-1	32
	Engine Generator	33-1	33
Group 21.	Starter		
	Starter "A"	34-1	34
	Starter "B"	35-1	35
Group 22.	Diverters	36-1	36
Group 23.	Engine Sheave	37-1	37
Group 24.	Engine and Components	38-1	38
Group 25.	Compressor and Guards	39-1	39
	Air Cleaner	40-1	40
	Cylinder Head	41-1	41
	Piston	42-1	42
	Crankcase	43-1	43
Group 26.	Compressor Tank and Lines	44-1	44
	Valve	45-1	45
Group 27.	Valve Relay	46-1	46
Group 28.	Master Cylinder	47-1	47
Group 29.	Air Chamber	48-1	48
Group 30.	Air Filter	49-1	49
Group 31.	Air Tank	50-1	50
Group 32.	Brake Lines	51-1	51
Group 33.	Clearance Lights, Stoplight and Reflector		
	Clearance Lights	52-1	52
	Stoplight, Blackout	53-1	53
	Stoplight	54-1	54
	Reflector	55-1	55
Group 34.	Cable Assembly		
	Cable	56-1	56
Group 35.	Lunette, Safety Chain	57-1	57
Group 36.	Chock Blocks	58-1	58
Group 37.	Fenders	59-1	59

TABLE OF CONTENTS (Continued)

		Page	Illus. Figure
Group 38.	Landing Gear		
	Retractable Support Assembly	60-1	60
Group 39.	Wheels.....	61-1	61
Group 40.	Wheel Hub.....	62-1	62
Group 41.	Wheel Cylinders.....	63-1	63
Group 42.	Brakes.....	64-1	64
Group 43.	Axle	65-1	65
Group 44.	Catwalk.....	66-1	66
Group 45.	Springs, Shocks and Frames.....	67-1	67
Group 46.	Bulk Material List.....	Bulk-1	
Section III.	SPECIAL TOOLS LIST (not applicable)		
Section IV.	CROSS-REFERENCE INDEXES		
	National Stock Number Index.....	I-1	
	Part Number Index	I-6	
	Figure and Item Number Index.....	I-36	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of direct support and general support maintenance of the Lubricating and Servicing Unit. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in functional groups in Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown in the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (Sections II AND Section III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

