

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL
SUPPORT REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**CHASSIS, SEMITRAILER: 6-TON, 4-WHEEL
M295A1 (2330-00-649-8124)**

**SEMITRAILER, VAN: EXPANSIBLE, 6-TON, 4-WHEEL
M313 (2330-00-772-5273) S74490**

**SEMITRAILER, VAN: SHOP, FOLDING SIDES, 6-TON,
4-WHEEL M447 (2330-00-542-5709)
M447C (2330-00-472-9999)**

**SEMITRAILER, VAN: REPAIR PARTS SHOP EQUIPMENT,
6-TON, 4-WHEEL
M749 (2330-00-587-2454) S774832**

**SEMITRAILER, VAN: REPAIR PARTS STORAGE,
6-TON, 4-WHEEL
M750 (2330-00-926-7035) S74832**

This manual and TM 9-2330-238-14 supersede TM 9-2330-238-14&P, 15 April 1976.

Approved for public release; distribution is unlimited.

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL
SUPPORT REPAIR PARTS AND
SPECIAL TOOLS LISTS****CHASSIS, SEMITRAILER: 6-TON, 4-WHEEL
M295A1 (2330-00-649-8124)****SEMITRAILER, VAN: EXPANSIBLE, 6-TON, 4-WHEEL
M313 (2330-00-772-5273)****SEMITRAILER, VAN: SHOP, FOLDING SIDES, 6-TON,
4-WHEEL M447 (2330-00-542-5709)
M447C (2330-00-472-9999)****SEMITRAILER, VAN: REPAIR PARTS SHOP EQUIPMENT,
6-TON, 4-WHEEL
M749 (2330-00-587-2454)****SEMITRAILER, VAN: REPAIR PARTS STORAGE,
6-TON, 4-WHEEL
M750 (2330-00-926-7035)**

Current as of 29 March 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	

*This manual and TM 9-2330-238-14 supercede TM 9-2330-238-14&P, 15 April 1976.

TABLE OF CONTENTS (Cont)

	Page	Illus Fig
GROUP 06 ELECTRICAL SYSTEM		
0608 - MISCELLANEOUS ITEMS...	1-1	
SWITCHES, RECEPTACLES, CIRCUIT BREAKERS (M313)	1-1	1
MOUNTING HARDWARE (M313).	2-1	2
SWITCHES, RECEPTACLES, CIRCUIT BREAKER (M447, M447C, AND M750)	3-1	3
MOUNTING HARDWARE (M447, M447C, AND M750)	4-1	4
SWITCHES, RECEPTACLES, CIRCUIT BREAKERS (M749, SOUTHWEST MODEL VRP)	5-1	5
SWITCHES, RECEPTACLES, CIRCUIT BREAKERS (M749, CONCERTO MODEL 8929)	6-1	6
0609 - LIGHTS	7-1	
MOUNTING HARDWARE FOR CHASSIS LIGHTS	7-1	7
STOPLIGHT, VEHICULAR (EARLY MODEL)	8-1	8
STOPLIGHT TAILLIGHT ASSEMBLY (EARLY MODEL)	9-1	9
STOPLIGHT TAILLIGHT (LATE MODEL)	10-1	10
MARKER CLEARANCE LIGHT	11-1	11
DOMELIGHT (M313, M447, M447C, AND M750) ,	12-1	12
DOMELIGHT (M749)	13-1	13
CEILING AND BLACKOUT LIGHT (M749, SOUTHWEST MODEL VRP, SERIAL NUMBERS V549 THROUGH V628)	14-1	14
FLUORESCENT LIGHT FIXTURE	15-1	15
0613 - HULL OR CHASSIS WIRING HARNESS	16-1	
INTERVEHICULAR RECEPTACLE AND ASSOCIATED PARTS	16-1	16
MISCELLANEOUS WIRING HARNESSES	17-1	17
WIRING HARNESS, M295A1 CHASSIS	18-1	18
WIRING HARNESS, MAIN (M313, LATE MODEL)	19-1	19
WIRING HARNESS, MAIN (M313, EARLY MODEL)	20-1	20
WIRING HARNESS, MAIN (M447, M447C, AND M750)	21-1	21
WIRING HARNESS, FLUORESCENT LIGHTS (M447, M447C, AND M750)	22-1	22
WIRING HARNESS, CLEARANCE LIGHTS AND RIGHT AND LEFT HARNESSES (M750)	23-1	23
WIRING HARNESS, BLACKOUT AND EMERGENCY LIGHTS	24-1	24
WIRING HARNESS, AIR CONDITIONER (M313 AND M447C)	25-1	25
WIRING HARNESS, TELEPHONE JACK POST AND HEATERS	26-1	26
GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY.	27-1	
AXLE	27-1	27
AXLE AND BRACKET ASSEMBLY	28-1	28
GROUP 12 BRAKES		
1202 - SERVICE BRAKES	29-1	
SERVICE BRAKES	29-1	29
BRAKE BACKING PLATE	30-1	30
BRAKESHOE AND RELATED PARTS	31-1	31
1204 - HYDRAULIC BRAKE SYSTEM	32-1	
WHEEL CYLINDER AND HYDRAULIC TUBES	32-1	32
HYDRAULIC MASTER CYLINDER AND RELATED PARTS	33-1	33

TABLE OF CONTENTS (Cont)

	Page	Illus Fig
1601- BODY, CAB, HOOD, AND HULL ASSEMBLIES (Cont)		
PANEL STOWAGE CHEST (M447C)	65-1	65
HINGED ROOF (M313)	66-1	66
HINGED FLOOR (M313)	67-1	67
SOLID SIDE ASSEMBLY (M313)	68-1	66
MISCELLANEOUS BODY PARTS (M313)	69-1	69
MISCELLANEOUS BODY PARTS (M447, M447C, AND M750)	70-1	70
SPLASHGUARD (M313)	71-1	71
SPLASHGUARD (M447, M447C, M749, AND M750)	72-1	72
SPLASHGUARD (M313, M447, M447C, AND M750)	73-1	73
1606 - STOWAGE FLACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.	74-1	
CABLE REEL (M313, M447, M447C, AND M750)	74-1	74
1812 - SPECIAL PURPOSE BODIES	75-1	
VAN BODY MOUNTING INSTALLATION	75-1	75
COUNTERBALANCE (M313)	76-1	76
COUNTERBALANCE (M447, M447C, AND M750)	77-1	77
COUNTERBALANCE (M749, SOUTHWEST MODEL VRP)	78-1	78
COUNTERBALANCE (M749, CONVERTO MODEL 6929)	79-1	79
UNDERFRAME MECHANISM (M313)	80-1	60
STORAGE BINS (M750)	81-1	81
GROUP 22 BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
2202 - ACCESSORY ITEMS	62-1	
ACCESSORY ITEMS	62-1	82
2210 - DATA PLATES AND INSTRUCTION HOLDERS	83-1	
IDENTIFICATION PLATES	83-1	63
IDENTIFICATION PLATES	84-1	64
IDENTIFICATION PLATES	85-1	85
IDENTIFICATION PLATES	86-1	86
GROUP 33 M447C CURTAIN ENCLOSURE KIT		
3307 - ENCLOSURE KIT	86A-1	86A
GROUP 52 REFRIGERATION, AIR CONDITIONER, HEATER, AND AIR CONDITIONING COMPONENTS		
5200 - AIR CONDITIONER/HEATER ASSEMBLY AND GAS COMPRESSOR ASSEMBLY	87-1	
AIR CONDITIONER INSTALLATION (M313)	87-1	87
AIR CONDITIONER INSTALLATION (M447C)	66-1	66
GROUP 60 STEAM BOILERS, WATER HEATERS, HEATING UNITS, BURNERS		
6004 - FUEL SYSTEM	89-1	
FUEL LINE INSTALLATION (M313, M447, M447C, AND M750)	89-1	89
FUEL LINE INSTALLATION (M749, SOUTHWEST MODEL VRP, SERIAL NUMBERS V001 THROUGH V356)	90-1	90
FUEL LINE INSTALLATION (M749, SOUTHWEST MODEL VRP, SERIAL NUMBERS V549 THROUGH V628)	91-1	91
FUEL LINE INSTALLATION (M749, CONVERTO MODEL 8929)	92-1	92
6007 - FUEL TANK	93-1	
FUEL TANK (M313, M447, M447C, AND M750, EARLY MODEL)	93-1	93
FUEL TANK (M313, M447, M447C, AND M750, LATE MODEL)	94-1	94
FUEL TANK (M749, SOUTHWEST MODEL VRP, SERIAL NUMBERS V001 THROUGH V356)	95-1	95
FUEL TANK (749, SOUTHWEST MODEL VRP, SERIAL NUMBERS V549 THROUGH V628)	96-1	96
FUEL TANK (M749, CONVERTO MODEL 8929)	97-1	97

TABLE OF CONTENTS (Cont)

	Page	Illus Fig
6010- EXHAUST SYSTEM	98-1	
HEATER EXHAUST (M313)	98-1	98
HEATER EXHAUST (M447, M447C, AND M750)	99-1	99
HEATER EXHAUST (M749, SOUTHWEST MODEL VRP)	100-1	100
HEATER EXHAUST (M749, CONVER TO MODEL 8929)	101-1	101
6014- UNIT HEATER	102-1	
HEATER INSTALLATION (M313)	102-1	102
HEATER INSTALLATION (M447, M447C, AND M750)	103-1	103
HEATER INSTALLATION (M749, SOUTHWEST MODEL VRP)	104-1	104
HEATER INSTALLATION (M749, CONVER TO MODEL 8929)	105-1	105
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501 - BULK MATERIEL	BULK-1	
BULK MATERIEL	BULK-1	BULK
SECTION III. SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV. CROSS-REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-31	
FIGURE AND ITEM NUMBER INDEX	I-68	

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Organizational, Direct Support and General Support Maintenance of the M295A1 Chassis and the M313, M447, M447C, M749, and M750 Semitrailers. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section 1. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration (s)/figure(s).

b. *Section III. Special Tool/s List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item

number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III),

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

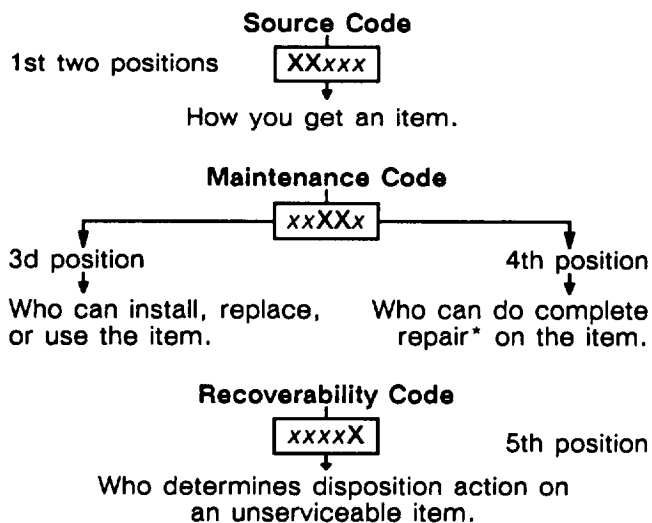

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: