

This manual contains copyright material. Reproduced with permission of Miller Tilt-Top Trailer Inc.

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE REPAIR PARTS
FOR
TRAILER, FLAT BED, TILT LOADING, 5 TON, 4 WHEEL
XM789**

**Headquarters, Department of the Army, Washington, D. C.
29 December 1969**

SECTION	Page
I. INTRODUCTION	
II. PRESCRIBED LOAD ALLOWANCES	
III. ORGANIZATIONAL REPAIR PARTS LIST	
GROUP 06 - ELECTRICAL SYSTEM	
0609 - Light	9
0613 - Chassis wiring.....	9
Group 12 - Brakes	
1201 - Parking brake lever and cable assembly	10
1202 - Brake assembly	10
Group 13 - Wheel and Tires	
1311 - Wheel assembly.....	10
1313 - Tires and tubes	12
Group 16 - Springs and Shock Absorbers	
1601 - Springs	12
Group 18 - Frame	
1812 - Trailer attaching parts	13
GROUP 22 - BODY, CHASSIS AND ACCESSORY ITEMS	
2202 - Accessory items.....	13
Group 24 - Hydraulic Lift Components	
2404 - Hydraulic tilt cylinder	13
IV. DIRECT AND GENERAL SUPPORT REPAIR PARTS LIST	
Group 06 - Electrical System	
0609 - Lights	14
0613 - Chassis wiring	14

	Page
Group 11 - Axles	
1100 - Front and rear axles	15
Group 12 - Brakes	
1201 - Parking brake lever and cable assembly	15
1202 - Brake assembly	15
Group 13 - Wheels and Tires	
1311 - Wheel assembly	16
1313 - Tires and tubes	17
Group 16 - Spring and Shock Absorbers	
1601 - Springs.	17
Group 18 - Frame	
1812 - Trailer attaching parts	18
Group 22 - Body, Chassis and Accessory Items	
2202 - Accessory items	18
Group 24 - Hydraulic Lift Components	
2404 - Hydraulic tilt cylinder	18

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT REPAIR PARTS LIST

1. **Scope.** This manual lists repair parts required for the performance of organizational, direct support, and general support maintenance of the Trailer, Flat Bed, Tilt Loading, 5 Ton, 4 Wheel, XM789.

2. **General.** This Repair Parts List is divided into the following sections:

a. Prescribed Load Allowance (PLA) - Section II. A composite listing of repair parts having quantitative allowances for initial stockage at the organizational level.

b. Organizational Repair Parts List - Section III. A list of repair parts authorized for the performance of maintenance at the organizational support level in figure and item number sequence.

c. Direct and General Support Repair Parts List - Section IV. A list of repair parts authorized for performance of maintenance at the direct and general support level in figure and item number sequence.

d. Federal Stock Number and Reference Number Index - Section V. A list of Federal Stock Numbers in ascending numerical sequence, followed by a list of reference numbers appearing in all the listings, in ascending alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

3. **Explanation of Columns.** The following provides an explanation of columns in the tabular lists in Section II through IV:

a. Source, Maintenance, and Recoverability Codes (SMR), Column 1, Section III and IV.

(1) Source code, indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Applied to repair parts which are stocked in or supplied from the GSA/DSA, or Army supply system, and authorized for use at indicated maintenance categories.
X1	Applied to repair parts which are not procured or stocked, the requirement for which will be supplied by use of next higher assembly or component.