

TECHNICAL MANUAL
OPERATOR AND ORGANIZATIONAL MAINTENANCE MANUAL
LAUNDRY UNIT, SINGLE TRAILER
MOUNTED
W/CANVAS COVER; ARMY MODEL
M-532
(EIDAL MODEL ELT9T)
NSN 3510-00-782-5294
AND (EDRO MODEL EP120-LTU)
NSN 3510-00-169-4735

HEADQUARTERS, DEPARTMENT OF THE ARMY

SEPTEMBER 1977

TECHNICAL MANUAL }
NO. 10-3510-208-12 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 16 September 1977

OPERATOR AND ORGANIZATIONAL MAINTENANCE MANUAL
LAUNDRY UNIT, SINGLE TRAILER MOUNTED W/CANVAS
COVER:

ARMY MODEL M-532 (EIDAL MODEL ELT9T)

NSN 3510-00-782-5294

AND (EDRO MODEL EP120-LTU)

NSN 3510-00-169-4735

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support [Aviation Materiel Readiness Command, ATTN: DRSTS-MPSD, 4800 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished to you.

Paragraph Page

LIST OF ILLUSTRATIONS

LIST OF TABLES

CHAPTER	1. INTRODUCTION		
Section	I. General	1-1	1-1
	II. Description and Data	1-6	1-1
CHAPTER	2. OPERATING INSTRUCTIONS		
Section	I. Operating Procedures	2-1	2-1
	II. Operation of Auxiliary Equipment	2-4	2-26
	III. Operation Under Unusual Conditions	2-6	2-26
CHAPTER	3. OPERATOR MAINTENANCE INSTRUCTIONS		
Section	I. Lubrication Instructions	3-1	3-1
	II. Preventive Maintenance Checks and Services	3-3	3-4
	III. Troubleshooting	3-5	3-8
	IV. Maintenance Procedures	3-7	3-12
CHAPTER	4. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS		
Section	I. Service Upon Receipt of Materiel	4-1	4-1
	II. Movement To A new Worksite	4-3	4-3
	III. Repair Parts, Special Tools and Equipment	4-5	4-4
	IV. Preventive Maintenance Checks and Services	4-8	4-4
	V. Troubleshooting	4-10	4-9
	VI. Radio Interference Suppression	4-12	4-29

*This manual supercedes TM 10-3510-208-12, 9 August 1966, including all changes.

		Paragraph	Page
Section	VII.	Maintenance of Engine -Generator.	4-15 4-30
	VIII.	Trailer	4-18 4-32
	IX.	Hose Guard, Drain Bin, Strage Cylinder Box, Tool Box, Main Guard, Jackshaft Guard, Hoses and Cables	4-19 4-33
	X.	Generator Exhaust Duct and Ground Rod	4-29 4-42
	XI.	Washer-Extractor Tiedown Bar and Supports.	4-31 4-43
	XII.	Tumbler Burner Fuel Filter, Fuel Pump and Blower Assembly	4-33 4-49
	XIII.	Water Pump, Frame and Switch	4-36 4-57
	XIV.	Transformer, Handy Box and Solenoid	4-39 4-61
	XV.	Tumbler Burner, Exhaust Motor and Related Parts, Drive Motor Conduit Box, Drive Motor and Related Parts	4-41 4-62
	XVI.	Temperature Exhaust Thermometer, Tumbler Air Temperature Control, Exhaust Fan, Bracket and Jackshaft	4-45 4-71
	XVII.	Generator To Water Pump Switch Box, Outlet Duplex Box, Compressor Assembly and Compressor Starter Switch	4-47 4-74
	XVIII.	Air Cylinder and Related Parts	4-50 4-86
	XIX.	Tumbler Control Panel and Related Parts	4-52 4-91
	XX.	Water Heater Assembly, Water Heater Panel Board, Burner Assembly, Fuel Lines and Pressure Gage Valve, Lines and Fittings, Fuel Filter and Related Parts.	4-54 4-97
	XXI.	Water Heater Transformer, Fuel Pump, Water Temperature Gage, Water Control Valve Lines and Fittings, Water Level Plates and Tubes and Water Level Control	4-60 4-112
	XXII.	Washer-Extractor Controls and Instruments and Control Box Components	4-67 4-126
	XXIII.	Air Lines, Washer-Extractor Main Drive Brake Assembly, Main Drive Belt Idler Pulley, Air Cylinder and Main Drive Sheave, Door Assembly and Valve Drain Assembly	4-70 4-132
	XXIV.	Wsher-Extractor Motors, Drive, Hydro-Sheave, and Related Parts	4-76 4-140
	XXV.	Electrical Conduit, Heat Exchanger Exhaust Duct and Retainer, Generator Switch and Outlet Box and Step Assembly	4-81 4-154
APPENDIX	A.	REFERENCES	A-1
	B.	COMPONENT OF END ITEMS LIST	B-1
	C.	EXPENDABLE SUPPLIES AND MATERIALS LIST	C-1
	D.	MAINTENANCE ALLOCATION CHART	D-1
INDEX			I-1

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1	Laundry Unit, Left Front, Three-Quarter View, With Shipping Dimensions (Eidal Model ELT9T)	1-2
1-2	Laundry Unit, Right Rear, Three-Quarter View (Eidal Model ELT9T)	1-3
1-3	Laundry Unit, Left Front, Three-Quarter View With Shipping Dimensions (Edro Model EP120-LTU)	1-4
1-4	Laundry Unit, Right Rear, Three-Quarter View (Edro Model EP120-LTU)	1-5
1-5	Dryer-Tumbler Wiring Diagram	1-8
1-6	Water Heater Wiring Diagram	1-9
1-7	Air Compressor Wiring Diagram	1-10
1-8	Electrical Generator/External Power Schematic.	1-11
2-1	Controls and Instruments (Engine-Generator)	2-2
2-2	Water Heater, Controls and Instruments (Sheet 1 of 2)	2-3
2-2	Water Heater, Controls and Instruments (Sheet 2 of 2)	2-4
2-3	Water Pump Controls	2-5
2-4	Air Compressor, Controls and Instruments	2-6
2-5	Washer-Extractor, Controls and Instruments (Sheet 1 of 2)	2-7
2-5	Washer-Extractor, Controls and Instruments (Sheet 2 of 2)	2-8
2-6	Tumbler, Controls and Instruments (Sheet 1 of 2)	2-9
2-6	Tumbler, Controls and Instruments (Sheet 2 of 2)	2-9
2-7	Load Connections	2-11
2-8	Voltage Selection	2-12
2-9	Generator Electircal Starting Controls	2-13
2-10	Generator Manual Starting Controls	2-15
2-11	Air Compressor Starting	2-17
2-12	Formula Control Record, Removal and Installation	2-19
2-13	Engine-Generator Operating Controls.	2-20
2-14	Normal and Emergency Stopping Controls	2-25
3-1	Deleted	
3-1	Deleted	
3-2	Preventive Maintenance Checks and Services (Sheet 1 of 4)	3-5
3-2	Preventive Maintenance Checks and Services (Sheet 2 of 4)	3-6
3-2	Preventive Maintenance Checks and Services (Sheet 3 of 4)	3-7
3-2	Preventive Maintenance Checks and Services (Sheet 4 of 4)	3-8
3-3	Water Heater Fuel Pump and Fuel Filter Service	3-10
3-4	Fuel Pump Adjustment	3-11
3-5	Suction Line Sediment Strainer and Water Pump Priming Instructions	3-13
3-6	Float Holddown Rod, Releasing and Securing Instructions	3-13
3-7	Extractor-Washer Drive Belt Adjustment (Eidal Model ELT9T)	3-14
3-8	Extractor-Washer Drive Belt Adjustment (Edro Model EP120-LTU)	3-15
3-9	Magnetic Valve Adjustment (Eidal Model ELT9T only)	3-16
3-10	Fuses, Removal and Installation	3-17
3-11	Air Compressor Air Service	3-18
3-12	Hydro-Sheave, Service, (Edro MModel EP-120-LTU only)	3-18
4-1	Installation of Lines, Hoses and Ducts.	4-2
4-2	Positioning Strainer In Water Source	4-3
4-3	Organizational Preventive Maintenance Services (Sheet 1 of 4)	4-6
4-3	Organizational Preventive Maintenance Services (Sheet 2 of 4)	4-7
4-3	Organizational Preventive Maintenance Services (Sheet 3 of 4)	4-8
4-3	Organizational Preventive Maintenance Services (Sheet 4 of 4))	4-9
4-4	Water Heater Fuel Pump and Fuel Filter Service	4-11
4-5	Fuel Filter and Bracket, Removal and Installation	4-12
4-6	Fuel Pump, Removal and Installation	4-13
4-7	Fuel Pressure Gage and Water Temperature Gage, Removal and Installation	4-15
4-8	Fuel Pump Adjustment	4-16
4-9	Dryer Tumbler Burner Nozzle, Removal and Installation	4-17
4-10	Tumbler Burner Electrode Setting and Nozzle Details	4-18
4-11	Water Pump and Motor Assembly, Removal and Installation.	4-20
4-12	Water Pump and Motor Assembly, Disassembly and Reassembly	4-21
4-13	Washer Motor, Drive Belts and Sheave, Removal and Installation (Eidal Model ELT9T)	4-22
4-14	Washer Motor, Drive Belts and Sheave, Removal and Installation (Edro Model EP120-LTU)	4-23
4-15	Washer Motor Base Guide Rods, Air Pistons, Microswitch and Spring, Removal and Installation (Eidal Model ELT9T)	4-24
4-16	Washer Motor Base Guide Rods, Air Pistons, Microswitch and Spring, Removal and Installation (Edro Model EP120-LTU).	4-25
4-17	Washer-Extractor Door and Limit Switch, Removal and Installation.	4-26
4-18	Tumbler Control Box Components and Controls, Removal and Installation	4-27

Figure	Title	Page
4-19	Cylinder Motor, Brackets, Tumbler Temperature Control and Temperature Exhaust Thermometer Removal and Installation	4-28
4-20	Gear Reducer, Removal and Installation.....	4-29
4-21	Radio Interference Suppression Components, Location, Removal and Installation	4-30
4-22	Engine-Generator, Removal and Installation	4-31
4-23	External Power Switch and Box, Removal and Installation	4-32
4-24	Hose Guard, Removal and Installation	4-33
4-25	Drain Bin, Removal and Installation	3-34
4-26	Storage Cylinder Box, Removal and Installation	4-35
4-27	Tool Box, Removal and Installation	4-36
4-28	Main Drive Guard, Removal and Installation	4-37
4-29	Washer-Extractor Hydro-Sheave Guard, Removal and Installation (Edro Model EP120-LTU)	4-38
4-30	Jackshaft Guard, Removal and Installation (Eidal Model ELT9T)	4-39
4-31	Jackshaft Guard, Removal and Installation (Edro Model EP120-LTU)	4-40
4-32	Strainer, Suction, Hose, Drain Hose and Cable	4-41
4-33	Generator Exhaust Duct, Removal, Disassembly, Reassembly and Installation	4-42
4-34	Generator Ground Rod, Removal and Installation	4-43
4-35	Washer-Extractor Tiedown Bar, Removal and Installation (Eidal Model ELT9T)	4-44
4-36	Washer-Extractor Tiedown Bar, Removal and Installation (Edro Model EP120-LTU only)	4-45
4-37	Rear Washer-Extractor Supports, Removal and Installation (Eidal Model ELT9T)	4-46
4-38	Rear Washer-Extractor Support (Edro Model EP120-LTU)	4-47
4-39	Front Washer-Extractor Support, Removal and Installation	4-48
4-40	Tumbler Burner Fuel Filter, Removal and Installation	4-50
4-41	Tumbler Burner Fuel Filter, Disassembly and Reassembly	4-51
4-42	Tumbler Burner Fuel Pump and Line, Removal and Installation	4-52
4-43	Tumbler Burner Fuel Pump, Disassembly and Reassembly	4-54
4-44	Tumbler Burner Blower Assembly, Removal and Installation	4-56
4-45	Water Pump and Motor Assembly, Removal and Installation.....	4-57
4-46	Water Pump and Motor, Disassembly and Reassembly	4-58
4-47	Water Pump Frame and Switch Box, Disassembly and Reassembly	4-60
4-48	Ignition Transformer and Handy Box, Removal and Installation	4-61
4-49	Tumbler Solenoid and Bracket, Removal and Installation	4-62
4-50	Tumbler Burner Assembly, Removal and Installation.....	4-63
4-51	Tumbler Burner Assembly, Disassembly and Reassembly (Sheet 1 of 3)	4-64
4-51	Tumbler Burner Assembly, Disassembly and Reassembly (Sheet 2 of 3)	4-65
4-51	Tumbler Burner Assembly, Disassembly and Reassembly (Sheet 3 of 3)	4-66
4-52	Exhaust Motor Mounting Plate and Pulley, Removal and Installation	4-68
4-53	Tumbler Drive Motor Conduit Box and Related Parts, Removal and Installation	4-69
4-54	Tumbler Drive Motor and Related Parts, Removal and Installation.....	4-70
4-55	Tumbler Temperature Control and Temperature Exhaust Thermometer, Removal and Installation	4-71
4-56	Tumbler Exhaust Fan Assembly, Removal and Installation	4-73
4-57	Water Pump Switch Box and Outlet Duplex Box, Removal and Installation (Sheet 1 of 3)	4-75
4-57	Water Pump Switch Box and Outlet Duplex Box, Removal and Installation (Sheet 2 of 3)	4-76
4-57	Water Pump Switch Box and Outlet Duplex Box, Removal and Installation (Sheet 3 of 3)	4-77
4-58	Water Pump Switch Box, Disassembly and Reassembly	4-78
4-59	Outlet Duplex Box, Disassembly and Reassembly	4-80
4-60	Air Compressor, Removal and Installation	4-82
4-61	Air Pressure Control Switch Adjustment	4-83
4-62	Compressor Starter Switch, Removal and Installation	4-84
4-63	Compressor Starter Switch Unit, Disassembly and Reassembly	4-85
4-64	Air Cylinder, Removal and Installation.....	4-87
4-65	Air Cylinder, Disassembly and Reassembly.....	4-88
4-66	Air Pressure Switch, Removal and Installation	4-90
4-67	Air Pressure Control Switch, Disassembly and Reassembly	4-91
4-68	Tumbler Controls, Removal and Installation (Sheet 1 of 3).....	4-92
4-68	Tumbler Controls, Removal and Installation (Sheet 2 of 3).....	4-93
4-68	Tumbler Controls, Removal and Installation (Sheet 3 of 3)	4-94
4-69	Tumbler Controls, Disassembly and Reassembly (Sheet 1 of 2).....	4-95
4-69	Tumbler Controls, Disassembly and Reassembly (Sheet 2 of 2).....	4-96
4-70	Horn, Removal and Installation	4-97
4-71	Water Heater Assembly, Removal and Installation	4-98
4-72	Water Heater Panel Board, Removal, Disassembly, Reassembly and Installation	4-99
4-73	Burner Assembly, Removal and Installation	4-101
4-74	Water Heater Burner Assembly, Disassembly and Reassembly	4-102
4-75	Water Heater Ignition Electrode Adjustment	4-103
4-76	Water Heater Fuel Lines and Pressure Gage, Removal, Disassembly, Reassembly, and Installation	4-105
4-77	Water Heater Valves, Lines and Fittings, Disassembly and Reassembly	4-107

Figure	Title	Page
4-78	Fuel Filter and Bracket, Removal and Installation	4-109
4-79	Fuel Filter, Disassembly (Sheet 1 of 2)	4-110
4-79	Fuel Filter, Disassembly (Sheet 2 of 2)	4-111
4-80	Water Heater Transformer, Disassembly and Reassembly	4-113
4-81	Fuel Pump, Removal and Installation	4-115
4-82	Water Heater Blower and Motor, Removal, Disassembly, Reassembly and Installation	4-116
4-88	Water Temperature Gage, Removal and Installation	4-118
4-84	Water Control Valve Lines and Fittings, Removal and Installation	4-119
4-85	Water Level Plates and Tubes, Removal, Disassembly, Reassembly and Installation	4-120
4-86	Water Level Control, Removal and Installation	4-121
4-87	Water Level Control, Disassembly and Reassembly	4-123
4-88	Water Level Indicator and Control Assembly Adjustment	4-125
4-89	Inside Washer-Extractor Upper Control Box Components and Controls, Removal and Installation	4-129
4-90	Inside Washer-Extractor Lower Control Box Components, Removal and Installation (Eidal Model ELT9T)	4-130
4-91	Inside Washer-Extractor Lower Control Box Components and Controls, Removal and Installation (Edro Model EP120-LTU)	4-131
4-92	Warning Bell, Removal and Installation	4-132
4-93	Air Lines, Removal and Installation	4-133
4-94	Main Drive Brake Assembly, Removal and Installation	4-134
4-95	Washer-Extractor Air Cylinder and Main Drive Sheave, Removal and Installation	4-135
4-96	Main Drive Belt Idler Pulley, Removal and Installation (Edro Model EP120-LTU only)	4-136
4-97	Washer Door, Removal, Disassembly, Reassembly and Installation	4-137
4-98	Drain Valve, Drain Valve Cylinder and Controls, Removal and Installation	4-139
4-99	Washer Motor, Drive Belts and Sheave, Removal and Installation (Eidal Model ELT9T)	4-141
4-100	Washer Motor, Drive Belts and Sheave, Removal and Installation (Edro Model EP120-LTU)	4-142
4-101	Drive Belt Adjustment (Eidal Model ELT9T only)	4-143
4-102	Drive Belt Adjustment (Edro Model EP120-LTU only)	4-144
4-103	Extractor Motor Drive Belts and Sheave, Removal and Installation (Eidal Model ELT9T)	4-145
4-104	Extractor Motor Drive Belts and Sheave, Removal and Installation (Edro Model EP120-LTU)	4-146
4-105	Extractor Washer Drive Belt Adjustment (Eidal Model ELT9T only)	4-147
4-106	Hydro-Sheave Drive, Removal and Installation (Edro Model EP120-LTU only)	4-149
4-1-7	Washer Motor Jackshaft Sheave and Belt Guard, Removal (Eidal Model ELT9T)	4-150
4-108	Jackshaft, Sheave and Belt Guard, Removal and Installation (Edro Model EP120-LTU)	4-151
4-109	Washer and Extractor Motor Base Guide Rods, Air Pistons, Microswitch and Spring, Removal and Installation (Eidal Model ELT9T)	4-152
4-110	Washer and Extractor Motor Base Guide Rods, Air Pistons, Microswitch and Spring, Removal and Installation (Edro Model EP120-LTU)	4-153
4-111	Electrical Conduit, Removal, Disassembly, Reassembly and Installation	4-155
4-112	Heat Exchanger Exhaust Duct and Retainer	4-157
4-113	Generator Switch Box and Outlet Assemblies, Removal and Installation	4-159
4-114	Generator Switch Box and Outlet Box Assemblies, Disassembly and Reassembly	4-161
4-115	Step Assembly, Removal and Installation	4-162
FO-1	Wiring Diagram	
FO-2	Wiring Diagram	
FO-3	Electrical Distribution System Schematic	

LIST OF TABLES

Number	Title	Page
1-1.	Bolt, Capscrew and Nut Torque Wrench Specifications	1-12
2-1.	Record Control Finger Functions	2-8
2-2.	List of Weights	2-21
2-3.	Cotton Wash Formula for Manual Operation	2-22
2-4.	Wool Wash Formula for Manual Operation	2-23
2-5.	Timing Cycles and Drying Temperatures	2-24
2-6.	Field Laundry Washing and Decontamination Formulas.	2-24.1
3-1.	Operator/Crew Preventive Maintenance Checks and Services	3-4
3-2.	Troubleshooting	3-9
4-1.	Organizational Preventive Maintenance Checks and Services	4-5
4-2.	Troubleshooting	4-9

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1-1. Scope

This manual is for your use in operating and maintaining the Army Model M-532; Eidal Model ELT9T and Edro Model EP120-LTU, single trailer mounted laundry units.

1-2. Maintenance Forms and Records

- a. DA Form 2404 (Equipment Inspection and Maintenance Worksheet).
- b. DA Form 2407 (Maintenance Request Used for Requesting Support Maintenance).
- c. DA Form 2407-1 (Continuation Sheet Used for Requesting Support Maintenance).
- d. Maintenance forms and records are prescribed by DA Pam 738-750.

1-3. Equipment Serviceability Criteria (ESC)

The laundry unit end item is not covered by an ESC. The engine-generator is covered by TM 5-6100-207 ESC.

1-4. Destruction of Army Materiel to Prevent Enemy Use

Procedures for the destruction of Army materiel to prevent enemy use are explained in TM 750-244-3.

1-5. Administrative Storage


Administrative storage procedures are described in TM 740-90-1.

Section II. DESCRIPTION AND DATA

1-6. Description

Laundry Unit. The Eidal Laundry Unit, Model ELT9T (figs 1-1 and 1-2) and Edro Model EP120-LTU (figs. 1-3 and 1-4), is a complete laundry unit capable of operation for 20 hours per day continuous operation. It

is powered by a 10 KW engine-generator set. The Water Heater and Dryer Tumbler Burners can be operated using either gasoline or fuel oil. When Mogas is utilized as the fuel source, add one quart (0.95 liters) of OE-30 engine oil to each 5 gallons (19 liters) of Mogas.

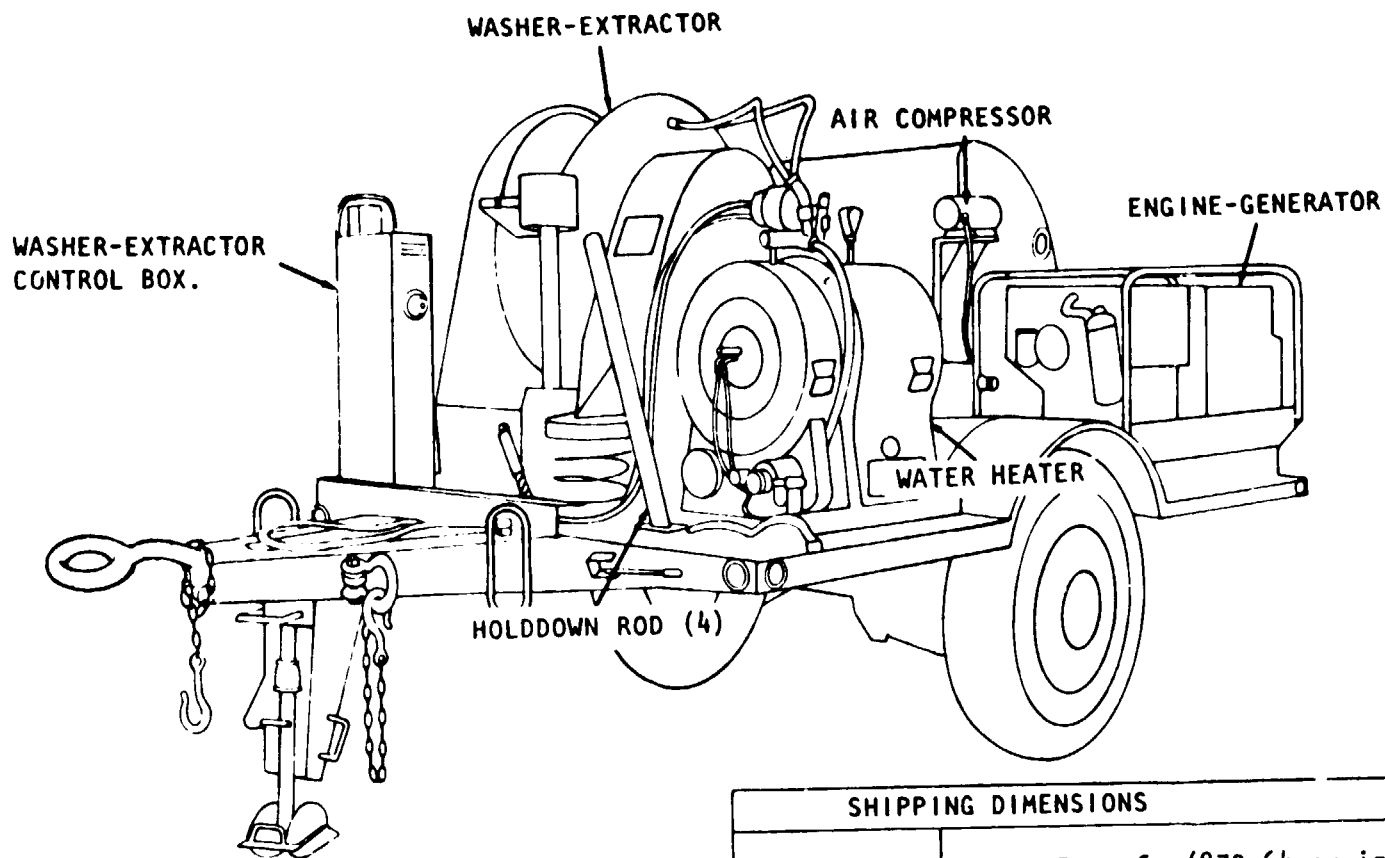

SHIPPING DIMENSIONS	
CUBAGE	505 cu.ft. (872.64 cu.in.)
LENGTH	16 2/3 ft. (500.32 cm.)
WIDTH	8 ft. (240 cm.)
HEIGHT	8 ft. (240 cm.)
WEIGHT	9,300 lbs. (4185 kg.)

TS 3510-208-12/1-1

Figure 1-1 Laundry unit, left front, three-quarter view, with shipping dimensions (Eidal Model ELT9T)