

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE
REPAIR PARTS
AND
SPECIAL TOOLS LISTS**

**LAUNDRY UNIT, SINGLE TRAILER MOUNTED,
W/ CANVAS COVER;**

**ARMY TYPE M532 (EIDAL MODEL ELT9T)
NSN 3510-00-782-5294
AND
(EDRO MODEL EP120-LTU)
NSN 3510-00-169-4735**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
May 1978**

TECHNICAL MANUAL

NO. 10-3510-208-20P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., May 1978

ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST

LAUNDRY UNIT, SINGLE TRAILER MOUNTED, W/CANVAS
COVER; ARMY TYPE M532 (EIDAL MODEL E.LT9T)
NSN 3510-00-782-5294
AND
(EDRO MODEL EP120-LTU
NSN 3510-00-169-4735

Current as of 4 January 1982

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS.

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letters, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, U.S. Army Troop Support and Aviation Materiel Readiness Command, ATTN: DRSTS-MPSD, 4300 Goodfelloww Boulevard, St. Louis, MO 63120. A reply will be furnished to you.

TABLE OF CONTENTS

	Page	Illus Figure
SECTION I. INTRODUCTION	1-1	
II. REPAIR PARTS LIST	2-1	
Group 01. Hose Guard, Drain Bin and Storage Cylinder Box Drain Bin, Storage Cylinder Box and Hose Guard	2-1	1
02. Toolbox, Main Guard and Jackshaft Guard Toolbox, Main Drive Guard and Jackshaft Guard, EIDAL Model ELT9T	2-3	2
Toolbox, Main Drive, Main Drive Assembly Guard and Jackshaft Guards, EDRO Model EP120-LTU	2-5	3

This manual supersedes TM 10-3510-208-20P, 29 September 1970, including all changes.

	Listing Page	Illus Figure
Group 03. Hoses and Cable		
Strainer, Suction Hose, Drain Hose and Cable	2-7	4
04. Generator Mounting Frame, Exhaust Duct and Ground Rod		
Generator Mounting Frame, Exhaust Duct and Ground Rod.....	2-9	5
05. Washer-Extractor Tiedown Bar and Supports		
Washer-Extractor Tiedown Bars and Supports		
EIDAL Model ELT9T	2-11	6
Washer-Extractor Tiedown Bars and Supports		
EDRO Model EP120-LTU	2-13	7
06. Fuel Filter, Tumbler Burner		
Fuel Filter, Tumbler Burner	2-15	8
07. Tumbler Burner Fuel Pump and Blower Assembly		
Tumbler Burner Fuel Pump and Filter Fittings	2-16	9
Blower, Tumbler Burner	2-18	11
08. Water Pump, Frame, and Switchbox		
Water Pump Switchbox.....	2-20	13
Water Pump	2-22	14
Water Pump Frame	2-24	15
09. Transformer, Handy Box and Solenoid		
Transformer, Handy Box and Solenoid.....	2-25	16
10. Tumbler Burner		
Tumbler Burner	2-27	17
11. Tumbler Exhaust Motor and Related Parts.		
Exhaust Motor Mounting Bracket and Belt Guard	2-29	18
12. Tumbler Drive Motor Conduit Box		
Tumbler Drive Motor Conduit Box and Related Parts	2-31	20
13. Tumbler Drive Motor and Related Parts		
Tumbler Drive Motor and Mounting Bracket	2-33	21
Tumbler Drive Motor	2-35	22
14. Speed Reducer		
Speed Reducer	2-37	23
15. Exhaust Duct and Adapter		
Exhaust Duct and Adapter	2-39	24
Tumbler Heater Exhaust Duct and Retainer	2-41	25
16. Exhaust Fan, Bracket and Jackshaft		
Exhaust Fan, Bracket and Jackshaft	2-43	26
17. Switchbox, Generator to Water Pump		
Switchbox, Generator to Water Pump	2-45	27
18. Outlet Duplex Box		
Outlet Duplex Box	2-47	28
19. Air Compressor and Mounting Bracket		
Air Compressor and Mounting Bracket	2-49	29
Air Compressor	2-51	30
Group 20. Air Compressor Starter Switch		
Air Compressor 8 Starter Switch	2-53	31
21. Air Cylinder and Related Parts		
Air Cylinder and Related Parts	2-55	32

	Listing Page	Illus Figure
Group 22. Heat Exchanger Hood Heat Exchanger Hood	2-57	33
24. Air Heater Mounting Plate and Fuel line Support- Air Heater Mounting Plate and Fuel Line Support	2-59	35
25. Tumbler Cylinder, Base, Control Panel and Related Parts Trunnion.....	2-60	36
Tumbler Cylinder Tumbler Barrel , Door Assembly and Related Parts	2-61	37
Tumbler Base, Control Panel and Related Parts	2-62	38
Tumbler, Control Panel	2-65	39
26. Water Heater Panel Board Water Heater Panel Board	2-67	40
27. Water Heater Burner and Related Parts Water Heater Burner.....	2-69	41
Water Heater Fuel Lines and Pressure Gage	2-71	42
Water Heater Valves, Lines and Fittings	2-73	43
28. Water Heater Fuel Pump, Filter: and Related Parts Water Heater Fuel Filter and Related Parts	2-76	44
Fuel Filter, Water Heater	2-78	45
29. Water Heater Transformer Water Heater Transformer	2-79	46
30. Fuel Pump, Water Heater Burner Fuel Pump, Water Heater Burner	2-81	47
31. Water Heater Blower and Motor Water Heater Blower and Motor	2-82	48
32. Water Heater Blower Motor Water Heater Burner Blower Motor	2-84	49
33. Water Heater Tank and Related Parts Water Heater Tank and Related Parts	2-85	50
34. Water Level Plates and Tubes Water -Level Plates and Tubes	2-87	51
35. Water Level Control Water Level Control	2-89	52
36. Control Box Assembly Control Box Cover (Front View)	2-91	53
.Main Control Box Timer, Alarm Bell and Light.....	2-93	54
Control Panel Junction Box.....	2-95	55
Control Panel Junction Connections	2-96	56
38. Panel, Main Control Box and And Manifold Assembly Main Control Box ,,	2-97	59
Air Manifold Assembly.....	2-99	60
39. Air Lines Air Lines.....	2-100	61
40. Main Drive Brake Assembly, Brake Air Cylinder, and Main Bearing Assembly		

	Listing Page	Illus Figure
Group 40. Air Brake Cylinder, Hub, Sheave and Related Parts	2-101	62
Main Bearing	2-103	65
41. Front Head Sheet Assembly and Washer Cylinder		
Washer Door	2-104	66
42. Valve, Drain Assembly		
Drain Valve Controls	2-106	68
Drain Valve Air Cylinder	2-108	69
Drain Valve Body and Lever Guide	2-109	70
43. Washer Extractor Frame and Related Parts		
Washer Extractor Frame and Related Parts	2-111	71
Washer Base	2-113	72
44. Washer Motors, Extractor Motors, Washer Drive and Related Parts		
Washer Motor	2-114	73
EIDAL Extractor Motor and Motor Mountings	2-116	74
EDRO Extractor Motor and Motor Mountings	2-118	75
Jackshaft, Washer Drive (EIDAL Model ELT9T)	2-121	77
Jackshaft #2, Washer Drive (EDRO Model TP120-LTU)	2-122	78
Jackshaft #1, Extractor Motor (EDRO Model EP120-LTU) .	2-124	79
Sensitive Switch	2-126	80
Washer and Extractor Motors Base (EIDAL Model ELT9T) .	2-127	81
Air Cylinder, Washer Motor	2-129	82
Washer and Extractor Motors Base (EDRO Model EP120-LTU)	2-131	83
45. Idler Pulley		
Idler Pulley, Belt	2-133	84
46. Electrical Conduit		
Electrical Conduit	2-135	85
47. Drain Pan Assembly		
Drain Pan.....	2-136	86
48. Heat Exchanger Exhaust Duct and Retainer		
Heat Exchanger Exhaust Duct and Retainer	2-137	87
49. Generator Switchbox and Outlet Box		88
Generator Switchbox and Outlet Box	2-139	88
50. Fire Extinguisher, Step Assembly and Canvas Items		
Fire Extinguisher, Step Assembly and Canvas Items	2-141	89
51. Bulk Material	2-142	
SECTION III. SPECIAL TOOLS LIST (Not Applicable)		
IV. NATIONAL STOCK NUMBER, REFERENCE NUMBER AND ALPHABETICAL INDEX	4-1	

SECTION I

INTRODUCTION

1. Scope.

This manual lists repair parts, special tools, test, measurement, and diagnostic equipment (TMDE), and other support equipment required for operation and performance of organizational maintenance of the Laundry Unit.

2. General.

a. Section II Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of assembly groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed in NSN sequence, as the last group in Section II.

b. Section III Special Tools List. (Not Applicable.) c. Section IV National Stock Number and Part Number Index. A list, in ascending numerical sequence, of all National Stock Numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National Stock Number and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns.

The following provides an explanation of columns found in the tabular listings: a. Illustration. This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration in which the item is shown.

(2) Item Number. The number used to identify each item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source Code. Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentially dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorate in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.