

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

LAUNDRY UNIT, TRAILER MOUNTED, M85

MODEL M85-200

NSN 3510-01-365-5687

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

This copy is a reprint which includes current pages from
Change 1.

TECHNICAL MANUAL

NO.10-3510-222-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 30 December 1993**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST****LAUNDRY UNIT, TRAILER MOUNTED, M85****MODEL M85-200****NSN 3510-01-365-5687****Current as of 30 MAY 1993****REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited**TABLE OF CONTENTS**

		Page / Illus Figure
Section I	Introduction	1
	Laundry Unit, Trailer Mounted, M85, Model M85-200	1
Section II	Repair Parts List	1-1
Group 01	Cover Assembly, Tarpaulin	1-1 1
Group 02	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 03	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 04	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 05	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 06	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 07	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 08	Ladder, Frame, Beam, Basket, and Rail Assemblies -	2-1 2
Group 09	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 10	Ladder, Frame, Beam, Basket, and Rail Assemblies	2-1 2
Group 11	Top Panel, Sound Panel, and Lower Track Assemblies	3-1 3
Group 12	Top Panel, Sound Panel, and Lower Track Assemblies	3-1 3
Group 13	Clamp and Maintenance Platform Assemblies	4-1 4
Group 14	Clamp and Maintenance Platform Assemblies	4-1 4
Group 15	Clamp and Maintenance Platform Assemblies	4-1 4
Group 16	Clamp and Maintenance Platform Assemblies	4-1 4

Group 01	Cover Assembly, Tarpaulin	1-1	1
Group 17	Clamp and Maintenance Platform Assemblies	4-1	4
Group 18	Clamp and Maintenance Platform Assemblies	4-1	4
Group 19	Washing Hanger and Drain	5-1	5
Group 20	Washing Hanger and Drain	5-1	5
Group 21	Washing Machine Assembly	6-1	6
	Washing Machine Drain and Tub Pipe Assembly	7-1	7
	Washing Machine Door Cover and Lock Assembly	8-1	8
	Washing Machine Door, Bar, and Latch Assembly	9-1	9
	Washing Machine Belt Guard, Motor, and Plate	10-1	10
	Washing Machine Air Tank Assembly	11-1	11
	Washing Machine Gear Reducer Assembly	12-1	12
	Washing Machine Front Support, Strap, Seal, and Carriage Assemblies	13-1	13
	Washing Machine Basket, Drum, and Frame	14-1	14
	Washing Machine Controller Air Manifold and Hoses	15-1	15
	Washing Machine Controller Console Assembly	16-1	16
	Washing Machine Formula Cards and Controller Control Panel	17-1	17
	Washing Machine Controller Chassis Assembly	18-1	18
Group 22	Washing Machine Air Compressor Assembly	19-1	19
Group 23	Washing Machine Controller Stand	20-1	20
Group 24	Conduit, Feed Power Cable, and Wiring	21-1	21
Group 25	Conduit, Feed Power Cable, and Wiring	21-1	21
Group 26	Conduit, Feed Power Cable, and Wiring	21-1	21
Group 27	Enclosure Box and Power Distribution Panel	22-1	22
Group 28	Enclosure Box and Power Distribution Panel	22-1	22
Group 29	Pre-Extractor Bin Assembly	23-1	23
Group 30	Extractor Piping Assembly	24-1	24
Group 31	Extractor Assembly	25-1	25
	Extractor Lid	26-1	26
	Extractor Basket, Center Post, and Curb	27-1	27
	Extractor Control Panel	28-1	28
	Extractor Starter Enclosure Box	29-1	29
	Extractor Drive Unit Assembly	30-1	30
	Extractor Brake Shoes and Drive Unit	31-1	31
	Extractor Belt, Drive Motor, and Skirt	32-1	32
Group 32	Modified Water Heater, Fuel Hoses, and Tiedown	33-1	33
Group 33	Modified Water Heater, Fuel Hoses, and Tiedown	33-1	33
	Water Heater Clamp Assembly	34-1	34
	Water Heater Piping Assembly	35-1	35
	Water Heater Assembly	36-1	36
Group 34	Dryer Assembly	37-1	37
	Elbow and Dryer	38-1	38
	Dryer Exhaust Duct, Adapter, and Fuel Line Bracket	39-1	39
	Dryer Conduit and Fire Guard	40-1	40
	Dryer Fuel Hoses	41-1	41
	Burner Fuel Filter Assembly	42-1	42
	Adapter Assembly	43-1	43
	Dryer Blower and Shutter Assemblies	44-1	44
	Dryer Fuel Rotary Pump Assembly	45-1	45
	Dryer Burner Assembly	46-1	46

	Burner Fuel Hose and Solenoid Valve	47-1	47
	Dryer Ignition Cable, Sight Eye, Electrode, and Nozzle	48-1	48
	Dryer Air Shutter and Plenum Assemblies	49-1	49
	Dryer Transformer Assembly	50-1	50
	Dryer Speed Reducer and Motor	51-1	51
	Dryer Roller Chain and Guard	52-1	52
	Dryer Electrical Controls	53-1	53
	Dryer Exhaust Motor and Fan Assembly	54-1	54
	Dryer Informational Plates and Grounding Screw	55-1	55
	Dryer Tumbler Assembly	56-1	56
	Dryer Trunnion Assembly	57-1	57
	Dryer Air Heater Assembly	58-1	58
	Dryer Tumbler Barrel Assembly	59-1	59
	Dryer Cylinder, Shell, Hinge, and Door	60-1	60
	Dryer Base Assembly	61-1	61
	Dryer Base Spout and Pin	62-1	62
	Dryer Base and Covers	63-1	63
	Dryer Wiring	64-1	64
Group 35	Bin Dryer Assembly	65-1	65
Group 36	Power Distribution Cable Assembly	66-1	66
Group 37	Tiedown and Centrifugal Pump	67-1	67
Group 38	Tiedown and Centrifugal Pump	67-1	67
	Centrifugal Pump Sediment Strainer Assembly	68-1	68
	Switch Box, Centrifugal Water Pump, and Frame	69-1	69
Group 39	Water Suction Strainer	70-1	70
Group 40	Fire Extinguisher and Bracket	71-1	71
Group 41	M13 Decontamination Apparatus Bracket	72-1	72
Group 42	Tool Box Assembly	73-1	73
Group 43	Modified Generator and Battery Cover	74-1	74
Group 44	Ground Rod Assembly	75-1	75
Group 45	Water Hoses	76-1	76
Group 46	Modified Trailer Assembly	77-1	77
Section IV	Bulk Items List		
Group 48	Bulk Items	Bulk-1	
Section V	Cross-reference Indexes	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-4	
	Figure and Item Number Index	I-37	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Laundry Unit, Trailer Mounted, M85, Model M85-200. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items listed are shown on the associated Illustration(s)/(figure(s)).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basic of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross-references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTION II AND III).

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5 position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

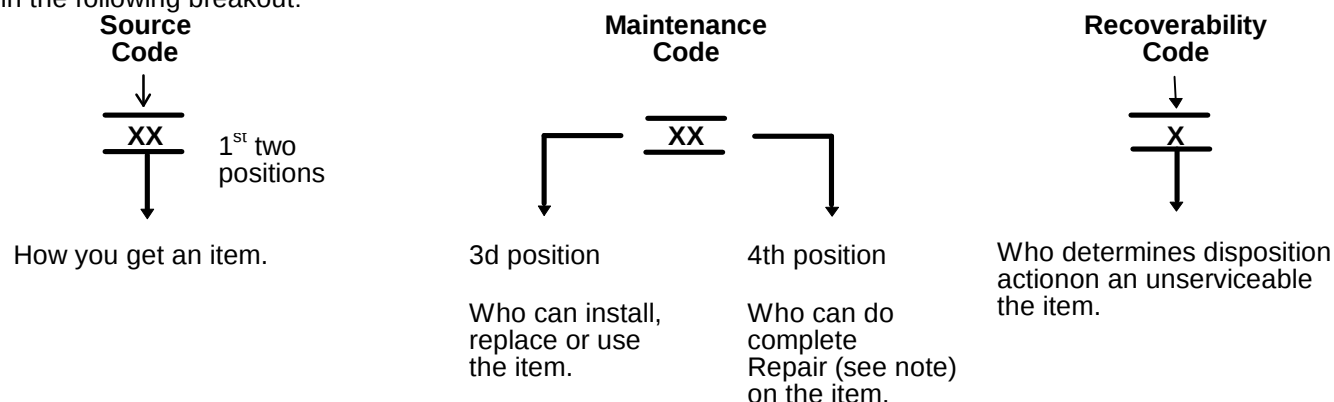

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the Repair" function in a use/user environment in order to restore serviceability to a failed item.