

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

CLOTHING REPAIR SHOP
TRAILER MOUNTED
MODEL CRS-100
(NSN 3530-01-346-7256)

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

H E A D Q U A R T E R S , D E P A R T M E N T O F T H E A R M Y
3 0 A P R I L 1 9 9 3

TECHNICAL MANUAL

NO. 10-3530-207-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 30 APRIL 1993

Technical Manual

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTCLOTHING REPAIR SHOP
TRAILER MOUNTED
MODEL CRS-100
NSN 3530-01-346-7256

Current as of 9 March 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I	Introduction.....	1	
Section II	Repair Parts List	1	
Group 01	Trailer	1-1	1
Group 02	Leg Support, Trailer	2-1	2
Group 03	Cabinet Holddown Clamp	3-1	3
Group 04	Cabinet Assembly	4-1	4
	Backing Place and Lifting Eye	5-1	5
	Padlocks	6-1	6
	Side Drip Edge	7-1	7
	Side Door Stay	8-1	8
	Front Side Door Assembly (Curb Side)	9-1	9
	Rear Side Door Assembly (Curb Side)	10-1	10
	Side Front Door Assembly Street Side)	11-1	11
	Rear Side Door Assembly (Street Side)	12-1	12
	Rear Drip Edge	13-1	13
	Rear Door Stay	14-1	14
	Rear Door Assembly	15-1	15
	Roof Angles and Rear Panels	16-1	16
	Side and Corner Panels	17-1	17
	Bumpers and Front Panels	18-1	18
	Roof Panels.....	19-1	19

		Page	Illus/ Figure
<i>Group 04 (Cont'd)</i>	Bottom Panels	20-1	20
	Frame and Rack Assembly	21-1	21
	Wheel Well Assembly	22-1	22
	Heat Sealer Mounting Plate	23-1	23
	Retaining Straps and Pins	24-1	24
	Generator Rails and Frame Assembly	25-1	25
<i>Group 05 Group 06</i>	Clothing Tray Assembly	26-1	26
	Clothing Sewing Machine Assembly	27-1	27
	Clothing Machine Lamp Assembly	28-1	28
	Clothing Sewing Machine Head Assembly	29-1	29
	Clothing Machine Thread Unwinder	30-1	30
	Clothing Machine Belt Guard, Belt, and Machine Head	31-1	31
	Clothing Machine Bed and Accessories	32-1	32
	Clothing Machine Needle Bar and Thread Take-up Mechanism	33-1	33
	Clothing Machine Arm Shaft and Vertical Shaft Mechanism	34-1	34
	Clothing Machine Stitch Length Regulating Mechanism	35-1	35
	Clothing Machine Feeding and Feed Lifting Mechanism	36-1	36
	Clothing Machine Presser Foot Mechanism	37-1	37
	Clothing Machine Table Top Assembly	38-1	38
	Clothing Machine Hinge Plate, Hook Pin, Oil Plate, and Pad	39-1	39
	Clothing Machine Bobbin Winder	40-1	40
	Clothing Machine Knee Lever Assembly	41-1	41
	Clothing Machine Table Top and Clutch Motor Assembly	42-1	42
	Clothing Machine Belt Guard and Pulley	43-1	43
	Clothing Machine Clutch Motor Lever and Housing	44-1	44
	Clothing Machine Clutch Motor Bearing, Shaft and Plate	45-1	45
	Clothing Machine Clutch Motor Fly Wheel	46-1	46
	Clothing Machine Clutch Motor Belt Tightener	47-1	47
	Clothing Machine Clutch Motor	48-1	48
	Clothing Machine Treadle	49-1	49
	Clothing Machine Stand Assembly	50-1	50
<i>Group 07 Group 08</i>	Darning Machine Tray Assembly	51-1	51
	Darning Machine Assembly	52-1	52
	Darning Machine Lamp Assembly	53-1	53
	Darning Machine Head Assembly	54-1	54
	Darning Machine Two Spool Thread Stand	55-1	55
	Darning Machine Lifting Chain	56-1	56
	Darning Machine Belt Guard and V Belt	57-1	57
	Darning Machine Head	58-1	58
	Darning Machine Thread Stand, Guides, Lifting Lever, and Tension Assembly;	59-1	59
	Darning Machine Slide, Needle and Guide Plates	60-1	60
	Darning Machine Rotating Hook	61-1	61
	Darning Machine Hook Driving Shaft	62-1	62
	Darning Machine Face Plate, Presser Foot, and Presser Bar	63-1	63
	Darning Machine Needle Bar, Take Up Crank and Lever, and Connecting Link	64-1	64
	Darning Machine Oil Guard, Needle Bar Crank, Wheel and Air Shaft	65-1	65
	Darning Machine Upper, Middle Housing, and Base	66-1	66
	Darning Machine Table Top Assembly	67-1	67
	Darning Machine Bobbin Winder, and Oil Dump Pan	68-1	68
	Darning Machine Foot Pedal and Clamps	69-1	69

		Page	Illus/ Figure
<i>Group 08</i>	Darning Machine Table Top, Clutch Motor, Switch Box, and		
<i>(Cont'd)</i>	Receptacle Assembly	70-1	70
	Darning Machine Belt Guard and Pulley	71-1	71
	Darning Machine Clutch Lever	72-1	72
	Darning Machine Clutch Housing	73-1	73
	Darning Machine Clutch Flywheel	74-1	74
	Darning Machine Belt Motor Tightener	75-1	75
	Darning Machine Clutch Motor	76-1	76
	Darning Machine Treadle Assembly	77-1	77
	Darning Machine Stand Assembly	78-1	78
<i>Group 09</i>	Button Machine Tray Assembly	79-1	79
<i>Group 10</i>	Button Sewing Machine Assembly	80-1	80
	Button Machine Lamp Assembly	81-1	81
	Button Sewing Machine Head Assembly	82-1	82
	Button Machine Single Thread Spool Stand	83-1	83
	Button Machine Lifter Chain and Foot Pedal	84-1	84
	Button Machine Tray and Machine Head	85-1	85
	Button Machine Side Covers and Guide Pins	86-1	86
	Button Machine Face Plate and Eye Guard	87-1	87
	Button Machine Automatic Lifting Lever, Connecting Lever, Upper and Lower Plates, and Holder	88-1	88
	Button Machine Presser Bar	89-1	89
	Button Machine Needle, Needle Bar, and Vibrating Lever	90-1	90
	Button Machine Clamp, Lifting Arm, and Thread Pullofts	91-1	91
	Button Machine Automatic Thread and Nipper Releases	92-1	92
	Button Machine Arm Rockshaft	93-1	93
	Button Machine Arm Clamp and Spreader	94-1	94
	Button Machine Feed and Needle Plates	95-1	95
	Button Machine Pulley Starter, Stop Motion Shaft, and Trip Block	96-1	96
	Button Machine Drive Pulley and Clutch	97-1	97
	Button Machine Needle Bar Cam, Feed Cam, Eccentric and Drive Shaft	98-1	98
	Button Machine End Cover	99-1	99
	Button Machine Thread Looper Drive Shaft, Cam, and Crank	100-1	100
	Button Machine Arm and Bed	101-1	101
	Button Machine Table Top Assembly	102-1	102
	Button Machine Belt Guard	103-1	103
	Button Machine Bed Assembly	104-1	104
	Button Machine Table Top and Motor Assembly	105-1	105
	Button Machine Belt Guard and Pulley	106-1	106
	Button Machine Belt Tightener and Motor	107-1	107
	Button Machine Stand Assembly	108-1	108
<i>Group 11</i>	Stowage Box I	109-1	109
	Stowage Box II	110-1	110
	Stowage Box III	111-1	111
	Stowage Box IV	112-1	112
<i>Group 12</i>	Folding Chair	113-1	113
<i>Group 13</i>	Grommet and Hand Tack Folding Table	114-1	114
	Heat Sealer Folding Table	115-1	115
<i>Group 14</i>	Heat Sealer	116-1	116
	Heat Sealer Base Assembly	117-1	117
	Heat Sealer Universal Console Assembly	118-1	118

		Page	Illus/ Figure
Group 14			
(Cont'd)			
Group 15	Heat Sealer Heater Block Assembly	119-1	119
	Distribution Box 1	120-1	120
	Distribution Box 2	121-1	121
	Distribution Box 3	122-1	122
Group 16	Power Box Assembly	123-1	123
Group 17	Iron and Ironing Board	124-1	124
Group 18	Hand Tack and Dies	125-1	125
Group 19	Grommet Press and Dies	126-1	126
Group 20	Lamp and Trouble Light	127-1	127
Group 21	Fire Extinguisher	128-1	128
Group 22	Generator Clamp Assembly	129-1	129
Group 23	Ground Wire	130-1	130
Group 24	Bulk Materials	Bulk-1	Bulk
Section III.	Special Tools (Not Applicable)		
Section IV.	Cross Reference Indexes	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-2	
	Figure and Item Number Index	I-31	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Clothing Repair Shop, Trailer Mounted, Model CRS-100. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).

b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-References Indexes.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

