

***TM 10-4610-232-24P**

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**WATER PURIFICATION UNIT,
REVERSE OSMOSIS, 3,000 GPH
TRAILER MOUNTED, FLATBED CARGO
22-1/2 TON, 8 WHEEL TANDEM
MODEL NO. WTA-060 (UOC: ETN)
NSN 4610-01-219-8707 AND
MODEL ROWPU-1 (UOC: FKD)
NSN 4610-01-371-1790**

DISTRIBUTION STATEMENT A. Approved for public release; distribution is limited.

***This manual supersedes TM 10-4610-232-24P, dated 30 Jun 1993 and all related changes.**

HEADQUARTERS, DEPARTMENT OF THE ARMY

31 January 2000

HEADQUARTERS
DEPARTMENT THE ARMY
WASHINGTON, D.C., 31 January 2000

Unit, Direct Support and General Support Maintenance
Repair Parts and Special Tools List
for

**WATER PURIFICATION UNIT,
REVERSE OSMOSIS, 3,000 GPH
TRAILER MOUNTED, FLATBED CARGO
22-1/2 TON, 8 WHEEL TANDEM
MODEL NO. WTA-060 (UOC: ETN)
NSN 4610-01-219-8707 AND
MODEL ROWPU-1 (UOC: FKD)
NSN 4610-01-371-1790**

Current as of 13 January 2000

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028-2 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter, DA Form 2028, or DA Form 2028-2 direct to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-AC-NML, Rock Island, IL 61299-7630. The email address is amsta-ac-nml@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	PAGE	ILLUS/ FIGURE
Section I	Introduction	1
Section II	Repair Parts	1-1
Group 01	Raw Water System	
	Raw Water System	1-1 1
	Raw Water Pump Cables	2-1 2
	Raw Water Pump and Motor Assembly	3-1 3
	Raw Water Pump	4-1 4
	Raw Water Pump Motor	5-1 5
	Priming Assist Pump	6-1 6
	Cyclone Separators	7-1 7
Group 02	Water Purification System	
	Eyewash Station	8-1 8
	Fire Extinguisher	9-1 9
	Low Pressure Air Tubing	10-1 10
	High Pressure Air Tubing	11-1 11
	Low Pressure Water Tubing	12-1 12

* This manual supersedes TM 10-4610-232-24P, dated 3 June 1993 and all related changes.

TABLE OF CONTENTS (cont.)

	Page	Illus. Figure
High Pressure Piping, Hoses and Tubing	13-1	13
Hose Connections Container to HP Pump	14-1	14
Chemical Tubing	15-1	15
Main Harness - Raw Water Side	16-1	16
440V Harness - Front Wall	17-1	17
Auxiliary Wiring - Front Wall	18-1	18
Main Harness - Back Wall	19-1	19
440V Harness - Back Wall	20-1	20
DC Wiring - Back Wall	21-1	21
Auxiliary Wiring - Back Wall	22-1	22
Wiring for Ceiling Lights	23-1	23
Ceiling Light Assembly	24-1	24
Pressure Gages and Mounting Hardware	25-1	25
Control Panel Mounting	26-1	26
Main Control Panel Cable Assembly and Connectors	27-1	27
Main Control Panel Wiring List	28-1	28
Main Control Panel Light	29-1	29
Upper Exterior Panel	30-1	30
Upper Interior Panel - Relays	31-1	31
Circuit Breaker Panel	32-1	32
Lower Exterior Panel	33-1	33
Main Circuit Breaker and Transformer	34-1	34
Lower Interior Panels, Circuit Breakers and Motor Starter	35-1	35
Motor Starter MS8-15, MS8-2M	36-1	36
Motor Starter MS7	37-1	37
Motor Starter MS8-1M	38-1	38
Motor Starter MS2	39-1	39
Motor Starter MS1	40-1	40
Motor Starter MS3	41-1	41
Motor Starter MS8-25	42-1	42
Main Control Panel	43-1	43
Pressure Switches Panel Assembly	44-1	44
Pressure Switches Panel Wiring	45-1	45
Switch Panel No.1	46-1	46
Switch Panel No.2	47-1	47
Switch Panel No.2 Wiring	48-1	48
Junction Box Assembly No. 3	49-1	49
Junction Box No. 3 Wiring	50-1	50
Utility Cable Junction Box	51-1	51
Raw Water Pump Junction Box	52-1	52
Raw Water Pump Junction Box-Wiring	53-1	53
Distribution Pump Junction Box	54-1	54
Distribution Pump Junction Box-Wiring	55-1	55
Chemical Injection Pump Mounting and Connections	56-1	56
Chemical Injection Pump	57-1	57
Hypochlorite Backwash Pump	58-1	58
Hypochlorite Tank Assembly	59-1	59
Mixer Assembly	60-1	60
Hypochlorite Tank Assembly Mounting Bracket	61-1	61
Booster Pump Installation	62-1	62
Booster Pump	63-1	63

TABLE OF CONTENTS (cont.)

	Page	Illus. Figure
Booster Pump Motor	64-1	64
Cartridge Filter Assembly	65-1	65
Booster Pump Suction Feed	66-1	66
Booster Pump Discharge	67-1	67
High Pressure Pump Suction	68-1	68
Product Water Out	69-1	69
Sound Controlling Blankets (Piping)	70-1	70
Pressure Control Valve and Waste Out Piping	71-1	71
Basket Strainer	72-1	72
Butterfly Valve and Actuator	73-1	73
Butterfly Valve and Actuator (Model ETN Only)	74-1	74
Butterfly Valve and Actuator (Model ETN Only)	75-1	75
Manual Butterfly Valve	76-1	76
Turbidity Fow Panel Assembly (Model ETN Only)	77-1	77
Turbidity Meter Panel Assembly (Model ETN Only)	78-1	78
Turbidity Meter (Model ETN Only)	79-1	79
Low Pressure Solenoid Valve Air Blanket	80-1	80
Low Pressure Solenoid Valve Backwash Air	81-1	81
Low Pressure Solenoid Valve	82-1	82
Media Filter Level Indicator Assembly	83-1	83
Media Filter Assembly	84-1	84
Clean Flush Tank Assembly	85-1	85
Polyelectrolyte Tank Assembly	86-1	86
Sequestrant Tank Assembly	87-1	87
Chemical Tank Mounting	88-1	88
Sample Trough Assembly	89-1	89
High Pressure Solenoid Valve Assembly	90-1	90
Turbidity Meter Air Dryer (Model ETN Only)	91-1	91
TDS Meter Assembly (Model ETN Only)	92-1	92
24V DC Power Supply	93-1	93
24V DC Power Supply Wiring	94-1	94
Diesel Heater Control Box 1 and Wiring	95-1	95
Diesel Heater Control Box 2 and Wiring	96-1	96
Diesel Heater and Mounting Brackets	97-1	97
Diesel Heater	98-1	98
Heater Fuel Pump	99-1	99
Fuel Lines	100-1	100
Thermostat Assembly (Heater 2)	101-1	101
CO Monitor	102-1	102
RO Vessels and Elements	103-1	103
RO Element Mounting	104-1	104
Storage Rack and Box	105-1	105
NBC Filter Assembly	106-1	106
NBC Filter Hoses	107-1	107
Air Dryer	108-1	108
Outlet Air Filter	109-1	109
Air Manifolds	110-1	110
Air Tank	111-1	111
Air Regulator	112-1	112
Fan Assembly (Serial No.16461 Thru 16556)	113-1	113
Fan Assembly (Serial No.16557 Thru 17099)	114-1	114


TABLE OF CONTENTS (cont.)

	PAGE	ILLUS/ FIGURE
Sump Drain Heater	115-1	115
Waste Water Hoses	116-1	116
Ladder	117-1	117
Accessory Tables	118-1	118
ID Plate and Cable Mounts	119-1	119
ISO Container	120-1	120
Rear Door - Distribution Side	121-1	121
Front Door - Raw Water Side	122-1	122
ISO Container - Exterior Skin	123-1	123
High Pressure Pump Assembly and Cover	124-1	124
Metal Oxide Varistor (MOV) Assembly	125-1	125
Electric Heater	126-1	126
Air Compressor Relief Valve	127-1	127
Air Compressor Mounting, Belt Guard and Motor	128-1	128
Air Compressor	129-1	129
High Pressure Pump Guard	130-1	130
High Pressure Motor Assembly	131-1	131
Piping for High Pressure Pump	132-1	132
High Pressure Pump Mounting	133-1	133
High Pressure Pump (Drive End)	134-1	134
High Pressure Pump (Fluid End)	135-1	135
High Pressure Pump/Motor Assembly	136-1	136
Group 03 Water Distribution System		
Distribution System	137-1	137
Distribution Pump Assembly	138-1	138
Distribution Pump	139-1	139
Distribution Pump Motor	140-1	140
Storage Tank	141-1	141
Group 04 Winter Kit		
Winter Kit	142-1	142
Group 05 Accessories		
Accessories	143-1	143
Group 06 Generator		
Generator And Brackets	144-1	144
Group 07 Trailer, 30 Foot		
Trailer	145-1	145
Group 08 Bulk Items		
Bulk Items	BULK-1	
Section III Special Tools List		
Special Tools	146-1	146
Section IV Cross Reference Index		
National Stock Number Index	I-1	
Part Number Index	I-34	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

 1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Water Purification Unit, Reverse Osmosis, 3,000 GPH. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.
2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:
 - a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).
 - b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.
 - c. Section IV, Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.
3. **EXPLANATION OF COLUMNS (SECTIONS II AND III).**
 - a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.
 - b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

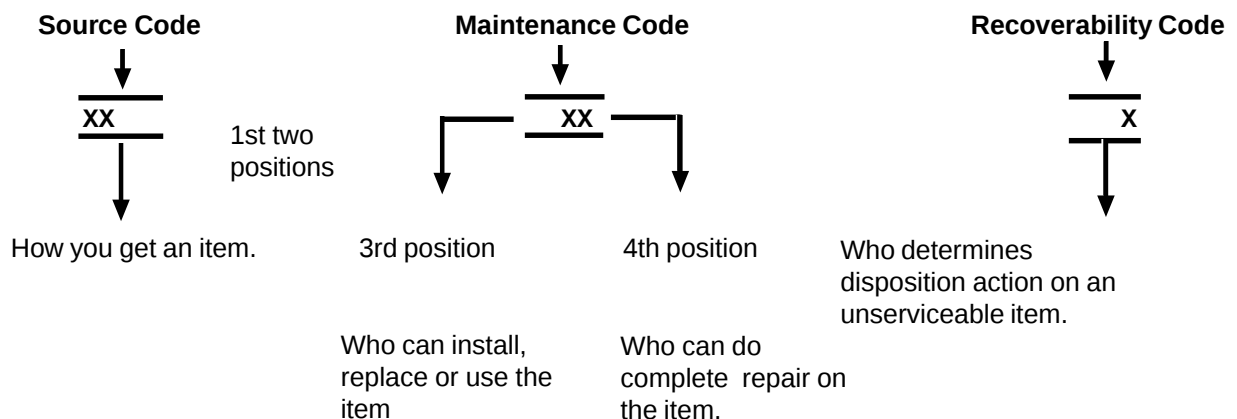

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Source Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. they are authorized to the category indicated by the code entered in the 3rd position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
MO- (Made at Unit/AVUM Level) MF- (Made at DS/AVUM Level) MH- (Made at GS Level) ML- (Made at Specialized Repair Activity (SRA)) MD- (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO- (Assembled by Unit/AVUM Level) AF- (Assembled by DS/AVIM Level) AH- (Assembled by GS Category) AL- (Assembled by SRA) AD- (Assembled by Depot)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA-	Do not requisition "XA"-coded item. Order its next higher assembly. (Refer to the NOTE below.)
XB-	If an "XB" item is not available from salvage, order it using the CAGEC and part number given.
XC-	Installation drawing, diagram, instruction sheet, field service drawing, that is identified manufacturer's part number.
XD-	Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR750-1.

- (2) Maintenance Code. Maintenance codes tell you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:
- (a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to the following levels of maintenance.

**Maintenance
Code**

Application/Explanation

- C - Crew or operator maintenance done within unit/AVUM maintenance.
- O - Unit level/AVUM maintenance can remove, replace, and use the item.
- F - Direct support/AVIM maintenance can remove, replace, and use the item.
- H - General support maintenance can remove, replace, and use the item.
- L - Specialized repair activity can remove, replace, and use the item.
- D - Depot can remove, replace, and use the item.

- (b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions.)

NOTE

Some limited repair may be done on an item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart and SMR codes.

Maintenance

Code

Application/Explanation

- O - Unit/AVUM is the lowest level that can do complete repair of the item.
- F - Direct support/AVIM is the lowest level that can do complete repair of the item.
- H - General Support is the lowest level that can do complete repair of the item.
- L - Specialized repair activity is the lowest level that can do complete repair of the item.
- D - Depot is the lowest level that can do complete repair of the item.
- Z - Nonreparable. No repair is authorized.
- B - No repair is authorized. No parts or special tools are authorized for the maintenance of a "B" coded item. However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

- (3) Recoverability Code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

Recoverability**Codes****Application/Explanation**

- Z - Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in 3rd position of SMR Code.
 - O - Reparable item. When not economically reparable, condemn and dispose of the item at unit or AVUM level.
 - F - Reparable item. When uneconomically reparable, condemn and dispose of the item at the direct support or AVIM level.
 - H - Reparable item. When uneconomically reparable, condemn and dispose of the item at the general support level.
 - D - Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal of item not authorized below depot level.
 - L - Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
 - A - Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.
- c. CAGEC (Column (3)). The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.
 - d. PART NUMBER (Column (4)). Indicates the primary number used by the manufacturer, (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the number listed.

- e. DESCRIPTION AND USABLE ON CODE (UOC) (Column (5)). This column includes the following information:
 - (1) The Federal item name and, when required, a minimum description to identify the item.
 - (2) Part numbers of bulk materials are referenced in this column in the line entry to be manufactured/fabricated.
 - (3) The statement 'END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both Section II and Section III.
- f. QTY (Column (6)). The QTY (quantity per figure) column indicates the quantity of the item used in the breakout shown on the illustration/figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column instead of a quantity indicates that the quantity is variable and may vary from application to application.

4. EXPLANATION OF INDEX FORMAT AND COLUMNS (SECTION IV).**a. NATIONAL STOCK NUMBER (NSN) INDEX.**

- (1) STOCK NUMBER Column. This column lists the NSN in national item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN, i.e.

NSN
5305-01-574-1467
NIIN

When using this column to locate an item, ignore the first four digits of the NSN. Use the complete NSN (13 digits) when requisitioning items by stock number.

- (2) FIG. Column. This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III.
- (3) ITEM Column. The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.
- b. **PART NUMBER INDEX.** Part numbers in this index are listed by part number in ascending alphanumeric sequence (i.e., vertical arrangement of letter and number combination which places the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9, and each following letter or digit in like order).
 - (1) CAGEC Column. The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.
 - (2) PART NUMBER Column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.
 - (3) STOCK NUMBER Column. This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and CAGEC columns to the left.
 - (4) FIG. Column. This column lists the number of the figure where the item is identified/located in Section II and Section III.
 - (5) ITEM Column. The item number is that number assigned to the item as it appears in the figure referenced in adjacent figure number column.

5. **SPECIAL INFORMATION.**

- a. **USABLE ON CODE.** The usable on code appears in the lower left corner of the Description Column heading. Usable on codes are shown as "UOC:.." in the Description Column (justified left) on the last line of the applicable item description/nomenclature. Uncoded items are applicable to all models. Identification of the usable on codes used in this RPSTL are:

Code	Used On
ETN	WTA-060
FKD	ROWPU-1

- b. **FABRICATION INSTRUCTIONS.** Bulk materials required to manufacture items are listed in the Bulk Material Functional Group of this RPSTL. Part numbers for bulk materials are also referenced in the description column of the line entry for the item to be manufactured/fabricated. Detailed fabrication instructions for items source coded to be manufactured or fabricated are found in TM 10-4610-232-34.
- c. **INDEX NUMBERS.** Items which have the word BULK in the figure column will have an index number shown in the item number column. This index number is a cross-reference between the National Stock Number/Part Number Index and the bulk material list in Section II.
- d. **ASSOCIATED PUBLICATIONS.** The publications listed below pertain to the Water Purification Unit, Reverse Osmosis, 3,000 GPH and its components.

Publication	Short Title
TM 10-4610-232-12	Operator and Unit Maintenance Manual
TM 10-4610-232-34	Direct Support and General Support Maintenance Manual

6. HOW TO LOCATE REPAIR PARTS.

- a. When National Stock Numbers or Part Numbers are NOT Known.
 - (1) First. Using the table of contents, determine the assembly or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.
 - (2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.
 - (3) Third. Identify the item on the figure and use the Figure and Item Number Index to find the NSN.
- b. When National Stock Number or Part Number is Known.
 - (1) First. Using the of National Stock Number and Part Number Indexes find the pertinent National Stock Number or Part Number. The NSN index is in National Item Identification Number (NIIN) sequence (see paragraph 4.a.). The part numbers in the Part Number index are listed in ascending alphanumeric sequence (see paragraph 4.b.). Both indexes cross-reference you to the illustration/figure and item number of the item you are looking for.
 - (2) Second. Turn to the figure and item number, verify that the item is the one you are looking for, then locate the item number in the repair parts list for the figure.

7. ABBREVIATIONS. Abbreviations used in this manual are listed in MIL-STD-12.

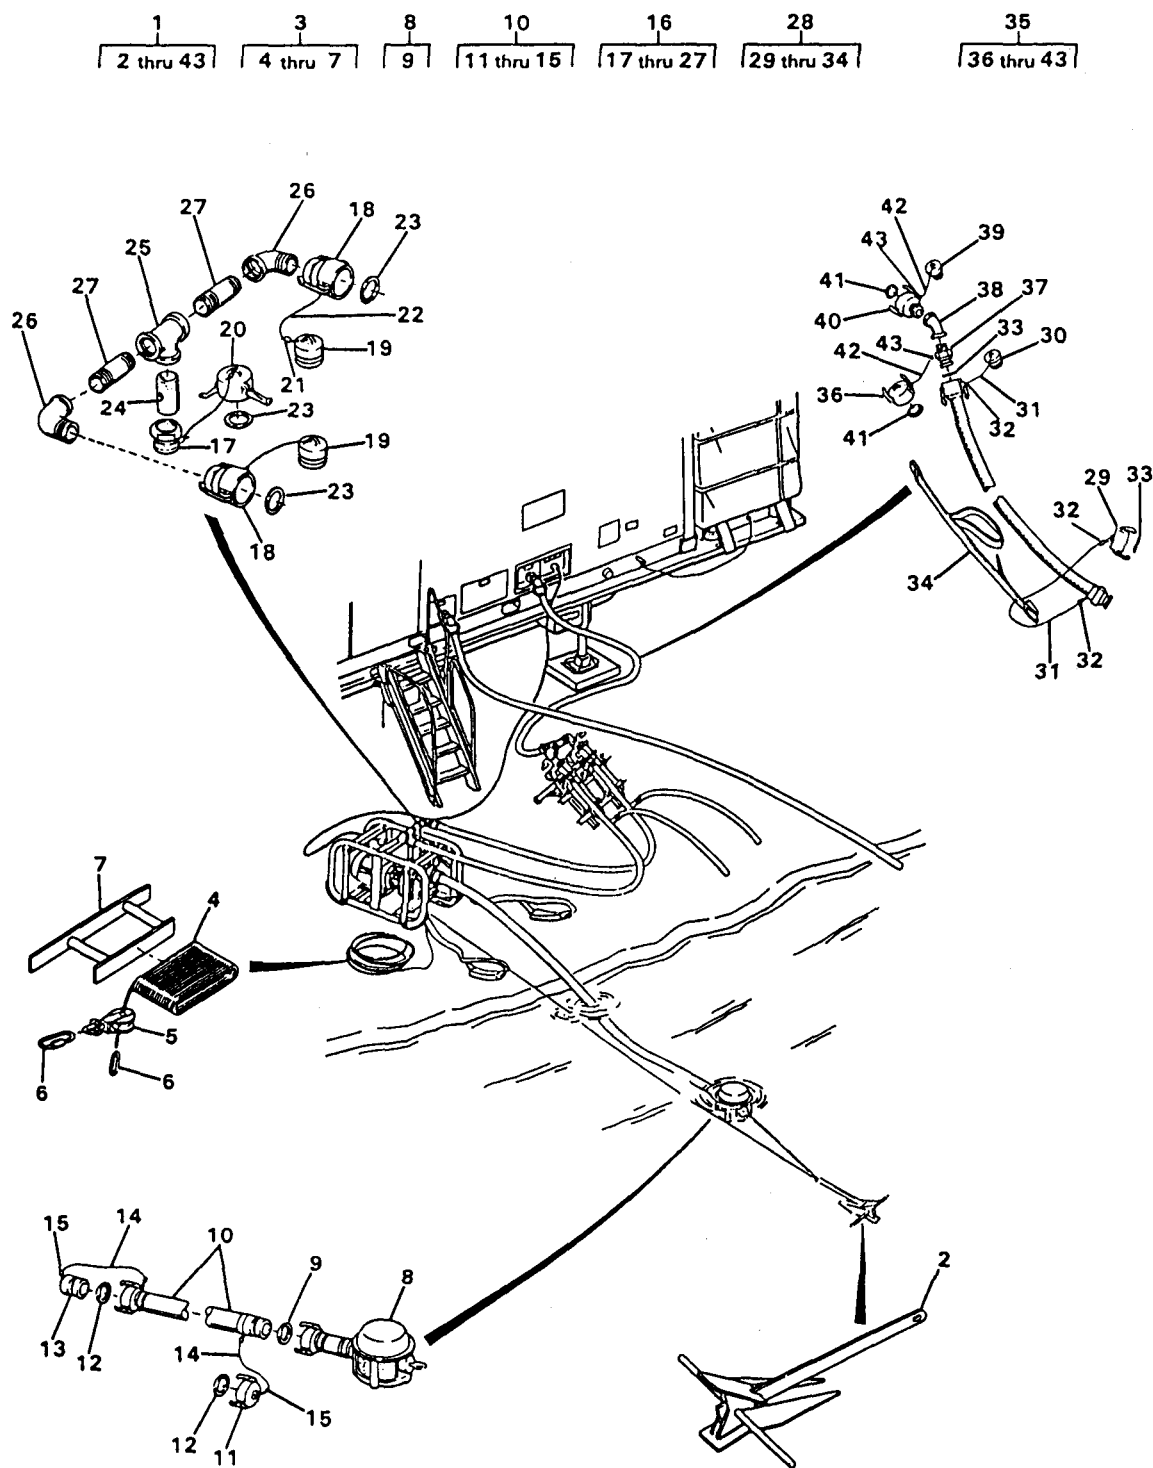 


FIGURE 1. RAW WATER SYSTEM (SHEET 1 of 2)
(Model FKD Only)

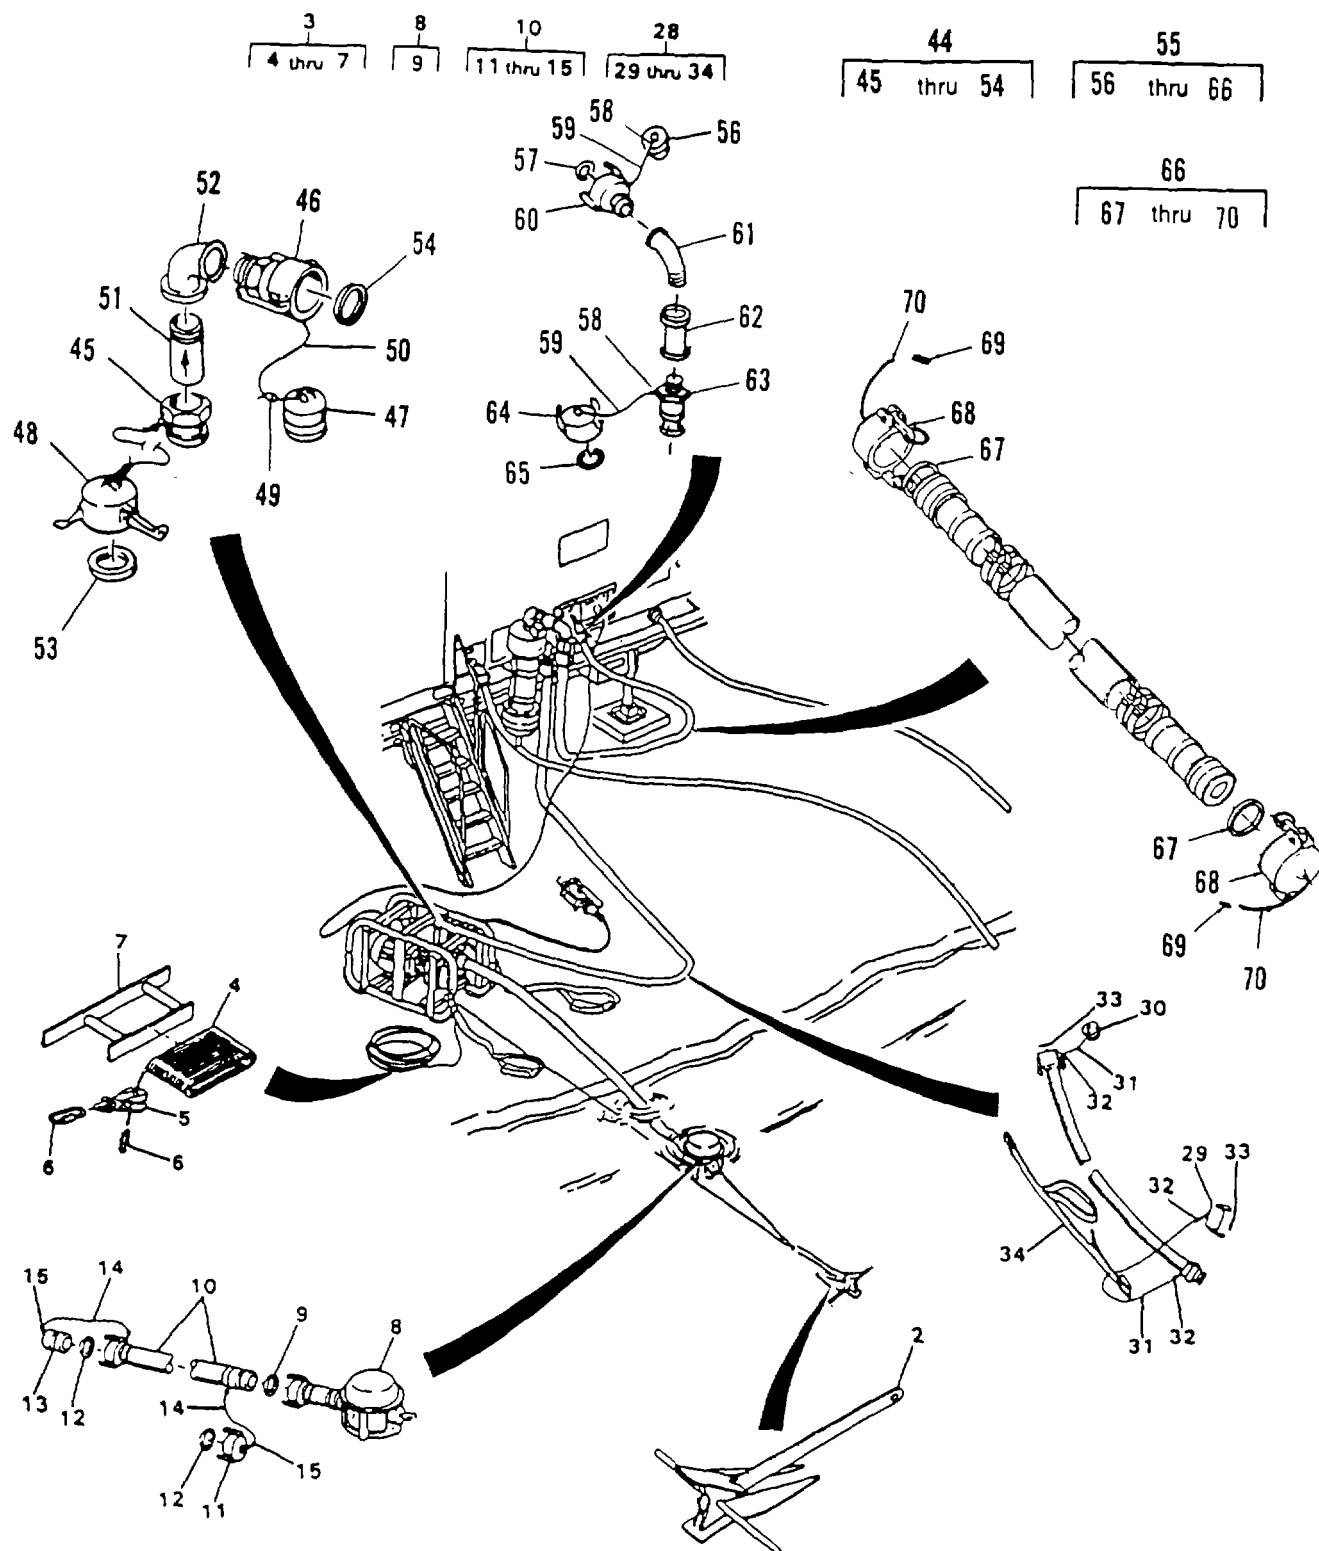 


FIGURE 1. RAW WATER SYSTEM (SHEET 2 of 2)
(Model ETN Only)

SECTION II

TM 10-4610-232-24P

(1) ITEM NO	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODES (UOC)	(7) QTY
GROUP 01 RAW WATER SYSTEM						
FIG. 1 RAW WATER SYSTEM						
1	XAOFF		09647	120-02594	RAW WATER SYSTEM.....	1
2	PAOZZ	2040013490496	97403	13229E0167	.ANCHOR, MARINE, FLUKE.....	1
3	XDOOO		97403	13229E1161	..ROPE ASSY, ANCHOR.....	1
4	MOOZZ		09647	120-02215	..ROPE CUT TO LENGTH FROM BULK, P/N 13229E1153.....	1
5	PAOZZ	3940013507919	97403	13229E1152	..BLOCK, TACKLE.....	1
6	PAOZZ	4010013507105	97403	13229E1151	..LINK, CHAIN, DETACHAB.....	2
7	XDOZZ		97403	13229E0858	..REEL, ROPE	1
8	PAOOO	4730013455781	97403	13229E0166	.STRAINER, SUCTION.....	1
9	PAOZZ	5330013496190	97403	13229E0857-3	..GASKET.....	2
10	PAOOO	4720013455641	97403	13229E0168	.HOSE ASSEMBLY, NONME	10
11	PAOZZ	4730013506290	96906	MS27028-16	..CAP, QUICK DISCONN.....	1
12	PAOZZ	5330013496190	97403	13229E0857-3	..GASKET.....	2
13	PAOZZ	4730013476073	96906	MS27029-16	..PLUG, QUICK DISCONN.....	1
14	MOOZZ		09647	120-02598-1	..CABLE CUT TO LENGTH FROM BULK, P/N 13229E1147-1.....	2
15	PAOZZ	4030001455721	96906	MS51844-64	..SWAGING SLEEVE, WIRE.....	4
16	AOOOO		97403	13229E1124	.PIPE SECTION ETN RAW WATER, PUMP.....	1
17	PAOZZ	4730013476070	96906	MS27020-12	..COUPLING, HALF, QUICK.....ETN	1
18	PAOZZ	4730013478544	96906	MS27024-12	..COUPLING, HALF, QUICK.....ETN	2
19	PAOZZ	4730014662790	96906	MS27029-12	..COUPLING, HALF, QUICK.....ETN	2
20	PAOZZ	4730010866157	96906	MS27028-12	..CAP, QUICK DISCONNECT.....ETN	1
21	PAOZZ	4030001455721	96906	MS51844-64	..SWAGING SLEEVE, WIRE.....ETN	6
22	MOOZZ		09647	120-02598-2	..CABLE CUT TO LENGTH FROM BULK, ETN P/N 13229E1147-1.....	3
23	PAOZZ	5330013498921	97403	13229E0857-4	..GASKET.....ETN	3
24	PAOZZ	4820013267879	97403	13229E0139-1	..VALVE, CHECK.....ETN	1
25	PBOZZ	4730013501590	97403	13229E1124-3	..TEE, PIPE 2 INCH NPT.....ETN	1
26	PBOZZ	4730013501581	97403	13229E1124-4	..ELBOW, PIPE 90 DEGREE, 2 INCH NPT.....	2
27	PBOZZ	4730001962030	96906	MS51846-157	..NIPPLE, PIPE 2 INCH NPT X 3.5 INCHES LONG.....	2
28	PAOOO	4720013475480	97403	13229E1154	.HOSE ASSEMBLY, NONME.....	1
29	PAOZZ	4730005908083	96906	MS27028-14	..CAP, QUICK DISCONN.....	1
30	PAOZZ	4730010789945	96906	MS27029-14	..PLUG, QUICK DISCONN.....	1
31	MOOZZ		09647	120-02598-3	..CABLE CUT TO LENGTH FROM BULK, P/N 13229E1147-1.....	2
32	PAOZZ	4030001455721	96906	MS51844-64	SWAGING SLEEVE, WIRE.....	4
33	PAOZZ	5330013496191	97403	13229E0857-5	..GASKET.....	2
34	PAOZZ	5340013496290	97403	13229E1000-1	..STRAP, WEBBING.....	1
35	AOOOO		97403	13229E0142	.PIPE SECTION RAW WATER, VAN.....ETN	1
36	PAOZZ	4730005908083	96906	MS27028-14	..CAP, QUICK DISCONN.....ETN	1
37	PAOZZ	4730002895368	96906	MS27022-14	..COUPLING HALF, QUICK.....ETN	1
38	PAOZZ	4730002493878	95321	702ELB0W45DEG	..ELBOW, PIPE 45 DEGREE, 1 1/2 NPT.....	1
38	PAOZZ		80204	ANS-B16.15	..ELBOW, PIPE 45 DEGREE, 2 INCH...ETN	1
39	PAOZZ	4730010789945	96906	MS27029-14	..PLUG, QUICK DISCONN.....ETN	1
40	PAOZZ	4730012312787	96906	MS27026-14	..COUPLING HALF, QUICK.....ETN	1

(1) ITEM NO	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODES (UOC)	(7) QTY
41	PAOZZ	5330013496191	97403	13229E0857-5	..GASKET.....ETN	2
42	MOOZZ		09647	120-02598-21	..CABLE CUT TO LENGTH FROM ETN	2
					BULK, P/N 13229E1147-.....	
43	PAOZZ	4030001455721	96906	MS51844-64	..SWAGING SLEEVE, WIRE.....ETN	4
44	AOOOO		97403	13229E0143	..PIPE SECTION, RAW WATER, PUMP.....FKD	1
45	PAOZZ	4730013476070	96906	MS27020-12	..COUPLING, HALF, QUICK.....FKD	1
46	PAOZZ	4730012312787	96906	MS27026-14	..COUPLING, HALF, QUICK.....FKD	1
47	PAOZZ	4730010789945	96906	MS27029-14	..PLUG, QUICK DISCONNE.....FKD	1
48	PAOZZ	4730010866157	96906	MS27028-12	..CAP, QUICK DISCONNEC.....FKD	1
49	PAOZZ	4030001455721	96906	MS51844-64	..SWAGING SLEEVE, WIRE.....FKD	4
50	MOOZZ		09647	120-02598-2	..CABLE CUT TO LENGTH FROM FKD	2
					BULK, P/N 13229E1147-1.....	
51	PAOZZ	4820013267879	97403	13229E0139-1	..VALVE, CHECK.....FKD	1
52	PBOZZ		81348	ANS B16.15	..ELBOW, REDUCER 90 DEGREE, 2 FKD	1
					INCH X 2-1/2 INCH.....	
53	PAOZZ	5330013498921	97403	13229E0857-4	..GASKET.....FKD	1
54	PAOZZ	5330013496191	97403	13229E0857-5	..GASKET.....FKD	1
55	AOOOO		97403	13229E0721	..PIPE SECTION.....FKD	1
56	PAOZZ	4730014662790	96906	MS27029-12	..COUPLING HALF, QUIC.....FKD	1
57	PAOZZ	5330013498921	97403	13229E0857-4	..GASKET.....FKD	1
58	PAOZZ	4030001455721	96906	MS51844-64	..SLEEVE.....FKD	4
59	MOOZZ		97403	13229E0721-8	..CABLE CUT TO LENGTH FROM FKD	2
					BULK, P/N 13229E1174-1.....	
60	PAOZZ	4730004109530	96906	MS27026-12	..COUPLING HALF, PLUG.....FKD	1
61	PAOZZ		97403	13229E0721-2	..ELBOW FKD	1
					90 DEGREE, STREET L, 2 INCH.....	
62	PAOZZ		97403	13229E0721-4	..REDUCER FKD	1
					2 INCH TO 2-1/2 INCH.....	
63	PAOZZ	4730002895368	96906	MS27022-14	..COUPLING HALF.....FKD	1
64	PAOZZ	4730005908083	96906	MS27028-14	..CAP, QUICK DISCONNECT.....FKD	1
65	PAOZZ	5330013496191	97403	13229E0857-5	..GASKET.....FKD	1
66	PAOOO	4720013455640	97403	13229E1125	..HOSE ASSEMBLY.....FKD	1
67	PAOZZ	5330013498921	97403	13229E0857-4	...GASKET.....FKD	2
68	PAOZZ	4730010866157	96906	MS27028-12	...CAP, QUICK DISCONNEC.....FKD	2
69	PAOZZ	4030001455721	96906	MS51844-64	...SWAGING SLEEVE, WIRE.....FKD	4
70	MOOZZ		09647	120-02598-2	...CABLE CUT TO LENGTH FROM FKD	2
					BULK, P/N 13229E1147-1.....	

END OF FIGURE

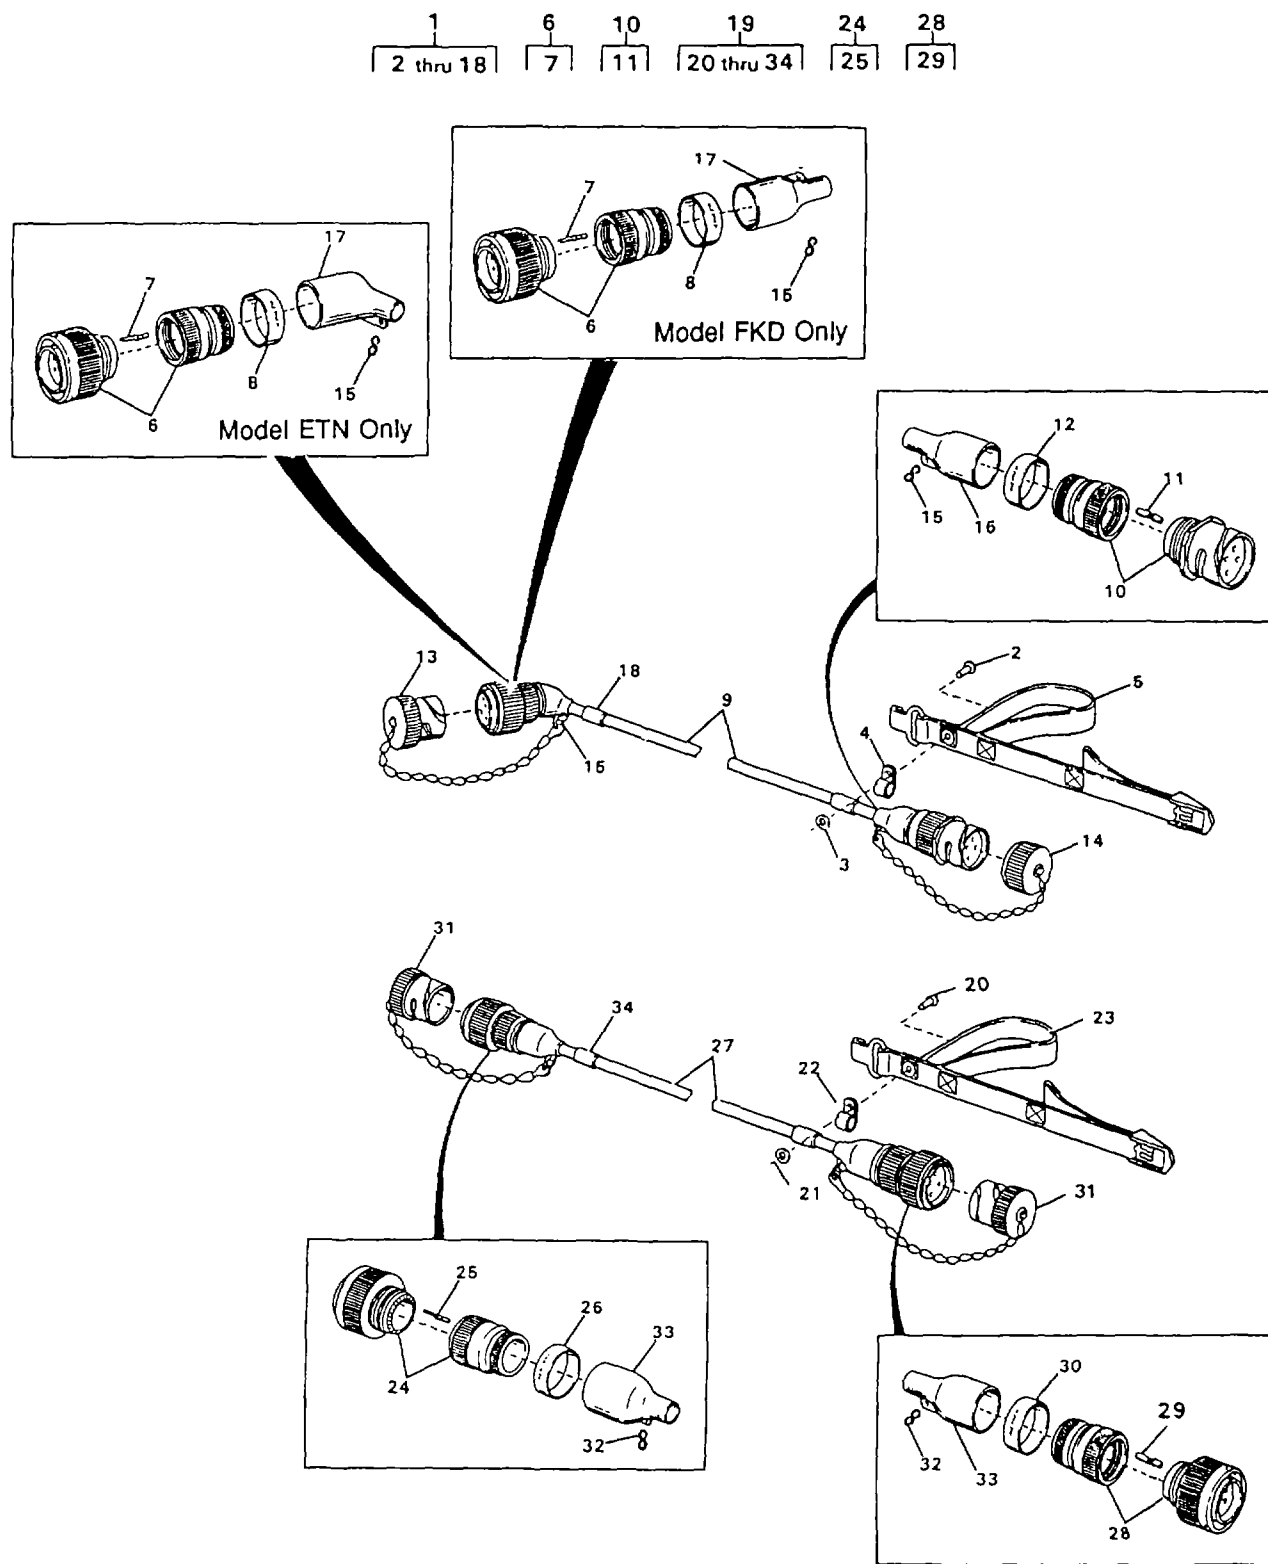 


FIGURE 2. RAW WATER PUMP CABLES

SECTION II

TM 10-4610-232-24P

(1) ITEM NO	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODES (UOC)	(7) QTY
GROUP 01 RAW WATER SYSTEM FIG. 2 RAW WATER PUMP CABLES						
1	PAFFF	6150013455613	97403	13229E1262-4	.CABLE ASSEMBLY,POWE W57.....	1
2	PAOZZ	5320013490932	97403	13229E0350-2	..RIVET,BLIND.....	1
3	PAOZZ	5310006191148	96906	MS15765-842	..WASHER,FLAT.....	1
3	PAOZZ	5310006191148	96906	MS15795-808	..WASHER,FLAT.....FKD	1
4	PAOZZ	5340011387808	96906	MS21919WCF12	..CLAMP,LOOP.....FKD	1
5	PAOZZ	5340013506801	97403	13229E1000-2	..STRAP,WEBBING.....	1
6	PAFFF	5935013500159	17549	CA3106E20-4P-B-0 2-57	..CONNECTOR,PLUG,ELEC P57.....	1
7	PAFZZ	5999013448759	71468	030-8588-000	...CONTACT,ELECTRICAL PART OF KIT P/N 120-02593-P.....	4
8	XDFZZ		09647	120-02433-132	..MARKER.....	1
9	MFFZZ		09647	120-07639-2	..CABLE,POWER CUT TO LENGTH FROM BULK, P/N 13229E0741-2.....	1
10	PAFFF	5935013500166	17549	CA3101E20-4S-B-0 2-57	..CONNECTOR,RECEPTACL J58.....	1
11	PAFZZ	5999011588887	71468	031-8556-000	...CONTACT,ELECTRICAL PART OF KIT P/N 120-02593-P.....	4
12	XDFZZ		09647	120-02433-182	..MARKER.....	1
13	PAOZZ	5935013571806	97403	13229E1210-2	..COVER,ELECTRICAL CO.....	1
14	PAOZZ	5935013571807	97403	13229E1209-2	..COVER,ELECTRICAL CO.....	1
15	PAOZZ	4030010225666	51489	700016	..HOOK,CHAIN,S.....	2
16	PAFZZ	5970012268102	06090	202K163-3/42	..INSULATION SLEEVING.....	1
17	PAFZZ	5970013487360	97403	13229E1344-2	..INSULATION SLEEVING.....	1
18	XDFZZ		09647	120-02433-64	..MARKER.....	2
19	PAFFF	6150013455614	97403	13229E1262-5	.CABLE ASSEMBLY,POWE W58.....	1
20	PAOZZ	5320013490932	97403	13229E0350-2	..RIVET,BLIND.....	1
21	PAOZZ	5905013924321	96906	MS15765-842	..RESISTOR,FIXED,WIR.....ETN	1
21	PAOZZ	5310006191148	96906	MS15795-808	..WASHER,FLAT.....FKD	1
22	PAOZZ	5340011387808	96906	MS21919WCF12	..CLAMP,LOOP.....	1
23	PAOZZ	5340013506801	97403	13229E1000-2	..STRAP,WEBBING.....	1
24	PAFFF	5935013500159	17549	CA3106E20-4P-B-0 2-57	..CONNECTOR,PLUG,ELEC P58.....	1
25	PAFZZ	5999013448759	71468	030-8588-000	...CONTACT,ELECTRICAL PART OF KIT P/N 120-02593-P.....	4
26	XDFZZ		09647	120-02433-133	..MARKER.....	1
27	MFFZZ		09647	120-07639-2	..CABLE,POWER CUT TO LENGTH FROM BULK, P/N 13229E0741-2.....	1
28	PAFFF	5935013500160	17549	CA3106E20-4S-B-0 2-57.....	..CONNECTOR P59	1
29	PAFZZ	5999013438909	71468	031-8557-000	...CONTACT,ELECTRICAL PART OF KIT P/N 120-02593-P.....	4
30	XDFZZ		09647	120-02433-134	..MARKER.....	1
31	PAOZZ	5935013571806	97403	13229E1210-2	..COVER,ELECTRICAL CO.....	2
32	PAOZZ	4030010225666	51489	700016	..HOOK,CHAIN,S.....	2
33	PAFZZ	5970012268102	06090	202K163-3/42	..INSULATION SLEEVING.....	2
34	XDFZZ		09647	120-02433-65	..MARKER.....	2

END OF FIGURE