

TECHNICAL MANUAL
UNIT, INTERMEDIATE DIRECT SUPPORT,
AND
INTERMEDIATE GENERAL SUPPORT
REPAIR PARTS AND SPECIAL TOOLS LIST

WATER PURIFICATION UNIT
REVERSE OSMOSIS, 600-GPH
TRAILER MOUNTED, FLATBED CARGO,
5-TON, 4 WHEEL TANDEM
MODEL 0996109001
(NSN 4610-01-234-2196)
AND SKID-MOUNTED
MODEL 0996108001
(NSN 4610-01-234-2190)

Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-4610-215-24P/2/TM 08580A-24P/2, dated 22 August 1990.

HEADQUARTERS, DEPARTMENT OF THE ARMY

4 MAY 1992

TECHNICAL MANUAL

NO. 10-4610-239-24P

HEADQUARTERS,
DEPARTMENT OF THE ARMY AND
HEADQUARTERS, U.S. MARINE CORPS
WASHINGTON, D C., 4 MAY 1992

**UNIT, INTERMEDIATE DIRECT SUPPORT, AND INTERMEDIATE GENERAL SUPPORT REPAIR PARTS
AND
SPECIAL TOOLS LIST**

**WATER PURIFICATION UNIT,
REVERSE OSMOSIS, 600-GPH
TRAILER-MOUNTED, FLATBED CARGO, 5TON, 4-WHEEL TANDEM
MODEL 0996109001
(NSN 4610-01-234-2196)**

AND

**SKID MOUNTED
MODEL 0996108001
(NSN 4610-01-234-2190)**

Current as of 31 July 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

Marine Corps users submit NAVMC 10772 Form to Commanding General, Marine Corps Logistics Base (Code 850) Albany. GA 31704-5000.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

		Listing Page	Illustration Figure
Section I	INTRODUCTION	1	
Section II	REPAIR PARTS LIST	1-1	
Group 00	Trailer-Mounted Reverse Osmosis Water Purification Unit, 600-GPH and Skid-Mounted Reverse Osmosis Water Purification Unit, 600 GPH	1-1	1

* This manual supersedes TM 5-4610-215-24P/2/TM 08580A-24P/2, dated 22 August 1990.

		Listing Page	Illustration Figure
Group 01	ROWPU Flatbed Cargo Trailer	2-1	2
	ROWPU Trailer Airbrake Installation	3-1	3
	ROWPU Trailer Airbrake Relay Valve Assembly	4-1	4
	ROWPU Trailer Electrical Installation	5-1	5
	ROWPU Trailer Wiring Harness Assembly	6-1	6
	ROWPU Trailer Power Cable Assembly	7-1	7
	ROWPU Trailer Suspension Assembly	8-1	8
	ROWPU Trailer Axle Assembly	9-1	9
	ROWPU Trailer Air Chamber Assembly	10-1	10
	ROWPU Trailer Service Brake Assembly	11-1	11
Group 02	Trailer-Mounted ROWPU Assembly, 600-GPH and Skid-Mounted ROWPU Assembly, 600-GPH	12-1	12
	Trailer-Mounted Piping Installation and Skid-Mounted Piping Installation	13-1	13
	Vent Vessels Gate Valve Assembly	14-1	14
	Backwash Three-Way Ball Valve Assembly	15-1	15
	Product Water Flowmeter Assembly	16-1	16
	Cartridge Filter Assembly	17-1	17
	Booster Pump Assembly	18-1	18
	Booster Pump Electric Motor Assembly	19-1	19
	Chemical Feed Metering Pump Assembly	20-1	20
	Chemical Feed Metering Pump Electric Motor Assembly	21-1	21
	Control Box Assembly	22-1	22
	Control Box Wiring Harness (W2)	23-1	23
	Control Box Wiring Harness (W1)	24-1	24
	Low-Pressure Switch Assembly	25-1	25
	Panel Light Assembly	26-1	26
	High-Pressure Switch Assembly	27-1	27
	Junction Box Assembly	28-1	28
	Junction Box Cover Assembly	29-1	29
	Size 3 Model J Motor Controller Assembly	30-1	30
	Size 00 Model J Motor Controller Assembly	31-1	31
	Size 00 Model J Motor Controller Assembly	32-1	32
	Size 0 Model J Motor Controller Assembly	33-1	33
	Size 1 Model J Motor Controller Assembly	34-1	34
	Generator Wiring Harness (W5)	35-1	35
	Wiring Harness (W6, W7, W8, W9, and W10)	36-1	36
	Junction Box Wiring Harness (W4)	37-1	37
	Junction Box Wiring Harness (W3)	38-1	38
	Junction Box Wiring Harness (W39)	39-1	39
	Reverse Osmosis Pump Assembly	40-1	40
	High-Pressure Pump Assembly	41-1	41
	High-Pressure Pump Electric Motor Assembly	42-1	42
	ROWPU Electrical Installation	43-1	43
	Reverse Osmosis Pump Cable Assembly (W41)	44-1	44
	Cable Assemblies (W46, W47, W48, W50, and W51)	45-1	45

		Listing	Illustration Figure
		Page	
	Junction Cable Box Assembly (W52).....	46-1	46
	Utility Receptable Cable Assembly (W40).....	47-1	47
	Cable Assemblies (W49, W53, W55, and W56).....	48-1	48
	Multimedia Filter Assembly.....	49-1	49
	Control Valve Assembly	50-1	50
	Diaphragm Valve Assembly	51-1	51
	Multimedia Filter Backwash Timer Assembly.....	52-1	52
	Reverse Osmosis Pressure Tube Assembly	53-1	53
	Trailer-Mounted Frame Assembly.....	54-1	54
Group 03	Distribution Pump and Frame Assembly	55-1	55
	Distribution Pump Assembly	56-1	56
	Distribution Pump Electric Motor Assembly	57-1	57
	Distribution Pump Cable Assembly (W45)	58-1	58
Group 04	Raw Water Pump and Frame Assembly	59-1	59
	Raw Water Pump Electric Motor Assembly.....	60-1	60
	Raw Water Pump Cable Assemblies (W43 and W44).....	61-1	61
Group 05	Backwash Pump and Frame Assembly.....	62-1	62
	Backwash Pump Electric Motor Assembly	63-1	63
	Backwash Pump Cable Assembly (W42)	64-1	64
	Reverse Osmosis Water Purification Unit Overpack Assembly.....	65-1	65
	Cover, 600-GPH reverse Osmosis Water Purification Unit	66-1	66
Group 06	Bulk Materials	Bulk-1	Bulk
Section III	Special Tools List	67-1	
Group 07	Special Tools	67-1	67
Section IV	Cross Reference Indexes.....	I-1	
	National Stock Number.....	I-1	
	Part Number Index	I-12	
	Figure and Item Number Index	I-57	

UNIT, INTERMEDIATE DIRECT SUPPORT AND INTERMEDIATE GENERAL SUPPORT REPAIR PARTS AND SPECIAL TOOLS LIST

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in functional groups in Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown in the associated illustration(s)/figure(s). (1)

 
b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

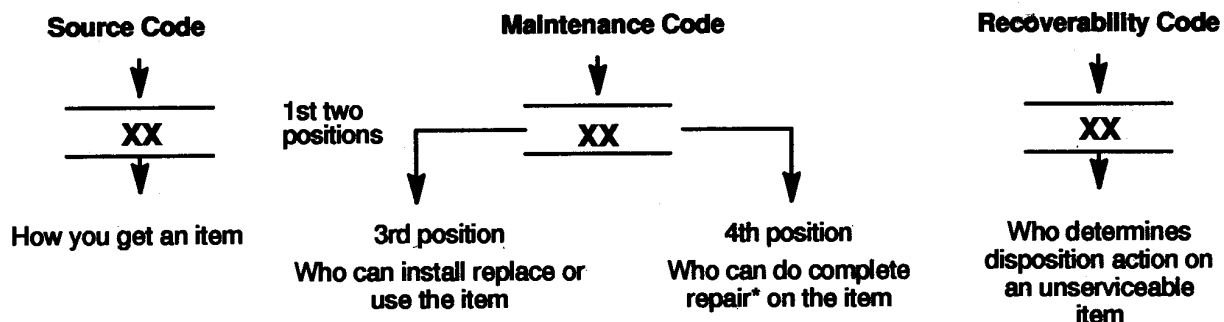

* Complete Rear: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how you get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow.

Code		Explanation
PA	}	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.
PB		
PC**		
PD		
PE		
PF		
PG		
		**NOTE: Items coded PC are subject to deterioration.
KD	}	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3 rd position of the SMR code. The complete kit must be requisitioned and applied.
KF		
KB		

EXPLANATION

MO (Made at org AVUM level)	}	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF (Made at DS/AVUM level)		
MH (Made at GS level)		
ML (Made at Specialized Repair Activity (SRA))		
MD (Made at Depot)		

EXPLANATION

AO (Assembled by org AVUM Level)	}	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code, authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
AF (Assembled by DS/AVUM Level)		
AH (Assembled by GS Category)		
AL (Assembled by SRA)		
AD (Assembled by Depot)		

Code	Explanation
------	-------------

- XA - Do not requisition an "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
- XB - If an "XB" item is not available from salvage, order it using the CAGE Code and part number given.
- XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
- XD - Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGE Code and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1

(2) Maintenance Code. Maintenance codes tell you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to the following levels of maintenance.

Code	Application/Explanation
C	Crew or operator maintenance done within unit/AVUM maintenance.
O	Organized or aviation unit category can remove, replace, and use the item.
F	Direct support or aviation unit intermediate level can remove, replace, and use the item.
H	General support level can remove, replace, and use the item.
L	Specialized repair activity can remove, replace, and use the item.
D	Depot can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions). NOTE: Some limited repair may be done on the item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes. This position will contain one of the following maintenance codes.

Code	Application/Explanation
O	Organizational or (aviation unit) is the lowest level that can do complete repair of the item.
F	Direct support or aviation intermediate is the lowest level that can do complete repair of the item.
H	General Support is the lowest level that can do complete repair of the item.
L	Specialized repair activity is the lowest level that can do complete repair of the item.
D	Depot is the lowest level that can do complete repair of the item.
Z	Nonreparable. No repair is authorized.
B	No repair is authorized. No parts or special tools are authorized for the maintenance of a "B" coded item. However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

(3) Recoverability Code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items . The recoverability code is entered in the fifth position of the SMR Code as follows:

**Recoverability
Codes**

Application/Explanation

Z - Nonreparable item . When unserviceable, condemn and dispose of the item at the level of maintenance shown in 3rd position of SMR Code.

O - Repairable item . When not economically repairable, condemn and dispose of the item at unit or AVUM level.

F - Repairable item . When uneconomically repairable, condemn and dispose of the item at the direct support or AVIM level.

H - Repairable item . When uneconomically repairable, condemn and dispose of the item at the general support level.

D - Repairable item . When beyond lower level repair capability, return to depot . Condemnation and disposal of item not authorized below depot level .

L - Repairable item . Condemnation and disposal not authorized below specialized repair activity (SRA).

A - Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material) . Refer to appropriate manuals/directives for specific instructions.

c. CAGEC (Column (3)) The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.

d. PART NUMBER (Column (4)) Indicates the primary number used by the manufacturer, (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the number listed.

e. DESCRIPTION AND USABLE ON CODE (UOC) (Column (5)). This column includes the following information:

(1) The Federal item name and, when required, a minimum description to identify the item.

(2) The physical security classification of the item is indicated by the parenthetical entry, e.g., Phy Sec C1 (C)-Confidential, Phy Sec C1 (S)-Secret, Phy Sec C1 (T)-Top-Secret.

(3) Items that are included in kits and sets are listed below the name of the kit or set.

(4) Spare/repair parts that make up an assembled item are listed immediately following the assembled item line entry.

(5) Part numbers of bulk materials are referenced in this column in the line entry for the item to be manufactured/fabricated.

(6) When the item is not used with all serial numbers of the same model, the effective serial numbers are shown on the last line(s) of the description (before UOC).

(7) The usable on code, when applicable (see reference paragraph 5, Special Information).

(8) In the Special Tools List Section, the basis of issue (BOI) appears as the last line(s) in the entry for each special tool, special TMDE, and other special support equipment. When density of equipments supported exceeds density spread indicated in the basis of issue, the total authorization is increased proportionately.

(9) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both Section II and Section III.

(10) The indenture, shown as dots appearing before the repair part, indicates that the item is a repair part of the next higher assembly.

f. QTY (Column (6)). The QTY (quantity per figure column) indicates the quantity of the item used in the breakout shown on the illustration/figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column instead of a quantity indicates that the quantity is variable and may vary from application to application.

4. EXPLANATION OF COLUMNS (Section IV).

a. NATIONAL STOCK NUMBER (NSN) INDEX.

(1) STOCK NUMBER Column. This column lists the NSN in national item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN, i.e.

	NSN
5305-01-574-1467	
	NIIN

When using this column to locate an item, ignore the first four digits of the NSN. Use the complete NSN (13 digits) when requisitioning items by stock number.

(2) FIG. Column. This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III.

(3) ITEM Column. The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.

b. PART NUMBER INDEX. Part numbers in this index are listed in ascending alphanumeric sequence (i.e., vertical arrangement of letter and number combinations which place the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9, and each following letter or digit in like order).

(1) **CAGEC Column.** The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.

(2) **PART NUMBER Column.** Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

(3) **STOCK NUMBER Column.** This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and CAGEC columns to the left.

(4) **FIG. column.** This column lists the number of the figure where the item is identified/located in Section II and Section III.

(5) **ITEM column.** The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

c. FIGURE AND ITEM NUMBER INDEX .

(1) **FIG. column.** This column lists the number of the figure where the item is identified/located in Section II and Section III.

(2) **ITEM column.** The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) **STOCK NUMBER Column.** This column lists the NSN for the item.

(4) **CAGEC column.** The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.

(5) **PART NUMBER column.** Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

5. SPECIAL INFORMATION.

a. USABLE ON CODE. The usable on code appears in the lower left corner of the Description column heading. Usable on codes are shown as "UOC:.." in the Description Column justified left) on the last line of the applicable item description/nomenclature. Uncoded items are applicable to all models.

b. ASSOCIATED PUBLICATIONS . The publications listed below pertain to the Pump Assembly and its components.

<u>Publication</u>	<u>Short Title</u>
TM 5-4610-215-10	Water Purification Unit, Reverse Osmosis, 600 GPH, Trailer Mounted and Skid Mounted
TM 5-4610-215-24/2	Water Purification Unit, Reverse Osmosis, 600 GPH, Trailer Mounted and Skid Mounted
LO 5-4610-215-12	Water Purification Unit, Reverse Osmosis, 600 GPH, Trailer Mounted and Skid Mounted

6. HOW TO LOCATE REPAIR PARTS.

a. When National Stock Numbers or Part Numbers are NOT Known.

(1) **First.** Using the table of contents, determine the assembly or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) **Second.** Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) **Third.** Identify the item on the figure and use the Figure and Item Number Index to find the NSN.

 
(4) **Fourth.** Refer to the Part Number Index to find the NSN, if assigned.

b. When National Stock Number or Part Number is Known.


(1) **First.** Using the of National Stock Number and Part Number Indexes find the pertinent National Stock Number or Part Number. The NSN index is in National Item Identification Number (NIIN) sequence (see c-4.a.(1)). The part numbers in the Part Number index are listed in ascending alphanumeric sequence (see paragraph c-4.b.). Both indexes cross-reference you to the illustration/figure and item number of the item you are looking for.

(2) **Second.** Turn to the figure and item number, verify that the item is the one you are looking for, then locate the item number in the repair parts list for the figure.

7. ABBREVIATIONS. Abbreviations used in this manual are listed in MIL-STD-12.

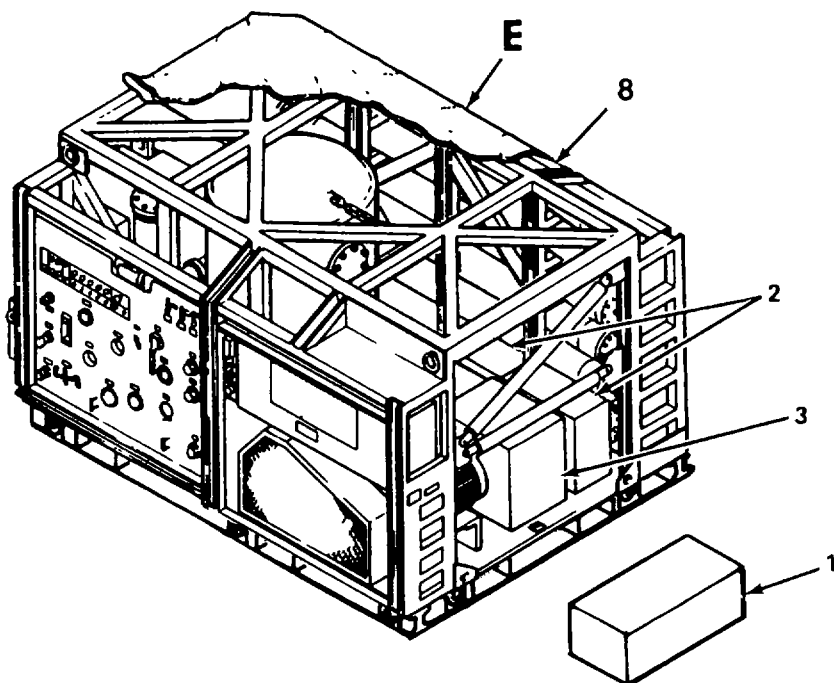

MARINE CORPS MODEL

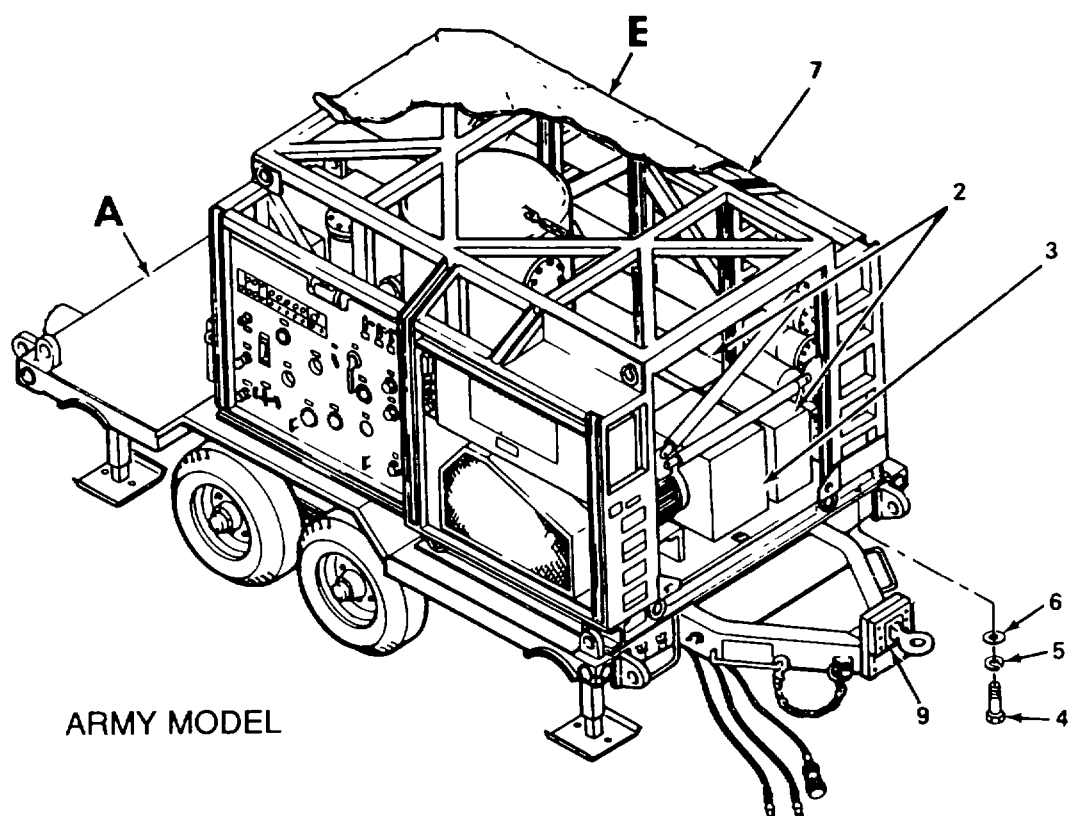 

ARMY MODEL

Figure 1. Trailer-Mounted Reverse Osmosis Water Purification Unit, 600-GPH and Skid-Mounted Reverse Osmosis Water Purification Unit, 600-GPH (Sheet 1 of 3).

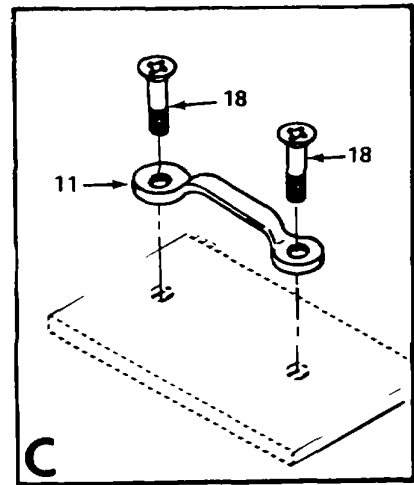 
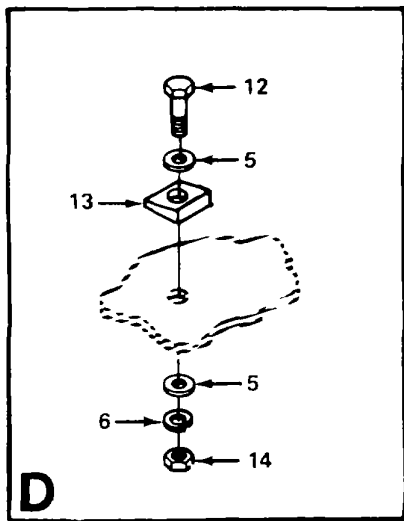 
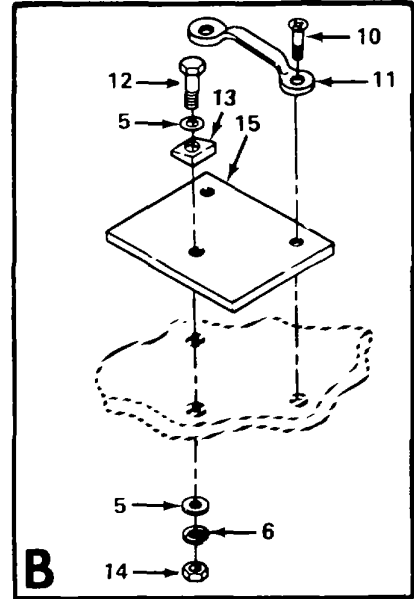 
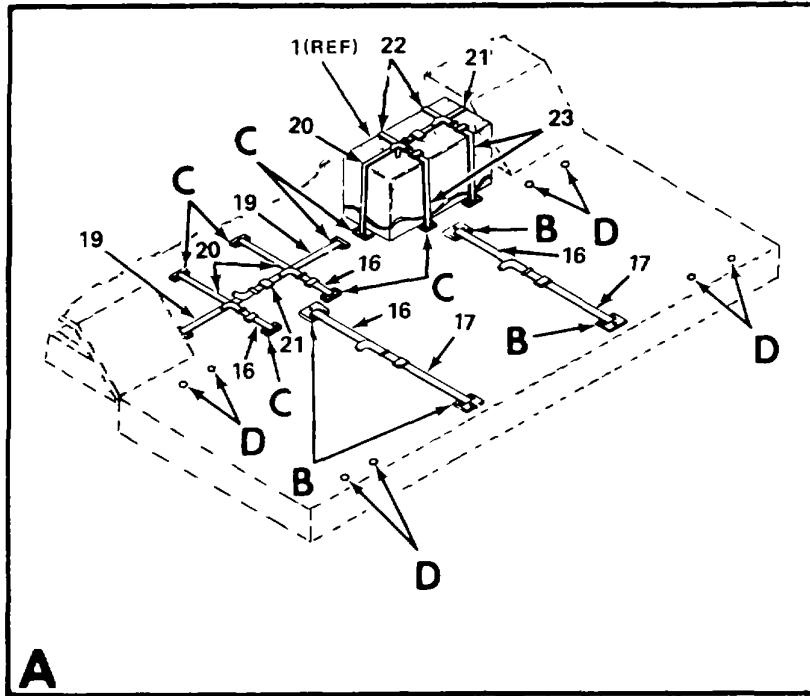 


Figure 1. Trailer-Mounted Reverse Osmosis Water Purification Unit, 600-GPH and Skid-Mounted Reverse Osmosis Water Purification Unit, 600-GPH (Sheet 2 of 3).

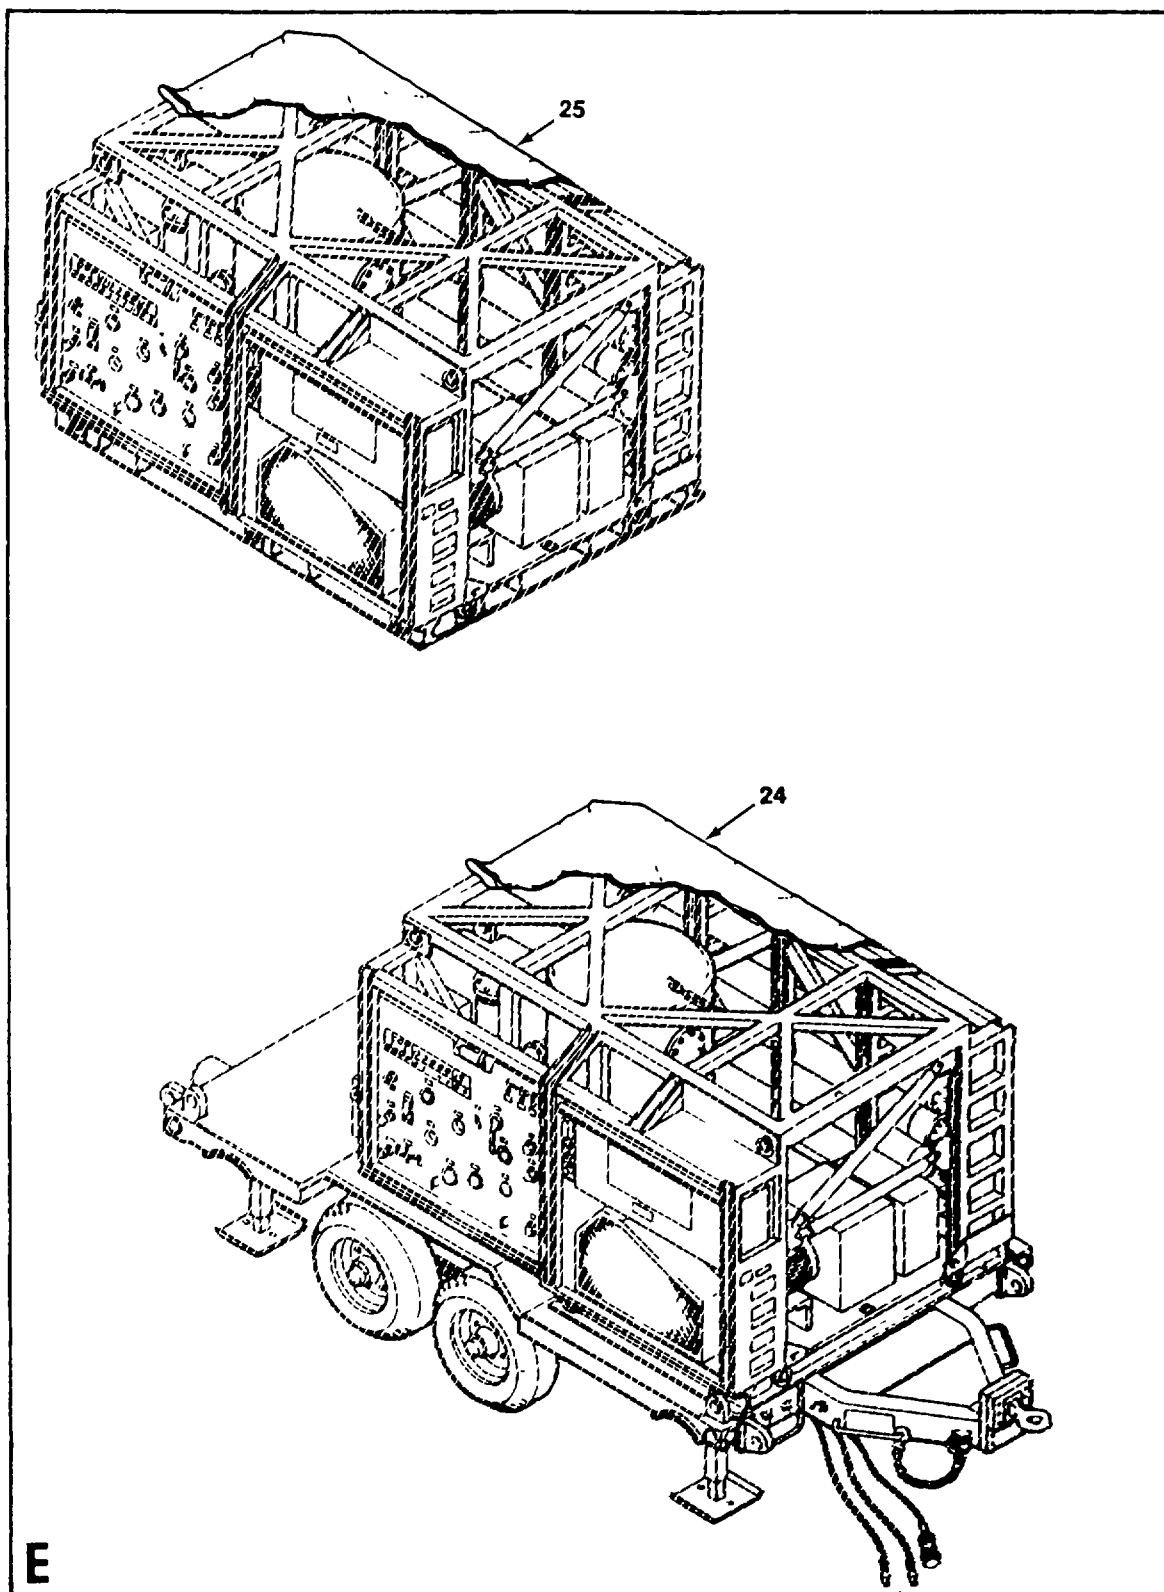 


Figure 1. Trailer-Mounted Reverse Osmosis Water Purification Unit, 600-GPH and Skid-Mounted Reverse Osmosis Water Purification Unit, 600-GPH (Sheet 3 of 3).